

Candy BCTD H7A1TE-S

Candy BCTD H7A1TE-S Built-in Heat Pump Dryer User Manual

MODEL: BCTD H7A1TE-S

Brand: Candy

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Candy BCTD H7A1TE-S built-in heat pump dryer. Please read these instructions carefully before installation and operation, and keep them for future reference. This appliance is designed to dry up to 7 kg of laundry and features advanced connectivity options.

2. SAFETY INFORMATION

- Ensure the appliance is correctly installed and grounded by a qualified technician.
- Do not allow children to play with or operate the dryer.
- Never dry items that have been soiled with flammable substances (e.g., cooking oil, gasoline).
- Clean the lint filter after every cycle to prevent fire hazards and maintain drying efficiency.
- Ensure adequate ventilation in the room where the dryer is installed.
- Do not block the air intake or exhaust vents of the dryer.
- Unplug the appliance before any cleaning or maintenance.
- Do not attempt to repair the appliance yourself. Contact authorized service personnel for repairs.

3. PRODUCT OVERVIEW

The Candy BCTD H7A1TE-S is a built-in heat pump dryer designed for efficiency and user convenience. Key features include a 7 kg capacity, 15+1 drying programs, a digital programmer, and Wi-Fi/Bluetooth connectivity for remote control via the Simply-Fi app.

Key Components and Features:

- Higher Door Opening:** Designed for ergonomic loading and unloading, reducing strain.

- **EasyCase Water Container:** An ergonomically designed compartment located in the door for easy removal and emptying of condensed water. This water can be reused for ironing or watering plants.
- **Super Easy Iron Function:** Utilizes a smart sensor to maintain optimal humidity and an alternating drum movement to reduce creases, significantly cutting down ironing time.
- **Heat Pump System:** Ensures low energy consumption by operating in a closed circuit at lower temperatures, preventing heat dispersion.
- **Connectivity (Wi-Fi & BLE):** Allows remote control, program selection, and diagnostics via the Candy Simply-Fi app on your smartphone.
- **Check-up Program:** Available through the Simply-Fi app, this program monitors the condition of filters, door lock, drying system, motor, cooling ventilation, and water collection system, providing alerts and solutions for detected errors.



Figure 1: Front view of the Candy BCTD H7A1TE-S built-in heat pump dryer, showing the control panel, door, and lower ventilation grille.



Figure 2: The Candy BCTD H7A1TE-S dryer seamlessly integrated into a kitchen cabinet, demonstrating its built-in design.



Figure 3: The dryer door opened, revealing the EasyCase water collection container integrated into the door, designed for easy removal.



Figure 4: Close-up view of the control panel, highlighting the program selector dial with various drying options and the 'hOn' connectivity button.



Figure 5: Detailed view of the digital display, showing indicators for drying progress, time remaining, and connectivity status.



Figure 6: Interior of the dryer drum, illustrating the design for efficient and gentle drying of laundry.

4. SETUP

4.1 Unpacking

Carefully remove the dryer from its packaging. Check for any transit damage. The package includes the dryer, a 5-liter water drawer (EasyCase), an electrical connection cable, and a drain hose.

4.2 Installation

This dryer is designed for built-in installation. Ensure the installation space meets the required dimensions for proper ventilation and operation. Refer to the diagram below for precise measurements.

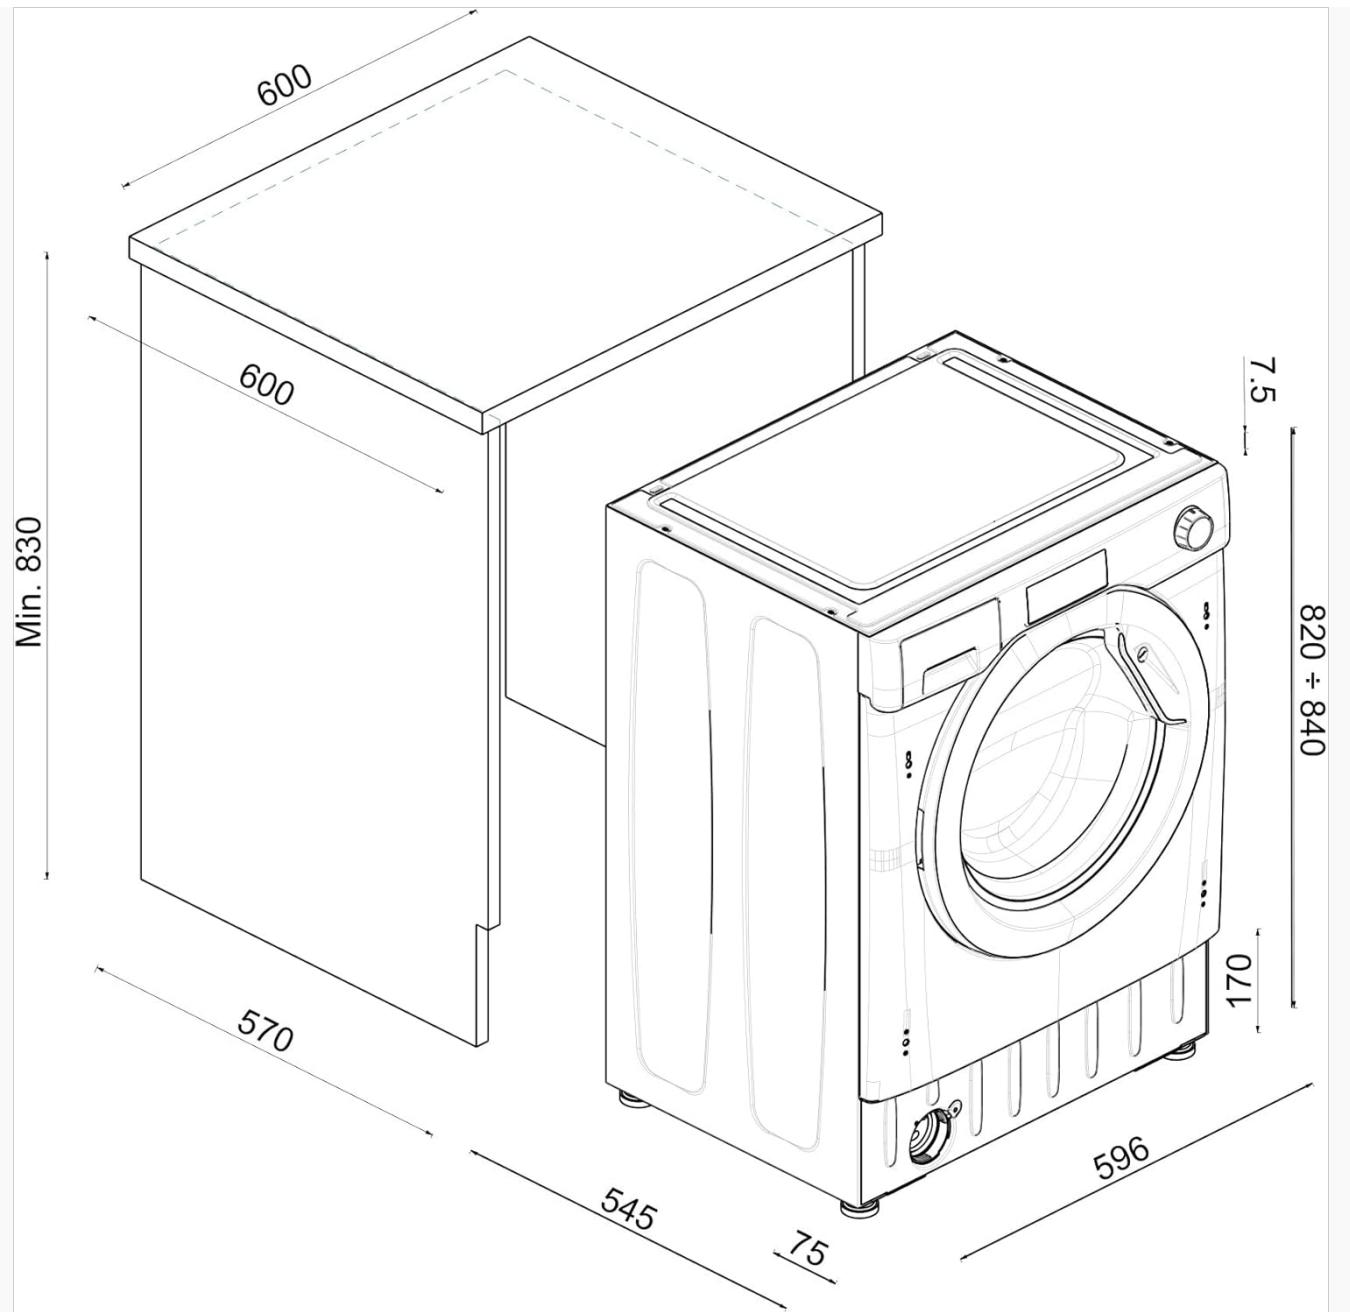


Figure 7: Installation diagram showing the dimensions for integrating the dryer into a cabinet. Dimensions are in millimeters.

- Place the dryer on a stable, level surface.
- Connect the electrical cable to a suitable power outlet.
- Decide whether to use the EasyCase water container or connect the drain hose for direct drainage. If using the drain hose, ensure it is properly secured to a suitable drain.

4.3 Initial Use

Before the first drying cycle, ensure all packaging materials are removed from the drum. It is recommended to run a short cycle with a damp cloth to clean the drum interior.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

- Ensure laundry is properly spun to remove excess water.
- Do not overload the dryer. The maximum capacity is 7 kg.

- Separate laundry by fabric type and desired dryness level.

5.2 Program Selection

Turn the program selector dial to choose one of the 15+1 available drying programs. The digital display will show the estimated drying time and program settings. Refer to the appliance's control panel (Figure 4) for program options.

5.3 Special Functions

- **Delayed Start:** Press the 'Delayed Start' button to postpone the start of the drying cycle by up to 24 hours. This allows you to take advantage of off-peak electricity tariffs.
- **Wool Program:** Select the dedicated wool program for delicate woolens. This program controls temperature and uses a special drum movement to prevent damage and knot formation.
- **Super Easy Iron:** Activate this function to reduce creases and wrinkles in your laundry, making ironing easier and faster.

5.4 Smart Connectivity (Wi-Fi & Bluetooth)

Download the Candy Simply-Fi app on your smartphone to connect to your dryer via Wi-Fi or Bluetooth. The app allows you to:

- Remotely start, pause, or stop drying cycles.
- Access additional programs and features.
- Monitor the drying progress.
- Receive notifications and diagnostic alerts.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

6.1 Cleaning the Lint Filter

The lint filter must be cleaned after every drying cycle. Pull out the filter, remove accumulated lint, and rinse under running water if necessary. Ensure it is completely dry before reinserting.

6.2 Emptying the EasyCase Water Container

If not using direct drainage, the EasyCase water container (Figure 3) must be emptied after each cycle. Pull out the container from the door, empty the water, and reinsert it securely.

6.3 General Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents. Periodically clean the condenser unit according to the instructions in the full user manual (available via the Simply-Fi app or Candy support website).

7. TROUBLESHOOTING

If you encounter issues with your dryer, consult the following common troubleshooting steps. For more detailed diagnostics, use the Check-up program via the Simply-Fi app.

- **Dryer not starting:** Ensure the power cable is securely plugged in, the door is fully closed, and a program is

selected.

- **Laundry not drying properly:** Check if the lint filter is clean and the water container is empty. Ensure the dryer is not overloaded and the correct program for the fabric type is selected.
- **Unusual noises:** Check for foreign objects in the drum. Ensure the dryer is level.
- **Error codes on display:** Refer to the Simply-Fi app's Check-up program for specific error code interpretations and recommended solutions.

If an error is detected by the Check-up program, the Simply-Fi app will alert you and provide guidance to resolve the issue. For persistent problems, contact customer support.

8. SPECIFICATIONS

Specification	Value
Brand	Candy
Model Name	BCTD H7A1TE-S
Product Type	Front-loading, Built-in Heat Pump Dryer
Capacity	7 Kilograms
Color	White
Material	Stainless Steel
Connections	Wi-Fi, Bluetooth
Special Features	Built-in heater (Heat Pump)
Product Dimensions (DxWxH)	10P x 10W x 10H millimeters (Refer to Figure 7 for detailed installation dimensions)
Item Weight	38.5 Kilograms
Energy Efficiency Class	F (as per 2023/2534 regulation)
Annual Energy Consumption	145 kWh/100 cycles (based on standard program)
Noise Level	67 dB
Compliant Specifications	Energy Star



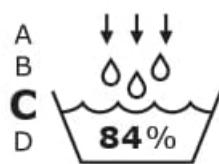
ENERG⁺

**Candy**

BCTD H7A1TE-S



145 kWh / 100

**7,0 kg****4:04**

2023/2534

Figure 8: EU Energy Label for the Candy BCTD H7A1TE-S dryer, indicating an 'F' energy efficiency class, 145 kWh/100 cycles, 67 dB noise level, and 7.0 kg capacity. For more details, scan the QR code or visit eprel.ec.europa.eu/qr/2155440.

9. WARRANTY AND SUPPORT

9.1 Manufacturer Warranty

The Candy BCTD H7A1TE-S dryer comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

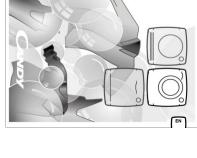
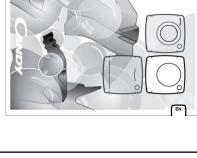
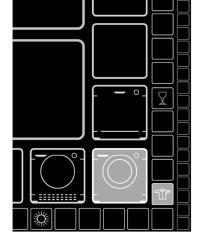
9.2 Customer Support

For technical assistance, troubleshooting, or to schedule a service appointment, please contact Candy customer support. You can also utilize the diagnostic features within the Candy Simply-Fi app for immediate assistance.

Additional resources and detailed manuals may be found on the official Candy service websites:

- <https://manuals.he.services>
- <https://go.he.services/>

Related Documents - BCTD H7A1TE-S

	<p>Candy CSOE C9TE-S Tumble Dryer User Manual and Instructions</p> <p>Comprehensive user manual for the Candy CSOE C9TE-S tumble dryer. This guide provides detailed information on safe operation, installation, maintenance, troubleshooting, programs, and technical specifications for your Candy appliance.</p>
	<p>Candy Washing Machine and Dryer User Manual</p> <p>Comprehensive user manual for Candy washing machines and dryers, covering installation, operation, maintenance, troubleshooting, and safety guidelines. Learn how to use your appliance efficiently and effectively.</p>
	<p>Candy Tumble Dryer User Manual and Operating Instructions</p> <p>Comprehensive user manual for Candy tumble dryers, covering safety instructions, installation, operation, maintenance, troubleshooting, and programme details. Includes guidance on energy saving and remote control features.</p>
	<p>Instrukcja obsługi pralki Candy</p> <p>Szczegółowa instrukcja obsługi dla pralki Candy, zawierająca informacje o instalacji, bezpiecznym użytkowaniu, programach, konserwacji i rozwiązywaniu problemów.</p>
	<p>Candy Pro Wash 400 Built-in Washer Dryer User Manual and Installation Guide</p> <p>Comprehensive guide for the Candy Pro Wash 400 built-in washer dryer, covering installation, operation, programs, maintenance, and troubleshooting. Learn how to use your appliance efficiently and effectively.</p>



[Manual de Instrucciones Candy Simply-Fi: Frigorífico y Congelador](#)

Manual completo de usuario para frigoríficos y congeladores Candy con tecnología Smart Touch y conectividad Wi-Fi. Incluye información de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y ahorro energético.