



[Manuals.plus](#) /

› [Hricane](#) /

› Hricane 61-Key Electronic Keyboard User Manual (Model HEP-669W)

Hricane HEP-669W

Hricane 61-Key Electronic Keyboard User Manual

Model: HEP-669W

1. INTRODUCTION

Thank you for choosing the Hricane 61-Key Electronic Keyboard. This manual provides essential information for the safe and effective use of your new instrument. Please read it thoroughly before operation and retain it for future reference. This electronic keyboard is designed for beginners and features various functions to support learning and musical exploration.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Hricane 61-Key Electronic Keyboard (x1)
- USB Cable (x1)
- Audio Line (x1)
- Microphone (x1)
- Music Sheet Stand (x1)
- Keyboard Note Sticker (x1)
- Product Instructions (x1)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Hricane electronic keyboard.

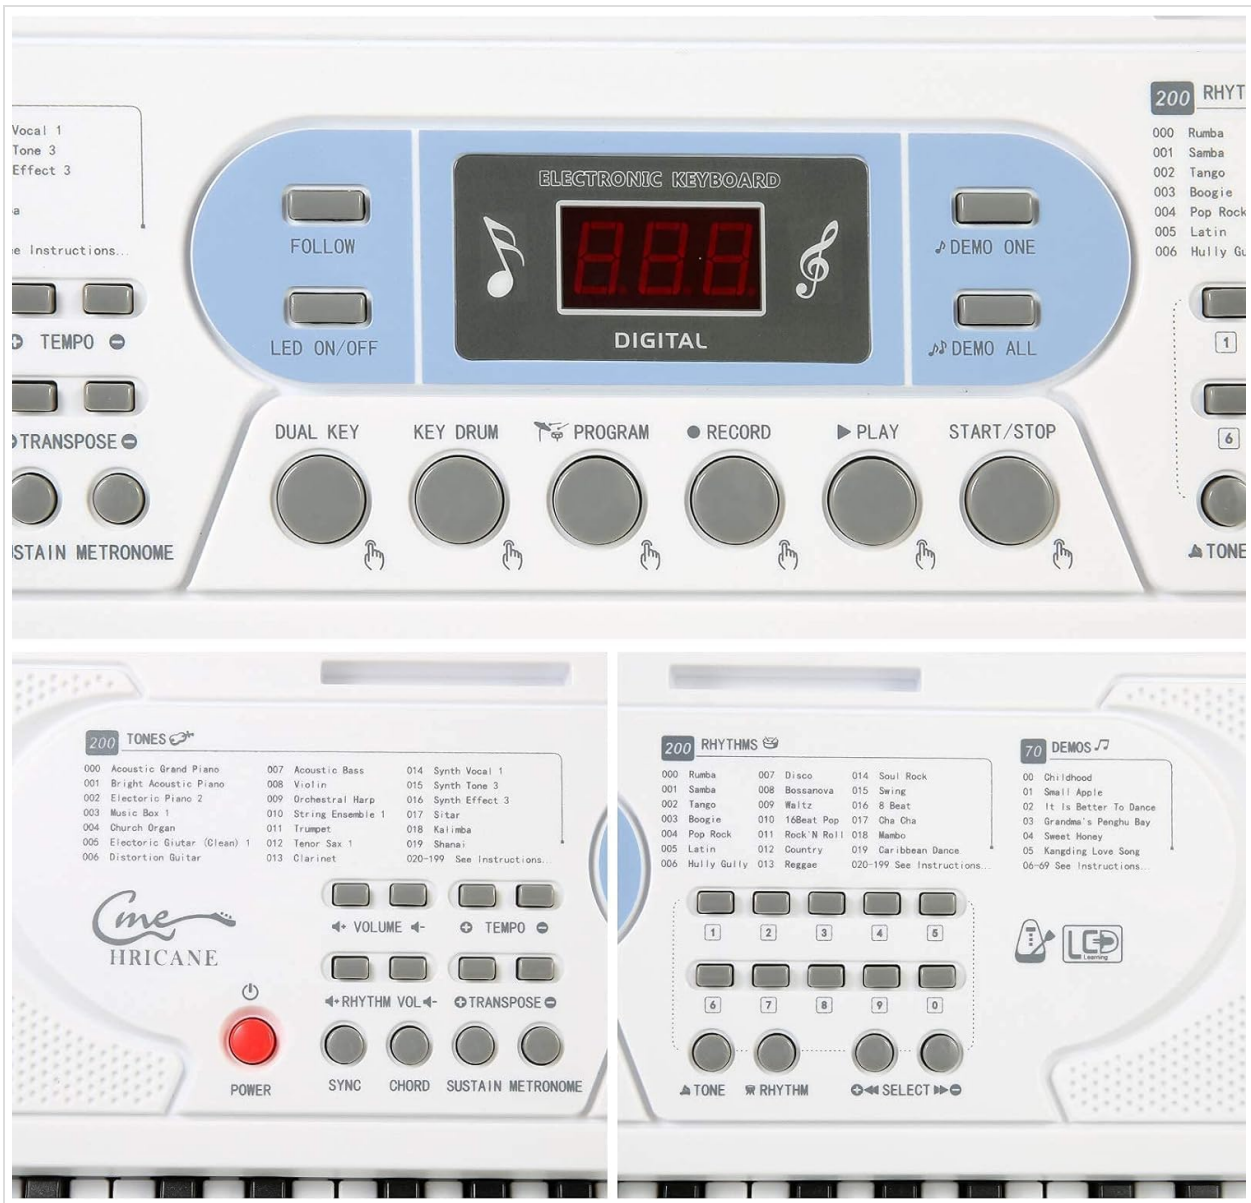


Figure 3.2: A detailed view of the keyboard's control panel, featuring the digital display, function buttons, and volume controls.

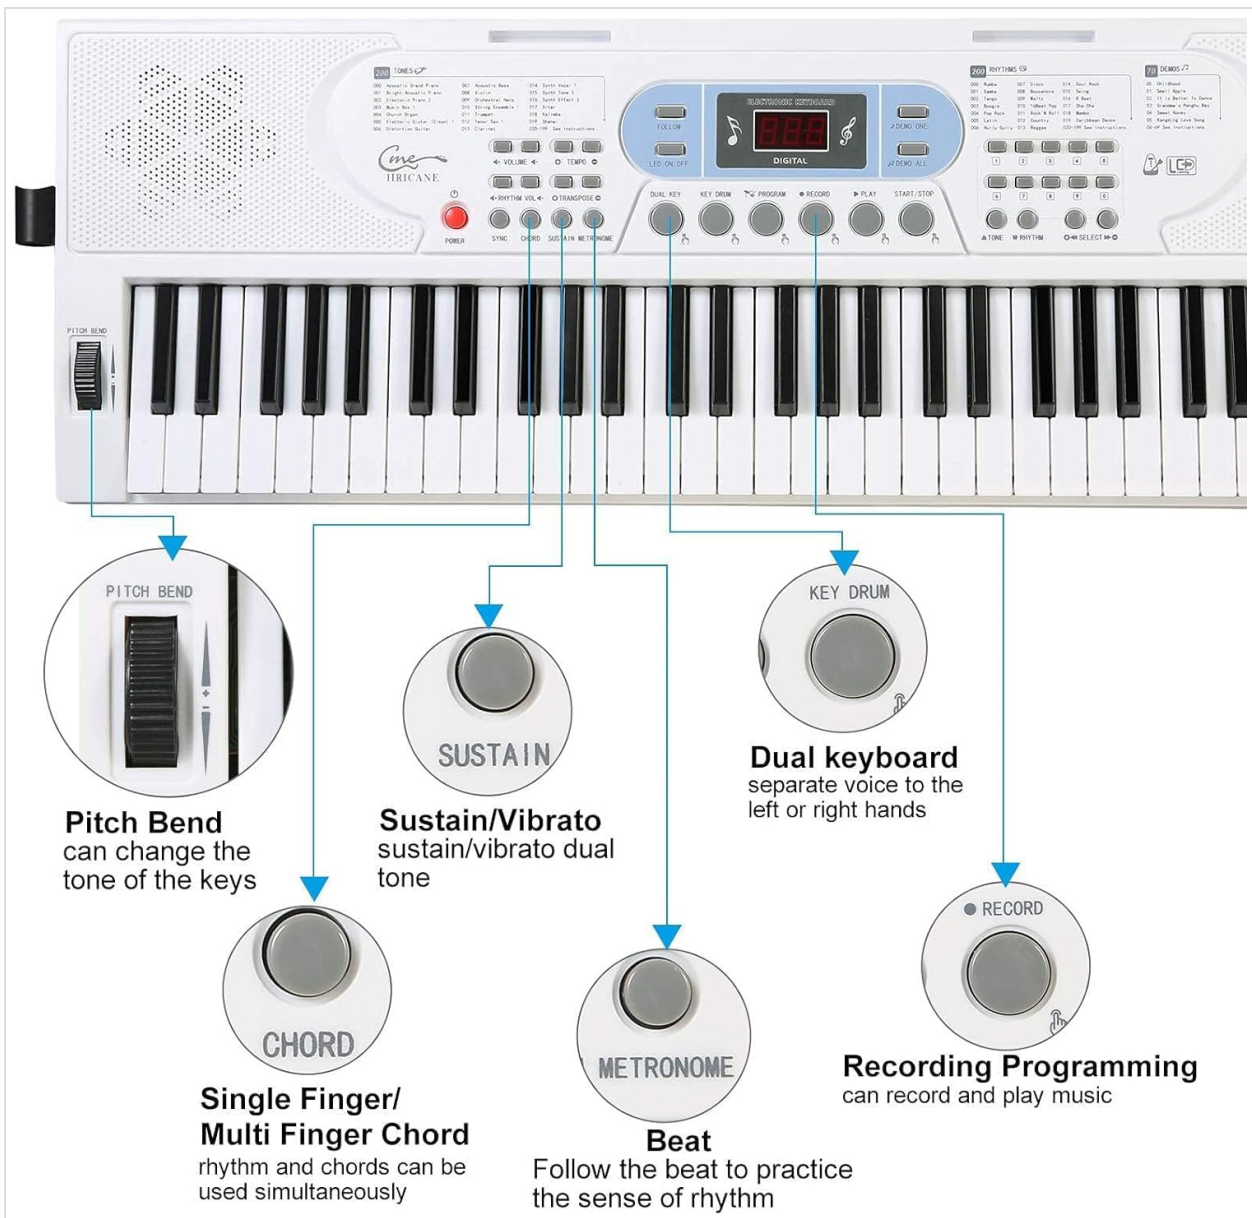


Figure 3.3: An annotated diagram highlighting various control functions such as Pitch Bend, Sustain, Dual Keyboard, Record, Metronome, and Chord.



Figure 3.4: This image displays the dimensions of the standard keys, indicating suitability for both adults and children.



Figure 3.5: The keyboard features dual speakers for clear audio output, as indicated by the sound wave graphic.



Figure 3.6: The included microphone connected to the side input of the electronic keyboard.

4. SETUP

1. **Music Stand Installation:** Insert the music sheet stand into the designated slot at the top rear of the keyboard. Ensure it is securely seated.
2. **Keyboard Note Sticker Application:** Carefully apply the provided note stickers to the keys as indicated on the sticker sheet. This can assist beginners in identifying notes.

3. **Microphone Connection:** Connect the microphone cable to the microphone input jack, typically located on the side or rear of the keyboard.

5. POWER SUPPLY

The Hricane 61-Key Electronic Keyboard offers two power supply methods:

- **USB Power Supply:** Connect the provided USB cable to the keyboard's power input and to a compatible USB power adapter (power supply included) or a USB port on a computer.
- **Battery Power:** For portable use, the keyboard can be powered by batteries (not included). Refer to the battery compartment for the correct battery type and insertion instructions. Ensure proper polarity.



Figure 5.1: Illustration of the two power supply methods: USB connection or batteries.

6. BASIC OPERATION

1. **Power On/Off:** Press the **POWER** button to turn the keyboard on or off.
2. **Volume Control:** Use the **VOLUME +/-** buttons or knob to adjust the overall sound level.
3. **Tempo Control:** Adjust the speed of rhythms and demo songs using the **TEMPO +/-** buttons.
4. **Transposing:** Use the **TRANSPOSE +/-** buttons to shift the pitch of the keyboard up or down in semitone steps.

7. ADVANCED FEATURES

7.1 Tones (Sounds)

The keyboard features 100 different instrument sounds. To select a tone:

1. Press the **TONE** button.

2. Use the number pad or **+/-** buttons to enter the desired tone number (e.g., 001 for Acoustic Grand Piano). The selected tone number will appear on the digital display.

7.2 Rhythms

Explore 100 built-in rhythms. To select and play a rhythm:

1. Press the **RHYTHM** button.
2. Use the number pad or **+/-** buttons to select a rhythm number.
3. Press **START/STOP** to begin or end the rhythm.
4. Adjust the rhythm volume with the **RHYTHM VOL +/-** buttons.

7.3 Demo Songs

The keyboard includes 10 demo songs. To play:

- Press **DEMO ONE** to play the current demo song.
- Press **DEMO ALL** to cycle through all demo songs.
- Press **START/STOP** to stop playback.

7.4 Recording and Playback

Record your performances and play them back:

1. Press the **RECORD** button to start recording. The record indicator will light up.
2. Play your desired melody.
3. Press **PLAY** to listen to your recorded performance.

7.5 Teaching Mode (Follow Mode)

This mode assists beginners by lighting up the keys to guide your playing.

1. Press the **FOLLOW** button to activate teaching mode.
2. The keys will light up, indicating which notes to play. Follow the lights to learn songs.
3. Press **LED ON/OFF** to toggle the key lights.

Teaching Mode (follow mode)

follow along as keys light up in teaching mode and play your way to proficiency.



Figure 7.5.1: The keyboard displaying lighted keys in teaching mode, guiding the user on which notes to play.



Figure 7.5.2: A user's hands positioned over the lighted keys, demonstrating interaction with the teaching mode.

7.6 Other Functions

- **Dual Key:** Divides the keyboard into two sections, allowing two players to play simultaneously or for different instrument sounds in each section.
- **Key Drum:** Assigns drum sounds to individual keys.
- **Chord:** Enables single-finger or multi-finger chord playing, automatically generating chords based on root notes.
- **Sustain/Vibrato:** Adds sustain (prolonged sound) or vibrato (pitch modulation) effects to notes.
- **Metronome:** Provides a steady beat for practice. Press the **METRONOME** button to activate/deactivate.
- **Pitch Bend:** Use the pitch bend wheel (typically on the left side) to smoothly vary the pitch of notes.

8. MAINTENANCE

- **Cleaning:** Wipe the keyboard with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Handle the instrument with care to prevent damage. Avoid dropping or subjecting it to strong impacts.

9. TROUBLESHOOTING

If you encounter issues with your Hricane electronic keyboard, refer to the following common problems and solutions:

- **No Sound:**
 - Ensure the keyboard is powered on.

- Check the volume level and increase if necessary.
- If using headphones, ensure they are fully plugged in and not faulty.
- If using battery power, check if batteries are correctly inserted and have sufficient charge.

- **Keys Not Responding:**

- Ensure the keyboard is powered on.
- Restart the keyboard by turning it off and on again.

- **Distorted Sound:**

- Lower the volume.
- Check the audio line connection if external speakers are used.

If the problem persists, please contact customer service.

10. SPECIFICATIONS

Model Name	HEP-669W
Brand	Hricane
Number of Keys	61
Instrument Type	Piano
Connectivity Technology	Auxiliary
Power Source	Battery Powered, USB
Headphone Jack	3.5mm Jack
Material Type	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	80 x 26.47 x 7.6 cm
Item Weight	2.74 Kilograms
Skill Level	Beginner
Age Range (Description)	3 years and up
Special Features	2 power supply methods, Easy to use and portable, Multifunctional, With microphone, note sticker, music stand

11. WARRANTY AND SUPPORT

Hricane offers a **30-day full refund policy** and a **12-month warranty** with friendly customer service for this product. For any inquiries, technical support, or warranty claims, please contact Hricane customer service through your purchase platform or the official Hricane website.

