

## PAXCESS Xwasher-P1.1

# PAXCESS Portable Pressure Car Washer Instruction Manual

Model: Xwasher-P1.1

## 1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your PAXCESS Portable Pressure Car Washer. This electric power washer is designed for powerful cleaning of various surfaces, including cars, siding, decks, patio furniture, and driveways. Please read this manual thoroughly before initial use and keep it for future reference.

## 2. SAFETY INFORMATION


Your safety is paramount. Always follow these guidelines:

- **GFCI Protection:** The unit is equipped with a GFCI plug to prevent electric shock. Ensure it is always used with a properly grounded outlet.
- **Total Stop System (TSS):** The motor automatically shuts off when the trigger is released, preserving pump lifespan and motor resources.
- **Safety Lock:** Utilize the safety lock on the spray gun to prevent accidental triggering, especially around children.
- Always wear appropriate personal protective equipment (PPE), including eye protection, during operation.
- Do not direct the water spray at people, pets, or electrical devices.
- Ensure all connections are secure before operating to prevent leaks and maintain pressure.

# Safe Design, Safer For You

## GFCI Protection

Prevent electric shock and make it safer

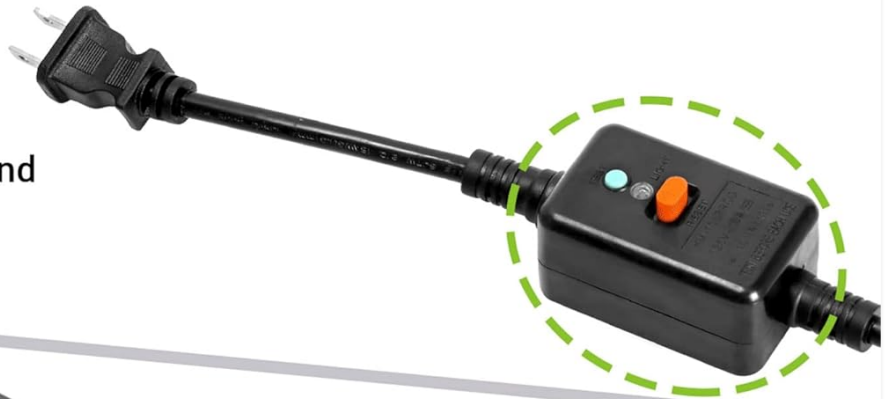

## Total Stop System

Motor will stop automatically when releasing the spray gun

## Safety Lock

Prevent kids from accidentally triggering the spray gun.



Image: Key safety features including GFCI protection, Total Stop System, and a safety lock on the spray gun.

### 3. PACKAGE CONTENTS

Verify all components are present upon unboxing:

- PAXCESS Pressure Washer Unit
- High-Pressure Hose (16.5 feet)
- Spray Gun with Adjustable Nozzle
- Foam Cannon/Detergent Bottle
- Power Cord with GFCI Plug
- User Manual (this document)



Image: The main pressure washer unit along with its included accessories: spray gun, adjustable nozzle, foam cannon, and high-pressure hose.

## 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your pressure washer:

1. **Attach the Handle:** Secure the top handle to the main unit using the provided screws.
2. **Connect High-Pressure Hose:** Screw the high-pressure hose securely to the outlet on the front of the pressure washer unit.
3. **Assemble Spray Gun:** Attach the adjustable nozzle or foam cannon to the spray gun. Then, connect the high-pressure hose to the spray gun.
4. **Water Inlet Connection:** Connect your garden hose to the water inlet on the pressure washer. Ensure a tight seal to prevent leaks. The unit supports two ways of water inlet: direct hose connection or drawing water from a bucket (requires priming).



5. **Power Connection:** Plug the GFCI power cord into a grounded electrical outlet.



Image: Illustration showing two methods for water intake: direct connection to a garden hose and drawing water from a bucket.

## 5. OPERATING INSTRUCTIONS

---

Before starting, ensure all connections are secure and the water supply is turned on fully.

1. **Turn On Water Supply:** Open the water faucet completely to allow water to flow to the pressure washer.
2. **Purge Air:** Squeeze the trigger on the spray gun to release any air trapped in the system until a steady stream of water emerges.
3. **Power On:** Turn the ON/OFF switch on the unit to the "ON" position. The motor will start.
4. **Adjust Nozzle:** Rotate the adjustable nozzle to select your desired spray pattern: narrow stream, wide fan, or foam mode (when using the foam cannon).



5. **Begin Cleaning:** Squeeze the trigger to start the high-pressure spray. Release the trigger to activate the Total Stop System.

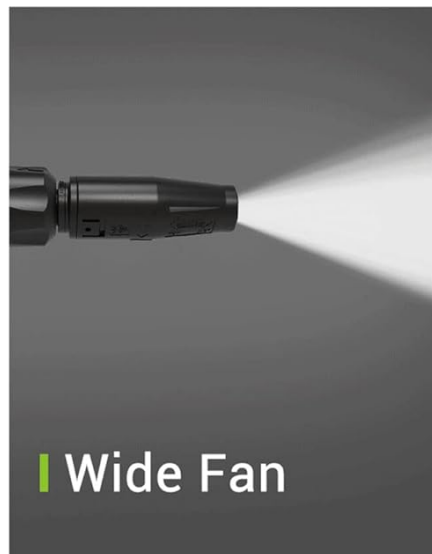
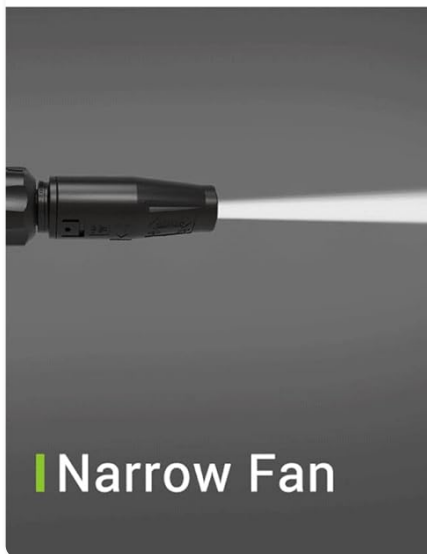


Image: Visual representation of the adjustable nozzle, showing how to switch between narrow fan, wide fan, and foam spray patterns by rotating the nozzle.

## 6. MAINTENANCE

Proper maintenance ensures longevity and optimal performance:

- **After Each Use:**
  - Turn off the power and water supply.
  - Squeeze the spray gun trigger to release any remaining pressure.
  - Disconnect hoses and drain all water from the unit and accessories.

- **Nozzle Cleaning:** If the nozzle becomes clogged, use the provided cleaning tool to clear any debris.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Do not store the unit with water in the pump if temperatures are below freezing.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in; GFCI tripped; No power at outlet	Check power connection; Reset GFCI; Check circuit breaker
Low pressure	Water supply off; Kinked hose; Clogged nozzle; Air in pump	Turn on water; Straighten hose; Clean nozzle; Purge air from system
Water leaks	Loose connections; Damaged O-rings	Tighten connections; Replace O-rings

## 8. SPECIFICATIONS

- **Brand:** PAXCESS
- **Model:** Xwasher-P1.1
- **Power Source:** Corded Electric
- **Maximum Pressure:** 1750 PSI
- **Maximum Flow Rate:** 1.6 Gallons Per Minute (GPM)
- **Hose Length:** 16.5 Feet
- **Power Cord Length:** 16.7 Feet
- **Item Weight:** 14.3 Pounds
- **Product Dimensions:** 10.6"L x 8.6"W x 16.9"H

## 9. WARRANTY AND SUPPORT

PAXCESS offers a **12-month warranty** for this high-pressure washer. For any questions, concerns, or professional repair service, please contact our customer support team. We are committed to providing 24-hour sales service and ensuring your satisfaction.

Refer to your warranty card or the product packaging for specific contact details.

