

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TOTO](#) /

› [TOTO SW3084#01 WASHLET C5 Electronic Bidet Toilet Seat with PREMIST and EWATER+ Wand Cleaning, Elongated, Cotton White Cotton White C5 Elongated](#)

## TOTO SW3084#01

# TOTO WASHLET C5 Electronic Bidet Toilet Seat User Manual

Model: SW3084#01 | Brand: TOTO

### PRODUCT OVERVIEW

The TOTO SW3084#01 WASHLET C5 Electronic Bidet Toilet Seat offers advanced personal hygiene and comfort. It features PREMIST technology for bowl cleaning, EWATER+ for wand self-cleaning, a heated seat, warm air dryer, and a remote control with two user presets. The dual-action spray provides oscillating and pulsating settings for a comprehensive cleansing experience. Designed for easy installation, this bidet seat integrates seamlessly into your bathroom.



Image: The TOTO WASHLET C5 Electronic Bidet Toilet Seat in Cotton White, shown with its remote control.

## KEY FEATURES

- **Refreshing Clean:** Gentle yet powerful water spray with adjustable warm water and pressure settings. Dual-action spray with oscillating option.
- **Luxurious Comfort:** SoftClose heated bidet seat for consistent warmth. Air deodorizer with powerful air filters. Adjustable warm air dryer.
- **Advanced Hygiene:** PREMIST mists the toilet bowl before each use to prevent waste from sticking. EWATER+ self-cleans the wand inside and out.
- **Personalized Control:** Convenient remote control for customized water cleansing settings. Includes 2 user memory settings for quick access.

- **Easy Installation:** Designed for do-it-yourself installation with included hardware.



Image: Visual representation of key features including heated seat, warm air dryer, deodorizer, and refreshing cleansing spray.



Image: Illustration of SoftClose seat, self-cleaning wand with EWATER+, remote control, and PREMIST function.

## SETUP AND INSTALLATION

Before beginning installation, ensure you have all necessary parts and tools. A 120V GFCI outlet is required within reach of the bidet's power cord. Refer to the detailed installation manual (PDF) for comprehensive instructions.

### Installation Steps Overview:

1. Remove the old toilet seat and clean the mounting area.
2. Install the WASHLET seat mounting bracket onto the toilet bowl.
3. Attach the WASHLET unit to the installed bracket.
4. Connect the water supply using the provided tee connector.
5. Plug the unit into a GFCI outlet.

**WARM** WATER  
**SEAT**  
**DRYER**

**CLEAN** WAND  
**PREMIST**  
**DEODORIZER**

**WASH** REAR  
**FRONT**  
**AERATED**



Image: Visual guide to the four main installation steps for the WASHLET C5.



Image: Close-up of the newly redesigned tee connector, highlighting its features for easier, trouble-free installation.

### Installation Video Guide:

Your browser does not support the video tag.

Video: A detailed installation guide for the TOTO WASHLET. This video provides step-by-step visual instructions for setting up your bidet seat.

Your browser does not support the video tag.

Video: BILT Install Demo - This video demonstrates the installation process using the BILT interactive instructions app, showing a 3D step-by-step guide.

## OPERATING INSTRUCTIONS

The WASHLET C5 offers various cleansing modes and customizable settings for optimal comfort and hygiene. All functions are controlled via the intuitive remote control.

### Remote Control Functions:



Image: Detailed layout of the remote control showing buttons for Stop, Rear/Soft Rear, Front, Dryer, Oscillating, Pulsating, Pressure, Position, and User presets.

- **Stop:** Stops washing or drying.
- **Rear/Soft Rear:** Cleansing stream; press to toggle between soft stream or added pressure.
- **Front:** Soft stream for delicate areas.
- **Dryer:** Blows warm air to aid drying.
- **Oscillating:** The wand moves back and forth for wider coverage.
- **Pulsating:** Varies the water pressure for a massaging effect.
- **Pressure:** Adjusts the water pressure of the stream from the wand.
- **Position:** Adjusts the position of the wand forward or backward.
- **User:** 2-user personal memory settings for quick access to preferred configurations.

### Cleansing Modes:

## TOUCH ACTIVATED REMOTE CONTROL

Easy and Convenient to Use

WASHLET® C5 Model

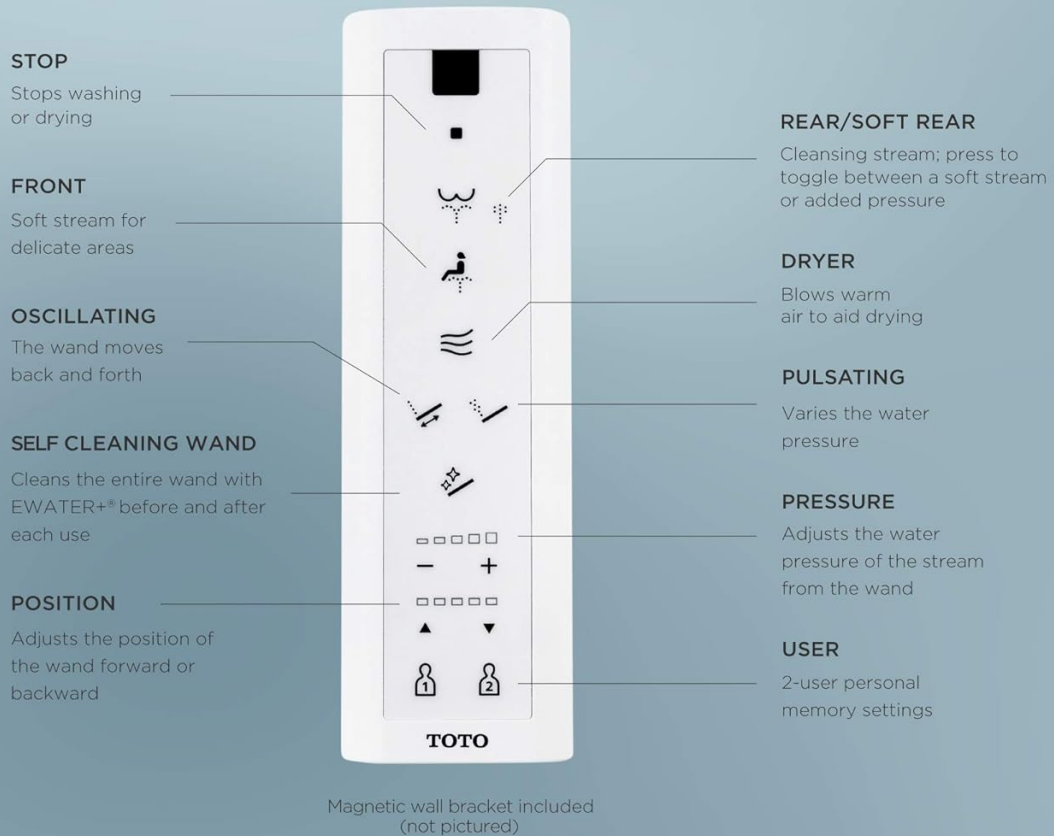


Image: Various water spray options including Rear Spray for effective cleansing, Soft Rear for gentle rinsing, Front Spray for delicate areas, Oscillating Spray for wider coverage, and an Adjustable Wand to find the perfect position.

### Operating Video Guides:

Your browser does not support the video tag.

Video: TOTO WASHLET C5 Electronic Bidet Seat Features - This video highlights the main features and benefits of the bidet seat in action.

Your browser does not support the video tag.

Video: Join the Clean Revolution - A short promotional video showcasing the refreshing experience of using a WASHLET.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your WASHLET C5. The unit is designed with self-cleaning features and easy-to-clean materials.

- **Self-Cleaning Wand:** The wand automatically cleans itself with EWATER+ before and after each use.
- **Clean Resin:** The toilet seat is made with innovative CLEAN RESIN material that repels liquids, making cleaning easier.

- **Wand Door:** A protective door conceals the wand when not in use, preventing debris accumulation.
- **Quick Release:** Effortless removal of the seat for simplified cleaning at the touch of a button.

## ADJUSTABLE WATER SPRAY & PRESSURE

For a better clean



### REAR SPRAY

Effective rear cleansing




### SOFT REAR

Gentle rear rinsing



### FRONT SPRAY

Soft stream for delicate areas

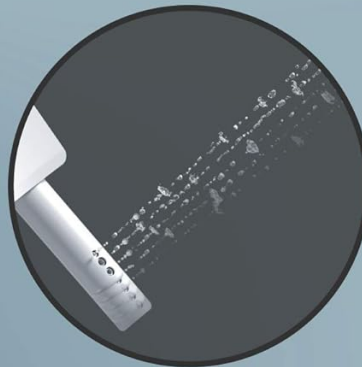

### OSCILLATING SPRAY

Wand moves back and forth



### ADJUSTABLE WAND

Find the perfect position

Image: Illustration of the self-cleaning wand, showing how EWATER+ converts tap water into a cleansing agent for the wand.



Image: Comparison of conventional material versus CLEAN RESIN, demonstrating how the latter repels liquids for more efficient cleaning.



Image: Close-up of the wand door, which conceals the wand when not in use to prevent unwanted debris.



Image: Demonstration of the quick release button, allowing for effortless removal of the seat for simplified cleaning.

## TROUBLESHOOTING

If you encounter any issues with your TOTO WASHLET C5, please refer to the following common troubleshooting tips. For more detailed information, consult the full User Manual (PDF).

- **Wand not extending or water not spraying:** Ensure the seat sensor is engaged. The WASHLET features a seat sensor to prevent the wand from spraying when no one is seated. Press down on the seat until you hear the sensor "click".
- **Water pressure too soft:** The rear spray setting has two options: soft and strong. Press the cleansing stream button once for a softer stream and twice for added pressure.
- **No power:** Check if the unit is properly plugged into a working GFCI outlet. Ensure the outlet's reset button is not tripped.
- **Heated seat not working:** Verify the heated seat setting on the remote control. There are multiple heat levels.

### Troubleshooting Video Guides:

Your browser does not support the video tag.

Video: Must Watch Before Buying! - This video provides insights and tips that might help with common issues or questions before and after purchase.

## SPECIFICATIONS

Attribute	Value
Brand	TOTO
Model Number	SW3084#01
Color	Cotton White
Material	Plastic
Product Dimensions	20.88"L x 15.06"W
Item Weight	15.44 pounds

Operation Mode	Automatic
Power Rating	AC 120 V 60 Hz
Power Cord Length	3.93 ft (1.2 m)
Batteries Required	2 AA batteries (included)

## WARRANTY AND SUPPORT

The TOTO SW3084#01 WASHLET C5 Electronic Bidet Toilet Seat comes with a Manufacturer One Year Limited Warranty.

For detailed information on product usage, installation, and troubleshooting, please refer to the official manuals:

- [Installation Manual \(PDF\)](#)
- [User Manual \(PDF\)](#)

For further assistance, you can visit the official [TOTO Store on Amazon](#) or contact TOTO customer service.