

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [New Classic Toys](#) /
- › New Classic Toys Wooden Rocking Horse Model 11145 User Manual

New Classic Toys 11145

New Classic Toys Wooden Rocking Horse Model 11145 User Manual

Brand: New Classic Toys | Model: 11145

INTRODUCTION

Thank you for choosing the New Classic Toys Wooden Rocking Horse. This manual provides essential information for the safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and retain it for future reference.

This rocking horse is designed to contribute to a child's positive development, focusing on safety and enjoyment. It encourages the development of motor skills, balance, coordination, imagination, and social interaction.

SAFETY INSTRUCTIONS

To ensure the safety of the child and the longevity of the product, please observe the following guidelines:

- **Adult Supervision Required:** Always ensure an adult is present to supervise children during play.
- **Age Recommendation:** Suitable for children aged 12 months to 10 years.
- **Weight Limit:** The maximum recommended weight limit for this rocking horse is 9 kg (approximately 20 lbs). Exceeding this limit may cause instability or damage.
- **Stable Surface:** Use the rocking horse only on a flat, stable, and non-slip surface. Avoid uneven ground or elevated platforms.
- **Clear Area:** Ensure there is sufficient clear space around the rocking horse to prevent collisions with furniture, walls, or other objects.
- **No Standing:** Children should not stand on the rocking horse. It is designed for sitting and rocking only.
- **Regular Inspection:** Before each use, inspect the rocking horse for any loose parts, damage, or wear. Do not use if any components are broken or missing.
- **Assembly:** Ensure all parts are correctly and securely assembled according to the instructions.
- **Choking Hazard:** Keep small parts and packaging materials away from young children.

PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged:

- Wooden Rocking Horse components (various wooden pieces for assembly)
- Assembly hardware (screws, bolts, etc.)
- Instruction manual (this document)

If any parts are missing or damaged, please contact customer support immediately.

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow these steps carefully. It is recommended that assembly be performed by an adult.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included diagram (if available) to identify each wooden piece and hardware component.
3. **Assemble Base:** Attach the rocking runners to the main support structure using the provided screws and tools. Ensure they are securely fastened.
4. **Attach Body:** Connect the horse's body sections to the base. Pay attention to the orientation of each piece.
5. **Install Handles and Footrests:** Securely attach the handles and footrests. These are crucial for the child's stability and safety. Double-check that they are firm and do not wobble.
6. **Final Check:** Once assembled, gently rock the horse to ensure stability. Verify that all screws are tightened and no parts are loose.



Figure 1: The fully assembled New Classic Toys Wooden Rocking Horse. This image shows the natural wood finish with red accents on the seat and bridle, highlighting its classic design.



Figure 2: A side view of the rocking horse, illustrating its sturdy construction and the smooth curve of the rockers. The design ensures a safe and enjoyable rocking motion.

OPERATING INSTRUCTIONS

Using the rocking horse is straightforward, but always prioritize safety:

- **Placement:** Position the rocking horse on a flat, level surface, away from stairs, sharp objects, or other hazards.
- **Child Placement:** Help the child sit securely on the seat, ensuring their feet are placed on the footrests and their hands are holding the handles firmly.
- **Rocking Motion:** Encourage the child to gently rock back and forth. Supervise to prevent excessive or aggressive rocking that could lead to tipping.
- **Dismounting:** Assist the child in safely dismounting the rocking horse.



Figure 3: A child safely enjoying the rocking horse, demonstrating proper seating with hands on handles and feet on footrests. Adult supervision is always recommended during play.

MAINTENANCE

Proper maintenance will extend the life of your rocking horse:

- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the wood finish.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary. Inspect for any cracks, splinters, or other damage to the wood.
- **Storage:** Store the rocking horse indoors in a dry environment, away from direct sunlight or extreme temperature changes, which can cause wood to warp or crack.
- **Repairs:** Do not attempt to repair significant damage yourself. Contact customer support for guidance.

TROUBLESHOOTING

If you encounter any issues with your rocking horse, refer to the following common problems and solutions:

- **Instability/Wobbling:**
 - Ensure all assembly screws are securely tightened.

- Verify the rocking horse is on a flat, level surface.
- Check for any damaged or warped wooden components.
- **Squeaking Noise:**
 - Inspect joints for friction. A small amount of wood-safe lubricant (e.g., beeswax or paraffin wax) can be applied to contact points if necessary, but avoid areas a child might touch.
 - Ensure all parts are properly aligned and tightened.
- **Loose Handles/Footrests:**
 - Immediately cease use.
 - Re-tighten the screws securing these components. If they cannot be tightened, contact customer support.

If the problem persists or is not listed here, please contact New Classic Toys customer support.

SPECIFICATIONS

Model Number	11145
Brand	New Classic Toys
Material	Wood
Color	Natural Wood with Red Accents
Product Dimensions (L x W x H)	78 cm x 32 cm x 55 cm (Total Height); 29 cm (Seat Height)
Product Weight	453.59 grams (approx. 1 pound)
Recommended Age	12 months - 10 years
Weight Limit	9 Kilograms (approx. 20 lbs)
Educational Value	Develops motor skills, balance, coordination; encourages imagination and social interaction.
Assembly Required	Yes (Adult assembly recommended)



Figure 4: Diagram illustrating the key dimensions of the rocking horse: 78 cm length, 32 cm width, and 55 cm total height (29 cm seat height).

WARRANTY AND SUPPORT

New Classic Toys products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official New Classic Toys website.

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact New Classic Toys customer support through their official channels or the retailer from whom you purchased the product.

You can visit the [New Classic Toys Store](#) for more information.