

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [USHA](#) /

› [Usha Janome Dream Stitch Automatic Zig-Zag Electric Sewing Machine and Usha IH2415 Immersion Heater User Manual](#)

USHA Dream Stitch, IH2415

Usha Janome Dream Stitch Automatic Zig-Zag Electric Sewing Machine and Usha IH2415 Immersion Heater User Manual

Your guide to safe and efficient use of your Usha products.

PRODUCT OVERVIEW


This manual provides detailed instructions for the Usha Janome Dream Stitch Automatic Zig-Zag Electric Sewing Machine and the Usha IH2415 1500-Watt Immersion Heater. Please read all instructions carefully before use to ensure proper operation and safety.

[Usha Janome Dream Stitch Automatic Zig-Zag Electric Sewing Machine](#)



The Usha Janome Dream Stitch is an automatic zig-zag electric sewing machine designed for various sewing tasks. It features a compact free arm, manual thread tension control, and a dial-type stitch pattern selector. With 7 built-in stitches and 14 stitch functions, including 4-step buttonholing, it supports applications like lace fixing, quilting, smocking, and rolled hemming.

[Usha IH2415 1500-Watt Immersion Heater](#)

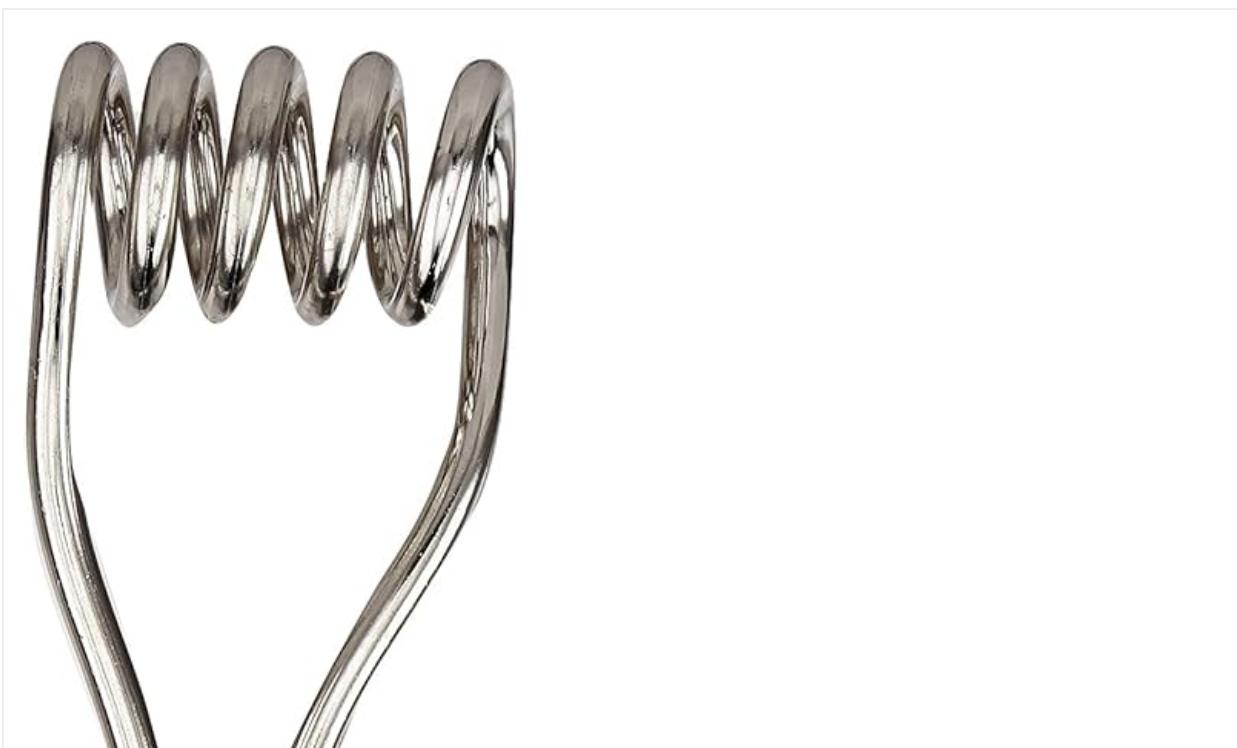



The Usha IH2415 is a 1500-watt immersion water heater, ISI certified for safety. It is designed for heating water and beverages. The heater features a copper inner heating element and a bakelite outer body, operating on 230-250V. It includes a thermostat for temperature control and is capable of heating water for a warm bath in approximately 15 minutes.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.

- Do not immerse the appliance, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

USHA JANOME DREAM STITCH SEWING MACHINE INSTRUCTIONS

Setup

Unpacking

Carefully remove the sewing machine from its packaging. Retain all packaging materials for future storage or transport. Place the machine on a stable, flat surface.

Power Connection

Connect the foot pedal to the machine and then plug the machine's power cord into a suitable electrical outlet. Ensure the power switch is in the 'OFF' position before connecting.



This image shows the rear of the sewing machine, highlighting the power input and the foot pedal connection. Ensure these are securely connected before operation.

Threading the Machine

Follow the numbered guides on the machine for proper upper thread tension and bobbin winding. Incorrect threading can lead to skipped stitches or tangled thread.

Operating Instructions

Stitch Selection

Turn the stitch pattern selector dial to choose from the 7 built-in stitches and 14 stitch functions. Refer to the stitch guide on the machine for visual reference.



This image provides a close-up view of the stitch selector dial and the various stitch patterns available on the Usha Janome Dream Stitch sewing machine.

Basic Sewing

Place the fabric under the presser foot. Lower the presser foot lever. Gently press the foot pedal to start sewing. Control speed with foot pedal pressure.

Buttonholing

The machine supports 4-step buttonholing. Follow the specific instructions in the detailed manual for your desired buttonhole size and type.

Maintenance

Cleaning

Regularly clean lint and dust from the bobbin area and feed dogs using a small brush. Ensure the machine is unplugged before cleaning.

Lubrication

Apply a small amount of sewing machine oil to designated lubrication points as indicated in the full product manual. Do not over-lubricate.

Troubleshooting (Sewing Machine)

- **Skipped Stitches:** Check needle insertion, ensure it's not bent, and re-thread the machine.
- **Thread Breakage:** Verify correct threading, proper tension, and ensure the needle is the correct size for the thread and fabric.
- **Fabric Puckering:** Adjust thread tension or use a stabilizer for delicate fabrics.

Specifications (Sewing Machine)

- **Type:** Automatic Zig-Zag Electric Sewing Machine
- **Arm Type:** Compact Free Arm
- **Stitches:** 7 built-in, 14 stitch functions
- **Buttonholing:** 4-step
- **Thread Tension Control:** Manual
- **Stitch Pattern Selector:** Dial Type
- **Pressure Adjustor:** No
- **Twin Needle Capability:** No

Usha IH2415 Immersion Heater Instructions


Setup

Unpacking

Remove the immersion heater from its packaging. Inspect for any damage. Do not use if damaged.

Placement and Water Level

Place the heater into a non-plastic container filled with water. Ensure the water level is between the MINIMUM and MAXIMUM marks indicated on the heater. Do not immerse the handle or power cord.

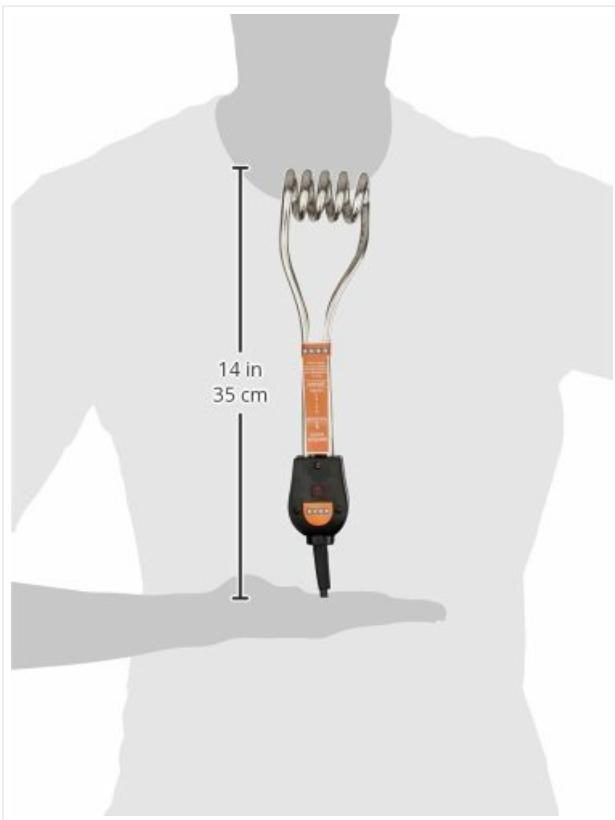

This image illustrates the Usha IH2415 Immersion Heater, showing its approximate dimensions (14 inches or 35 cm in length). This helps in understanding the appropriate water depth for safe operation.

Operating Instructions

Heating Water

Once properly placed in water, plug the 3-pin power plug into a suitable electrical outlet. The heater will begin to warm the water. The built-in thermostat will regulate the temperature. After approximately 15 minutes, the water should be sufficiently warm for use. Unplug the heater immediately after use and remove it from the water once it has cooled slightly.

Maintenance

Cleaning

After use and once cooled, wipe the heating element with a soft cloth to remove any mineral deposits. Do not use abrasive cleaners. Ensure the heater is completely dry before storage.

Storage

Store the heater in a dry, safe place away from children and moisture.

Troubleshooting (Immersion Heater)

- **Heater Not Working:** Check if the power plug is securely inserted and if the electrical outlet is functional. Ensure the water level is correct.
- **Slow Heating:** Verify the wattage (1500W) and ensure the water volume is appropriate for the heater's capacity.

Specifications (Immersion Heater)

- **Model:** IH2415
- **Wattage:** 1500 Watts

- **Certification:** ISI Certified
- **Heating Substances:** Beverages, Water
- **Power Requirement:** 230 - 250 V, 50 - 60 Hz
- **Thermostat:** Yes
- **Power Socket:** 3 Pin plug
- **Inner Heating Element:** Copper
- **Outer Body Material:** Bakelite
- **Product Dimensions:** 30.5 cm X 9 cm X 9 cm (approximate)

WARRANTY AND SUPPORT

Both products come with a **2-year warranty** on the product from the date of purchase. The country of origin for these products is India.

For any queries, service requests, or warranty-related claims, please contact USHA Care at their toll-free number: **1800-1033-111**.

© 2023 USHA. All rights reserved. Information in this manual is subject to change without notice.