

Member's Mark Supermarket Play Center

Member's Mark Supermarket Play Center Instruction Manual

Model: Supermarket Play Center

1. INTRODUCTION

The Member's Mark Supermarket Play Center is an interactive toy designed for children to engage in imaginative role-play. This comprehensive set includes a realistic electronic cash register, a light and sound scanner, a working conveyor belt, and a wide array of play food and accessories, providing a complete supermarket experience. This manual provides essential information for the setup, operation, and maintenance of your play center.

2. IMPORTANT SAFETY INFORMATION

- Adult Supervision:** Always ensure adult supervision during play, especially for younger children.
- Choking Hazard:** This product contains small parts (e.g., play food, coins) which may pose a choking hazard for children under 3 years of age. Keep these items out of reach of infants and toddlers.
- Battery Safety:** The electronic components require batteries. Ensure batteries are inserted correctly with the proper polarity. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly.
- Placement:** Place the play center on a stable, flat surface to prevent tipping.
- Avoid Water:** Keep electronic components away from water or other liquids to prevent damage and electrical hazards.

3. PACKAGE CONTENTS

Your Member's Mark Supermarket Play Center includes the main play structure and a total of 65 accessories. Please verify that all items are present:

- Main Supermarket Play Structure (with integrated cash register, scanner, conveyor belt, and refrigerator)
- Electronic Cash Register (with digital display, calculator, and microphone)

- Light and Sound Scanner
- Working Conveyor Belt
- Play Money (various notes and coins)
- 12 Cardboard Food Boxes
- 4 Cardboard Drink Boxes
- 6 Cardboard Candy Boxes
- 4 Play Cans
- 13 Pieces of Play Fruit and Vegetables
- Shopping Card
- Shopping Basket
- Shopping Bag
- 2 Chalkboards (for writing specials)
- 6 Interchangeable Product Labels



Image 3.1: All 65 included accessories, including play money, food items, and shopping tools.

4. ASSEMBLY AND SETUP

The Member's Mark Supermarket Play Center comes largely pre-assembled. No complex construction is required. Simply unpack all components and arrange the accessories as desired within the play structure.

4.1 Battery Installation

The electronic cash register and scanner require batteries for full functionality. Locate the battery compartments, typically on the underside or back of the units. Insert the required batteries (e.g., AA or AAA, not included) according to the polarity indicators (+/-). Securely close the battery compartment covers.



Image 4.1: The fully assembled Member's Mark Supermarket Play Center.

5. OPERATING INSTRUCTIONS

This section details how to use the various interactive features of your Supermarket Play Center.

5.1 Electronic Cash Register

- **Power On/Off:** Locate the power button on the cash register to turn it on or off.
- **Calculator Function:** Use the numeric keypad to perform basic calculations. The results will display on the digital screen.
- **Microphone:** The working microphone allows for store announcements. Speak into the microphone for amplified sound.
- **Cash Drawer:** Press the designated button or lever to open the cash drawer and store play money.

5.2 Light and Sound Scanner

- **Activation:** Press the button on the scanner to activate its light and realistic beeping sound.

- **Scanning Items:** Hold the scanner over play items to simulate scanning.

5.3 Working Conveyor Belt

- **Operation:** Manually turn the crank located at the side of the conveyor belt to move items along.
- **Placement:** Place play food items or other accessories on the belt for a realistic checkout experience.

5.4 Refrigerator and Shelving

- **Refrigerator:** Open and close the refrigerator door to store play items.
- **Shelves:** Arrange play food and accessories on the various shelves and display areas. Use the included chalkboards to write daily specials or product names.



Image 5.1: Children interacting with the Supermarket Play Center, demonstrating its scale and play features.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe down the play center and accessories with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the materials.

- **Storage:** When not in use, store the play center and its accessories in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries in the electronic components when sounds become faint or functions cease.

7. TROUBLESHOOTING

- **Electronic Cash Register/Scanner Not Working:**
 - Check if the power switch is in the 'ON' position.
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old or depleted batteries with new ones.
- **Conveyor Belt Not Moving Smoothly:**
 - Check for any obstructions (e.g., play items, debris) caught in the mechanism.
 - Ensure the crank is being turned correctly.
- **Microphone Not Amplifying Sound:**
 - Verify that the cash register is powered on and batteries are functional.

8. SPECIFICATIONS

- **Brand:** Member's Mark
- **Model:** Supermarket Play Center
- **ASIN:** B08S61HTJY
- **Materials:** Polyvinyl chloride, Wood
- **Dimensions (Approximate):**
 - Width: 80.5 cm (31.7 in)
 - Depth: 84.5 cm (33.27 in)
 - Height: 114 cm (44.88 in)
- **Recommended Age:** 3 years and up
- **Power:** Batteries required for electronic components (not included)



Image 8.1: Dimensions of the Supermarket Play Center.

9. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your Member's Mark Supermarket Play Center, please refer to your purchase documentation or contact Member's Mark customer service. Specific warranty details may vary by region and retailer.

 <p>Assembly Instructions & User's Manual for Member's Mark 9FT SLIM LINDEN FIR Model Number: TG90P5637D03 Customer Assembly Information (printable parts): programmable.com/or/8881174015</p> <p>THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.</p>	<p><u>Member's Mark 9FT Slim Linden Fir Assembly Instructions & User Manual</u></p> <p>Comprehensive assembly instructions and user manual for the Member's Mark 9FT Slim Linden Fir artificial Christmas tree (Model TG90P5637D03). Includes safety information, setup guide, care instructions, troubleshooting, and warranty details.</p>
 <p>Assembly Instructions & User's Manual for Member's Mark 9FT FLOCKED ASPEN Model Number: TG90M2W75D09 Customer Assembly Information (printable parts): programmable.com/or/8881174015</p> <p>THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.</p>	<p><u>Member's Mark 9FT FLOCKED ASPEN Assembly & User Manual</u></p> <p>Comprehensive assembly instructions and user manual for the Member's Mark 9FT FLOCKED ASPEN artificial Christmas tree (Model: TG90M2W75D09), including safety, care, troubleshooting, and warranty information.</p>
 <p>Member's Mark® Assembly Instructions & User's Manual Member's Mark® [6 Pack Multipurpose Disc Light] Model Number: 54-80-2149-78 Customer Assembly Information (printable parts): programmable.com/or/8881174015 or CustomerService@Member'sMark.com</p> <p>THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.</p>	<p><u>Member's Mark 6 Pack Multipurpose Disc Light Assembly and User Manual</u></p> <p>Assembly instructions and user manual for the Member's Mark 6 Pack Multipurpose Disc Light. Includes product information, components, hardware, tools needed, assembly steps for soil, concrete, and wall mounting, and battery precautions.</p>
 <p>Assembly Instructions & User's Manual for Member's Mark 7.5FT LINDEN FIR Model Number: TG76P4H95D00 Customer Assembly Information (printable parts): programmable.com/or/8881174015</p> <p>THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.</p>	<p><u>Member's Mark 7.5FT LINDEN FIR Artificial Christmas Tree Assembly & User Manual</u></p> <p>Comprehensive assembly instructions and user manual for the Member's Mark 7.5FT LINDEN FIR artificial Christmas tree. Includes safety information, care instructions, technical data, troubleshooting, and warranty details. Model TG76P4H95D00.</p>
 <p>Assembly Instructions & User's Manual for Member's Mark 9FT SLIM LINDEN FIR Model Number: TG90P5637D03 Customer Assembly Information (printable parts): programmable.com/or/8881174015</p> <p>THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.</p>	<p><u>Member's Mark 9FT Slim Linden Fir Artificial Christmas Tree Assembly & User Manual (TG90P5637D03)</u></p> <p>Detailed assembly instructions and user manual for the Member's Mark 9FT Slim Linden Fir artificial Christmas tree (Model TG90P5637D03). Includes safety information, care, troubleshooting, and warranty details.</p>
<p>Sam's.com (771D) Item# H5484-03956 Description: Animated Skeleton Pirate Size: 89 x 21cm 120g -This page is not printed.</p> 	<p><u>84-Inch Animated Skeleton Pirate Assembly Instructions and User Manual Member's Mark</u></p> <p>Detailed assembly instructions, user manual, safety guidelines, and troubleshooting for the Member's Mark 84-Inch Animated Skeleton Pirate decoration. Learn how to set up and operate your animated pirate.</p>