

Socobeta DVP5982C1

Socobeta Universal DVD Player Remote Control User Manual

Model: DVP5982C1

1. INTRODUCTION

Thank you for purchasing the Socobeta Universal DVD Player Remote Control. This remote is designed as a high-quality replacement for specific Philips DVD Player models, offering seamless control over your entertainment system. Please read this manual carefully to ensure proper setup and operation of your new remote control.

2. PRODUCT OVERVIEW

The Socobeta DVP5982C1 remote control features a comprehensive set of buttons for managing your DVD player functions. Its ergonomic design ensures comfortable handling.

2.1 Remote Control Layout



Image: A clear view of the remote control, highlighting the button layout including power, navigation, playback, and numeric keys.

2.2 Key Features

- **Infrared Connectivity:** Reliable communication with your DVD player.
- **Durable Construction:** Made of ABS material for longevity.
- **Wide Compatibility:** Specifically designed for Philips DVD Player models DVP5982C1/37B, DVP3350K, DVP3386K, DVP3310K.
- **Optimal Range:** Effective operating distance of up to 8 meters (26 feet).



Product Size: Approx.
150 * 46 * 24 mm/ 5.90 * 1.81 * 0.94 in

Image: The remote control shown with its approximate dimensions: 150 x 46 x 24 mm (5.90 x 1.81 x 0.94 inches).



Suitable for Philips
DVP5982C1/37B DVP3350K

Image: The remote control positioned in front of a television, illustrating its intended use and highlighting its compatibility with specific Philips DVD player models.



The remote control distance is greater than 8M (the machine model is different and the distance is different).



Image: A hand demonstrating the use of the remote control, emphasizing its effective operating range of over 8 meters.

Made of ABS, it is not easy to wear and durable.

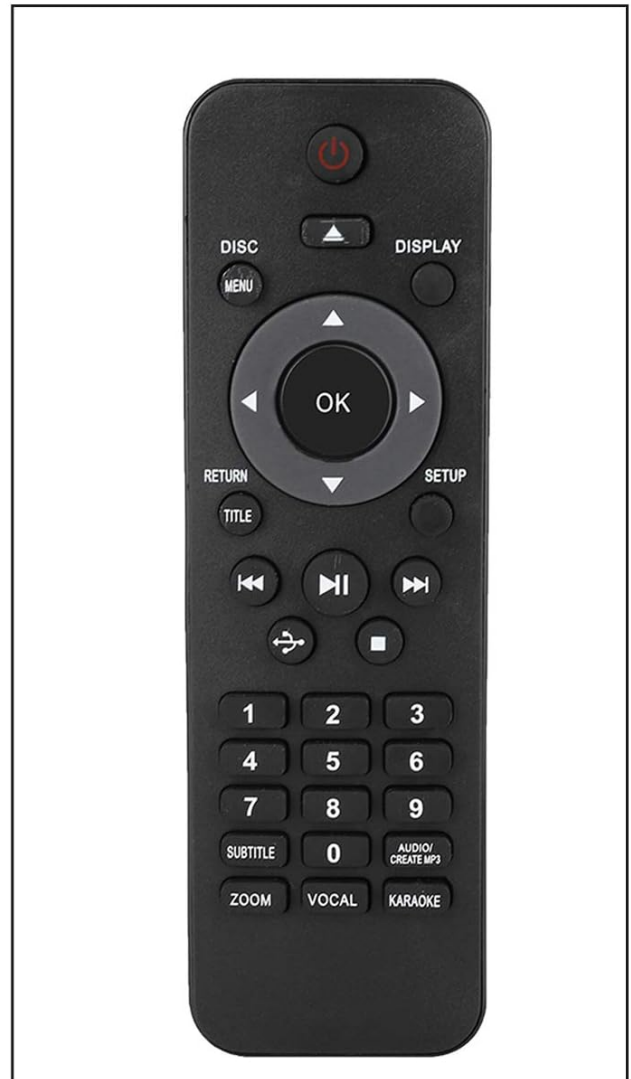


Image: The remote control, highlighting its construction from durable ABS material, which contributes to its wear resistance and longevity.

New and old models are shipped randomly



New Type



Old Type

Image: A comparison of the 'New Type' and 'Old Type' models of the remote control, indicating that either version may be shipped randomly.

3. SETUP

This remote control is designed as a direct replacement for the specified Philips DVD Player models. No complex programming or code entry is typically required for these compatible devices. Simply install the batteries and begin use.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Close the battery compartment cover securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your DVD player. Ensure there are no obstructions between the remote and the player.

4.1 Basic Functions

- **Power ():** Turns the DVD player on or off.
- **DISC MENU:** Accesses the main menu of the DVD disc.
- **DISPLAY:** Shows on-screen information about the current playback.
- **OK / Navigation (▲ ▼ ◀ ▶):** Use the arrow keys to navigate menus and the OK button to confirm selections.
- **RETURN:** Goes back to the previous menu or screen.
- **TITLE:** Returns to the disc's title menu.
- **SETUP:** Accesses the system setup menu of the DVD player.
- **Playback Controls (▶/ , ■ ,):** Play/Pause, Stop, Previous Track/Chapter, Next Track/Chapter.
- **Numeric Buttons (0-9):** Directly select tracks, chapters, or input numbers.

4.2 Special Functions

- **SUBTITLE:** Cycles through available subtitle languages.
- **ZOOM:** Adjusts the screen zoom level.
- **VOCAL:** Controls vocal settings (if supported by the DVD player and disc).
- **KARAOKE:** Activates or controls karaoke functions (if supported).
- **AUDIO / CREATE MP3:** Switches audio tracks or accesses MP3 creation features (if supported).

5. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

Problem	Possible Cause	Solution
Remote not working	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote not working	Obstruction between remote and DVD player.	Ensure a clear line of sight to the DVD player's infrared receiver.
Remote not working	Remote is not compatible with your DVD player model.	Verify your DVD player model is listed as compatible (DVP5982C1/37B, DVP3350K, DVP3386K, DVP3310K). This remote is a replacement, not a universal programmable remote.
Limited range	Weak batteries.	Replace batteries.
Limited range	Interference from other electronic devices or bright light sources.	Move away from potential sources of interference.

7. SPECIFICATIONS

Feature	Detail
Brand	Socobeta
Model Number	DVP5982C1
Connectivity Technology	Infrared (IR)
Compatible Devices	Philips DVP5982C1/37B, DVP3350K, DVP3386K, DVP3310K
Maximum Range	8 Meters (approx. 26 feet)
Battery Type	2 x AAA batteries (not included)
Number of Buttons	20
Material	ABS
Dimensions (L x W x H)	Approx. 150 x 46 x 24 mm (5.90 x 1.81 x 0.94 inches)
Country of Origin	China

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support for this product is not available in the provided data. Please refer to the seller or retailer from whom you purchased the product for details on warranty coverage and support options.

© 2024 Socobeta. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question