

Manuals.plus /

› tectake /

› tectake Wicker Garden Lounge Set (B08S7HS2VL) - Instruction Manual

tectake B08S7HS2VL

tectake Wicker Garden Lounge Set - Instruction Manual

Model: B08S7HS2VL

INTRODUCTION

Thank you for choosing the tectake Wicker Garden Lounge Set. This manual provides essential information for the safe assembly, operation, maintenance, and care of your new garden furniture. Please read these instructions carefully before use and retain them for future reference.

SAFETY INSTRUCTIONS

- **Assembly Required:** This product requires assembly. Ensure all parts are present and undamaged before beginning.
- **Sharp Edges:** Handle components with care to avoid injury from sharp edges or other hazards during assembly.
- **Protective Cover:** Use a protective cover to prevent material fatigue and discoloration, especially during adverse weather conditions or prolonged exposure to sunlight.
- **Environmental Conditions:** Do not use the product in conditions that could damage it, such as extreme winds or heavy loads beyond its capacity.
- **Stability:** Ensure the furniture is placed on a flat, stable surface to prevent tipping.
- **Children:** Keep children away from the assembly area. Do not allow children to climb on or play with the furniture unsupervised.

PACKAGE CONTENTS


The tectake Wicker Garden Lounge Set includes the following components:

- 1 x Two-seater bench with cushions
- 2 x Armchairs with cushions
- 2 x Stools
- 1 x Coffee table with glass top

- 1 x Protective cover
- Assembly hardware and tools



tectake
garden

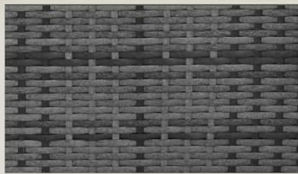

XXL 6 cm XXL kussens
voor maximaal zitcomfort
en pure ontspanning



Geïntegreerde kussenbox
royale & beschermde
opbergruimte



Handige hockers
compact opbergbaar
onder de fauteuils



Inclusief beschermhoes
beschermt de gehele set
tegen weer en wind



Fijn wicker
hoogwaardige afwerking
en extreem duurzaam



Stabiel stalen frame
met schroeven van
robuust roestvrij staal

Image: Overview of the tectake Wicker Garden Lounge Set components, including the two-seater bench, two armchairs, two stools, and a coffee table.

SETUP AND ASSEMBLY

Assembly is required for this garden lounge set. Please follow the steps below and refer to the assembly video for visual guidance.

Assembly Video

Your browser does not support the video tag.

Video: Detailed assembly instructions for the tectake Wicker Garden Lounge Set.

Step-by-Step Assembly

1. **Unpack Components:** Carefully unpack all parts and lay them out on a clean, soft surface to prevent

scratches. Verify all components listed in the package contents are present.

2. **Assemble Stools:** Connect the side panels and base of the stools using the provided screws and tools. Ensure all connections are secure.
3. **Assemble Coffee Table:** Attach the side panels to the base of the coffee table. Place the glass top securely on the table frame.
4. **Assemble Armchairs:** Connect the backrest and side panels to the seat base of each armchair. Tighten all screws firmly.
5. **Assemble Two-seater Bench:** Connect the backrest and side panels to the seat base of the two-seater bench. Ensure the integrated storage compartment mechanism is correctly aligned and secured.
6. **Final Check:** Once all furniture pieces are assembled, double-check all screws and connections to ensure they are tight and secure.
7. **Place Cushions:** Position the cushions on the seats and backrests for comfort.



Image: Assembled armchairs and a stool, ready for use.



Image: The assembled coffee table with its glass top, suitable for drinks and small items.

OPERATING INSTRUCTIONS

Using the Integrated Storage Box

The two-seater bench features an integrated storage box, ideal for storing cushions or other outdoor accessories when not in use. To access the storage:

1. Lift the seat section of the bench. The lid is designed to open smoothly.
2. Place or remove items from the storage compartment.
3. Gently lower the seat section back into place, ensuring it closes securely.



Image: The two-seater bench with its top lifted, revealing the integrated storage compartment.

Arrangement Options

The modular design of the lounge set allows for flexible arrangement to suit your space and needs. The stools can be easily slid under the armchairs for compact storage when not in use.

VARIABLE Comfort

De stijlvolle wicker zitgroep kan flexibel worden opgesteld en past zich zo optimaal aan elke omgeving aan - de ideale oplossing voor je tuin.



Image: The lounge set arranged with stools tucked under the armchairs, demonstrating space-saving configuration.

MAINTENANCE AND CARE

Proper maintenance will extend the lifespan and appearance of your tectake Wicker Garden Lounge Set.

Cleaning

- **Poly Rattan Frame:** Wipe the poly rattan frame with a damp cloth and mild soap. Rinse thoroughly with water and dry completely. Avoid abrasive cleaners or harsh chemicals.
- **Glass Top:** Clean the glass top with a standard glass cleaner and a soft cloth.
- **Cushion Covers:** The cushion covers are waterproof and easily washable. Remove the covers and machine wash them according to the care label, typically at a low temperature. Allow to air dry completely before reattaching.



Image: Close-up of the water-resistant cushion fabric, showing water droplets beading on the surface and a zipper for easy removal.

Protection

- **Protective Cover:** Use the provided protective cover when the furniture is not in use, especially during inclement weather or off-season storage. This helps prevent material fatigue, discoloration, and accumulation of dirt.
- **Winter Storage:** During winter months, it is recommended to store the furniture indoors or in a sheltered area to protect it from extreme cold and moisture.
- **Sunlight Exposure:** While the poly rattan is UV-resistant, prolonged direct sunlight can still affect its longevity. Use the protective cover during peak sun hours if possible.



Image: The lounge set covered with its black protective cover, demonstrating protection against elements.

TROUBLESHOOTING

If you encounter any issues with your tectake Wicker Garden Lounge Set, please refer to the following common solutions:

- **Wobbly Furniture:** Check all screws and bolts to ensure they are tightened securely. Ensure the furniture is placed on a level surface.
- **Difficulty Assembling:** Review the assembly video and step-by-step instructions. Ensure you are using the correct parts for each step. Do not force components together.
- **Damaged Parts:** If any parts are damaged upon arrival or during assembly, do not proceed with assembly. Contact customer support for replacement parts.
- **Cushion Issues:** If cushions become wet, remove covers and allow them to dry completely to prevent mold or mildew.

SPECIFICATIONS

Feature	Detail
Brand	tectake
Model Number	B08S7HS2VL
Color	Grey
Material	Glass, Powder-coated Steel, Polyester, Polyethylene
Assembly Required	Yes
Total Dimensions Bench	129 x 68.5 x 75 cm (L x W x H)
Internal Storage Bench	123 x 56 x 28 cm (L x W x H)
Dimensions Armchair	71.5 x 66 x 74.5 cm (L x W x H)
Dimensions Stool	47 x 47 x 31.5 cm (L x W x H)
Dimensions Coffee Table	86 x 50.5 x 37 cm (L x W x H)
Load Capacity Bench	200 kg
Load Capacity Armchair	120 kg per armchair
Load Capacity Stool	80 kg per stool
Load Capacity Table	35 kg
Weight Bench	Approx. 15 kg
Weight Armchair	Approx. 8.5 kg per armchair
Weight Stool	Approx. 4.5 kg per stool
Weight Table	Approx. 9 kg

Note: All dimensions and weights are approximate.

AFMETINGEN

Totale afmetingen bank
129 x 68,5 x 75 cm

Binnenafmeting opbergvak
123 x 56 x 28 cm

Afmetingen fauteuil
71,5 x 66 x 74,5 cm

Afmetingen hocker
47 x 47 x 31,5 cm

Afmetingen tafel
86 x 50,5 x 37 cm

Afmetingen beschermhoes
129 x 134,5 x 75 cm

TECHNISCHE DETAILS

Draagkracht
Bank 200 kg
per fauteuils 120 kg
per hocker 80 kg
Tafel 35 kg

Gewicht
Bank ca. 15 kg
per fauteuil ca. 8,5 kg
per hocker ca. 4,5 kg
Tafel ca. 9 kg

Materiaal gepoedercoat staal,
polyethyleen, glas 100% polyester,
schuim

INHOUD

Bank met kussen
2 fauteuils met kussens
2 hockers
Tafel met glasplaat
Beschermerhoes
Montagemateriaal
Montagehandleiding

Afmetingen zijn bij benadering

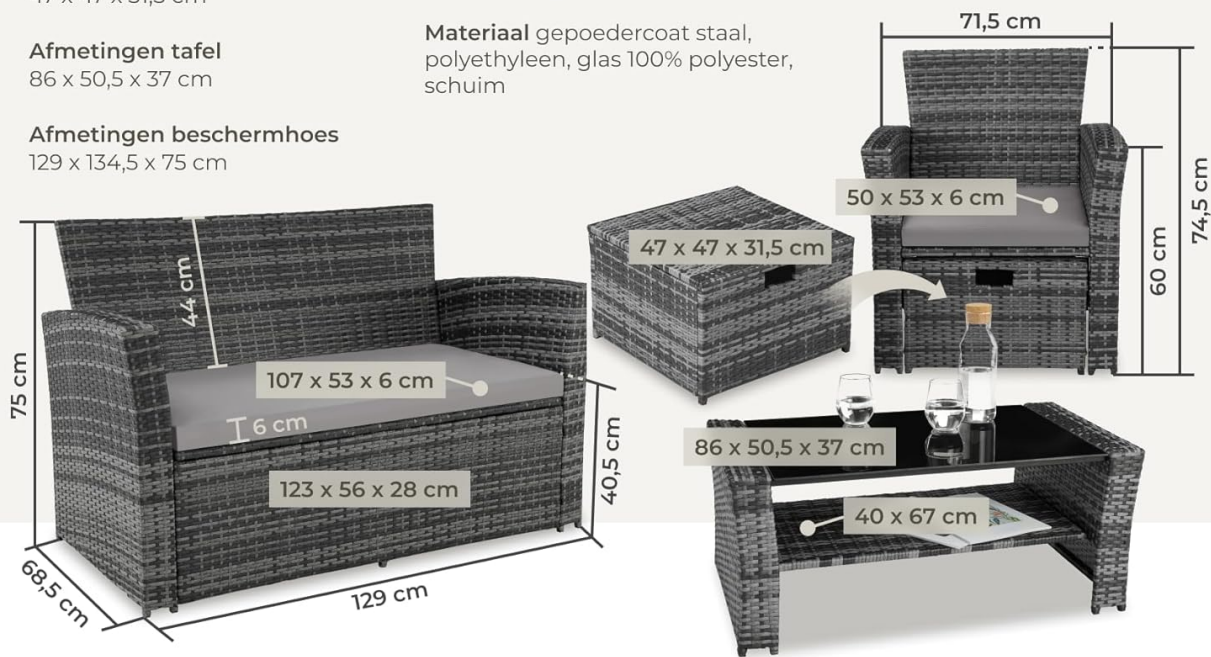


Image: Visual representation of the product dimensions and technical details.

WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided at the point of purchase or on the official tectake website. If you require assistance with assembly, missing parts, or have any questions regarding your product, please contact tectake customer support.

Contact Information: Please visit the official tectake website or refer to your purchase documentation for the most up-to-date customer support contact details.