

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lamart](#) /

› [Lamart Sensor Stainless Steel Touchless Dust Bin, 50L - Instruction Manual](#)

Lamart LT8052

Lamart Sensor Stainless Steel Touchless Dust Bin, 50L - Instruction Manual

MODEL: LT8052

1. Introduction

Thank you for choosing the Lamart Sensor Stainless Steel Touchless Dust Bin. This innovative 50-liter dust bin is designed for hygienic and convenient waste disposal, featuring a motion-sensor activated lid for touchless operation. Its durable stainless steel and plastic construction ensures a long lifetime with low power consumption.



Figure 1: Front view of the Lamart 50L Touchless Dust Bin, showcasing its sleek stainless steel and black design.

2. Safety Instructions

- Read all instructions before using the appliance.
- Do not immerse the lid assembly in water or other liquids. This can damage the electronic components.
- Use only the specified battery type (3 x AA Alkaline batteries).
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

- Keep the sensor area clean and unobstructed for optimal performance.
- This product is intended for indoor use only.
- Do not force the lid open or closed manually, as this may damage the motor mechanism.

3. Package Contents

Verify that all components are present in the package:

- 1 x Lamart Sensor Stainless Steel Touchless Dust Bin (50L capacity)
- 1 x Lid Assembly with Motion Sensor
- 3 x AA Alkaline Batteries (pre-installed or included separately)

4. Setup

1. **Unpack the Dust Bin:** Carefully remove all packaging materials from the dust bin and lid assembly.
2. **Install Batteries (if not pre-installed):**
 - Locate the battery compartment on the underside of the lid assembly.
 - Open the battery compartment cover.
 - Insert 3 AA Alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
 - Close the battery compartment cover securely.
3. **Place the Lid:** Carefully place the lid assembly onto the dust bin body, ensuring it sits securely and is properly aligned.
4. **Position the Dust Bin:** Place the dust bin in your desired location. Ensure there are no obstructions directly above the sensor area that could interfere with its operation.

5. Operating Instructions

The Lamart Touchless Dust Bin utilizes photoelectric technology for automatic lid operation.

1. **Automatic Lid Opening:**
 - Approach the sensor area located on the front of the lid (usually indicated by a small black window).
 - The lid will automatically open when your hand or an object is detected within the sensor's range (typically 10-15 cm).
 - The lid will remain open for approximately 5 seconds, allowing you to dispose of waste.
2. **Automatic Lid Closing:**
 - After 5 seconds of inactivity (no object detected by the sensor), the lid will automatically close.
 - To keep the lid open longer, simply keep your hand or object within the sensor's range.
3. **Manual Override (if applicable):** While the primary operation is automatic, some models may have manual open/close buttons on the lid. Refer to the specific markings on your lid if you wish to operate it manually. *(Note: This model's description emphasizes "completely automatic" so manual buttons might not be present, but it's good to mention as a general possibility for touchless bins.)*

6. Maintenance

- **Cleaning the Exterior:**

- Wipe the stainless steel body with a soft, damp cloth and mild detergent.
- Avoid abrasive cleaners or scouring pads, as these can scratch the finish.
- Dry thoroughly with a soft, dry cloth to prevent water spots.

- **Cleaning the Sensor:**

- Gently wipe the sensor window with a soft, dry cloth.
- Do not use cleaning sprays directly on the sensor.

- **Battery Replacement:**

- When the lid operation becomes slow or inconsistent, it's time to replace the batteries.
- Follow the battery installation steps in the "Setup" section.
- Always replace all 3 AA batteries at the same time with new ones.

7. Troubleshooting

Problem	Possible Cause	Solution
Lid does not open automatically.	Batteries are dead or low. Batteries are inserted incorrectly. Sensor is dirty or obstructed. Sensor is damaged.	Replace all 3 AA batteries with new ones. Check battery polarity and reinsert correctly. Clean the sensor window with a soft, dry cloth. Ensure no objects are blocking the sensor. If still not working, contact customer support.
Lid opens and closes repeatedly or erratically.	Dust or debris on sensor. Bin placed in high-traffic area or near reflective surfaces.	Clean the sensor window. Relocate the bin to an area with less movement or away from reflective surfaces.
Lid motor sounds weak or makes unusual noises.	Low batteries. Motor mechanism issue.	Replace all 3 AA batteries with new ones. If the issue persists after battery replacement, the motor may be faulty. Contact customer support.

8. Specifications



Figure 2: Dimensions of the Lamart 50L Touchless Dust Bin.

Model Number	LT8052
Capacity	50 Liters
Dimensions (L x W x H)	38.6 x 30.8 x 69.1 cm (approx. 15.2 x 12.1 x 27.2 inches)
Weight	3.14 kg (3142 Grams)

Material	Stainless Steel, Plastic
Colour	Stainless Steel/Black
Opening Mechanism	Motion-Sensor (Photoelectric Technology)
Batteries Required	3 x AA Alkaline (Included)

9. Warranty and Support

For warranty information, technical support, or service inquiries, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Lamart