

[Manuals.plus](#) /

› [ORNIN](#) /

› Ornin T108 Trimline Corded Telephone User Manual

ORNIN T108

Ornin T108 Trimline Corded Telephone User Manual

Model: T108 | Brand: ORNIN

INTRODUCTION

The Ornin T108 is a reliable and functional corded telephone designed for both home and hotel use. It features a compact trimline design, essential calling functions, and the convenience of wall-mounting. This manual provides instructions for setting up, operating, and maintaining your Ornin T108 telephone.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Ornin T108 Telephone Unit
- Short Line Cord (approximately 5 inches)
- Standard Line Cord (approximately 7 feet)
- Extension Connector
- Standard Coiled Handset Cord
- Instruction Manual (Note: Manual content may vary by region)

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your Ornin T108 telephone.

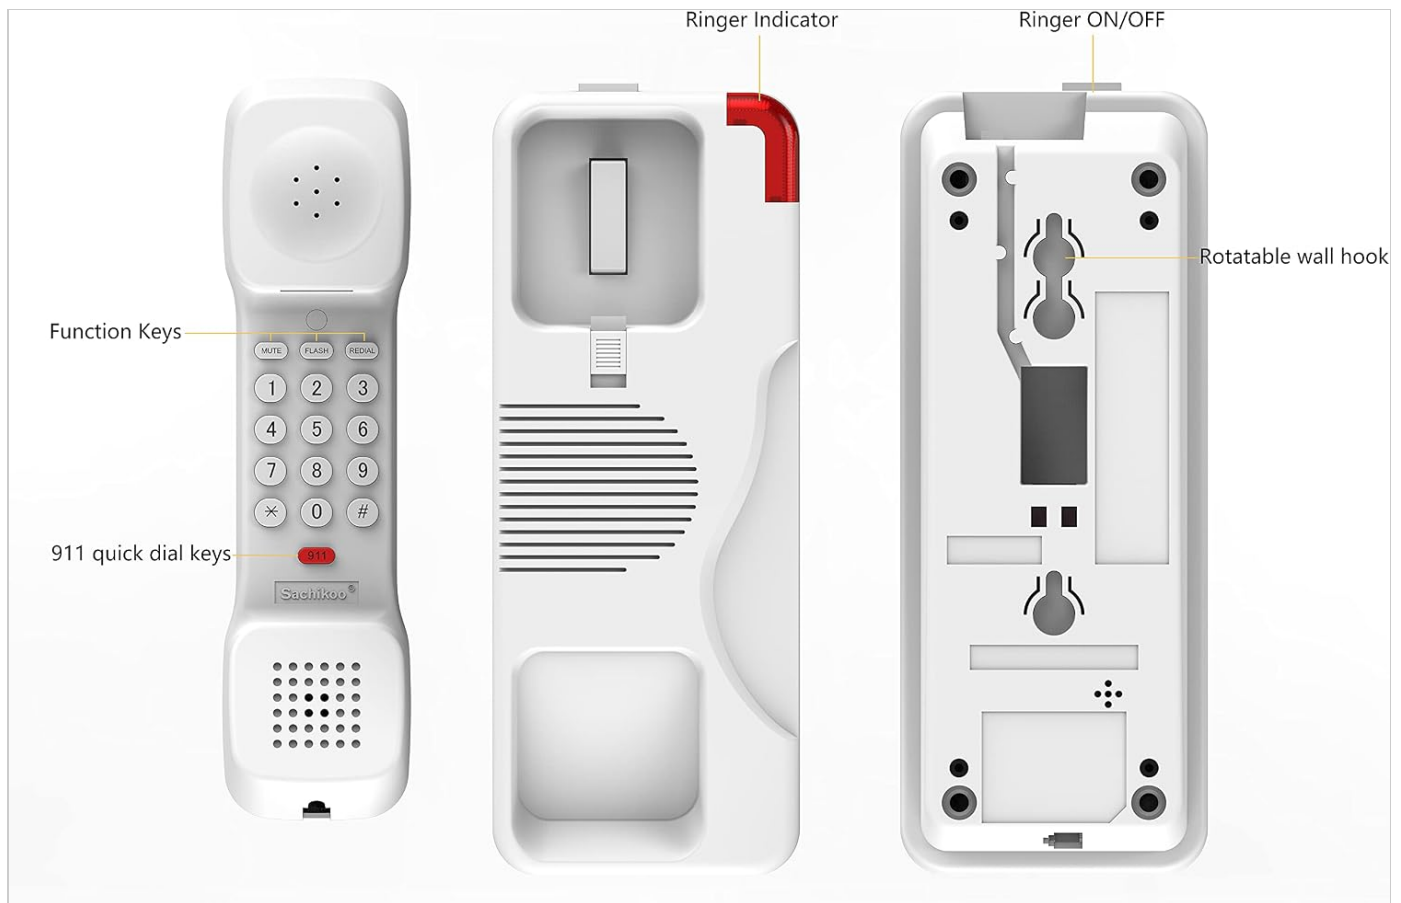


Image: Ornin T108 Component Overview. This image displays the front, side, and back of the Ornin T108 telephone. Key features labeled include the Ringer Indicator light, the Ringer ON/OFF switch, the Function Keys (MUTE, FLASH, REDIAL), the dedicated 911 quick dial key, and the rotatable wall hook on the back for wall mounting.

- **Ringer Indicator Light:** Located on the top right, this light flashes to indicate an incoming call, even if the ringer is off.
- **Redial Function:** Allows quick redialing of the last dialed number.
- **Ringer ON/OFF Switch:** Enables you to turn the ringer sound on or off, useful for quiet environments like bedrooms or hotels.
- **Mute Button:** Mutes your microphone during a call, allowing you to hear the other party without them hearing you.
- **Emergency Quick Dial Button (Red 911):** A dedicated button for quick dialing an emergency number. This feature is compatible with hotel phone systems.
- **Wall Mountable Design:** The phone can be placed on a surface or mounted on a wall. A standard wall mount plate is required for wall installation (sold separately).
- **No External Power Required:** Operates directly from the telephone line, requiring no batteries or external power adapter.
- **Water and Dust Resistance:** Designed with user-level resistance to water and dust, making it suitable for various environments.

SETUP

Follow these steps to set up your Ornin T108 telephone.

1. Connecting the Handset

1. Connect one end of the coiled handset cord to the handset.
2. Connect the other end of the coiled handset cord to the port on the side of the telephone base unit.

2. Connecting to the Telephone Line

1. Connect one end of the standard line cord (7-foot) or the short line cord (5-inch) to the LINE port on the back of the telephone base unit.
2. Connect the other end of the line cord to your telephone wall jack.
3. If you need to extend the line, use the provided extension connector with an additional telephone line cord (not included).

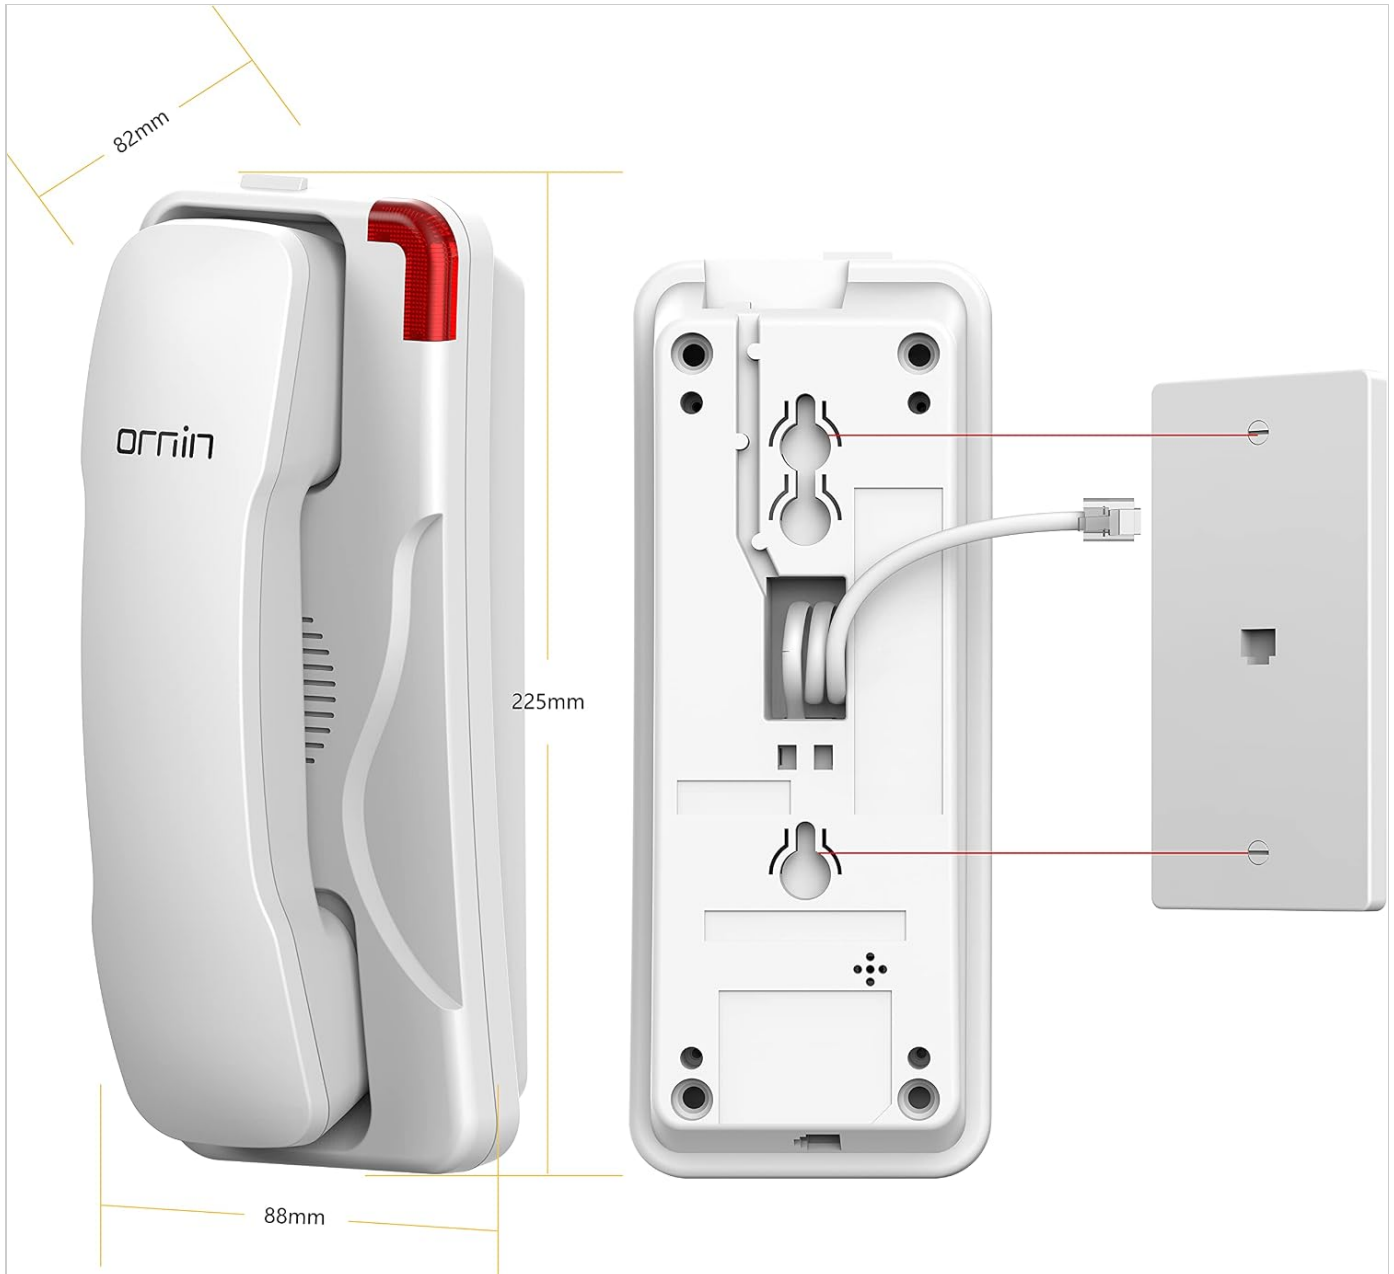


Image: Ornin T108 Dimensions and Wall Mount Diagram. This image illustrates the dimensions of the Ornin T108 telephone (225mm height, 88mm width, 82mm depth) and provides a diagram for connecting the telephone line for wall mounting. It shows how the phone connects to a standard wall mount plate.

3. Wall Mounting (Optional)

The Ornin T108 is designed to be wall-mounted. A standard wall mount plate is required and sold separately.

1. Ensure a standard wall mount plate is securely installed on your wall.
2. Rotate the wall hook on the back of the telephone base unit to the wall-mount position.
3. Align the mounting holes on the back of the telephone with the studs on the wall mount plate and slide the phone down to secure it.

4. Connect the telephone line cord from the phone to the wall jack, routing it neatly.

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset.
2. Listen for a dial tone.
3. Dial the desired phone number using the keypad.
4. Once the call is complete, place the handset back on the base unit.

Answering a Call

1. When the phone rings or the Ringer Indicator light flashes, lift the handset.
2. To end the call, place the handset back on the base unit.

Using the Redial Function

1. Lift the handset.
2. Press the **REDIAL** button. The phone will automatically dial the last number called.

Using the Mute Function

1. During an active call, press the **MUTE** button. The other party will no longer hear your voice, but you can still hear them.
2. To resume speaking, press the **MUTE** button again.

Ringer ON/OFF

To turn the ringer on or off, slide the Ringer ON/OFF switch located on the top of the telephone base unit to the desired position.

Using the Emergency Quick Dial Button

In an emergency, lift the handset and press the dedicated red **911** button. This will dial a pre-programmed emergency number. This feature is designed to be compatible with hotel phone systems.

MAINTENANCE

- **Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water and Dust Resistance:** While the phone offers user-level water and dust resistance, avoid submerging it in water or exposing it to heavy dust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Telephone line not connected properly or line issue.	Ensure the telephone line cord is securely connected to both the phone and the wall jack. Test with another phone if available to confirm the line is active.

Problem	Possible Cause	Solution
Phone does not ring.	Ringer is switched off.	Slide the Ringer ON/OFF switch to the ON position.
Cannot hear the other party / Other party cannot hear me.	Handset cord loose or Mute function active.	Ensure the coiled handset cord is securely connected at both ends. If you cannot be heard, check if the MUTE button is active (press it again to deactivate).
Ringer Indicator light not flashing for incoming calls.	No incoming call or phone line issue.	Verify the phone line is active. Ensure the phone is properly connected to the wall jack.

SPECIFICATIONS

Feature	Detail
Brand	ORNIN
Model	T108
Color	White
Phone Type	Corded
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric (Line Powered)
Dialer Type	Single Keypad
Product Dimensions (Approx. L x W x H)	225mm x 88mm x 82mm (based on image)
Item Weight	0.7 pounds (approx. 317 grams)
Compatible Devices	PSTN (Public Switched Telephone Network)
Multiple Simultaneous Calls	Single Line Operation
Caller ID	No
Special Features	Ringer Indicator Light, Redial, Mute, Ringer ON/OFF, Emergency Quick Dial, Wall Mountable, User-level Water/Dust Resistance

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For warranty claims or technical support, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question