

JustFine HT-S100F

JustFine Replacement Remote Control

INSTRUCTION MANUAL FOR SONY HT-S100F SOUND BAR AV SYSTEM

Introduction

This document provides essential instructions for the setup, operation, maintenance, and troubleshooting of your JustFine replacement remote control. This remote is designed for compatibility with various Sony Sound Bar AV Systems, including models HT-S100F, HTS100, HT-SF200, HTSF150, HT-SF150, HTS100F, HT-S100, and HTSF200.

Please read this manual thoroughly before using the remote control to ensure proper functionality and longevity.

Setup

The JustFine replacement remote control is pre-programmed and does not require any additional programming. Simply install the batteries to begin operation.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA 1.5V batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





This image displays the rear of the remote control. The battery compartment is open, revealing two slots for AAA batteries. Note the positive (+) and negative (-) terminals for correct battery insertion.

After battery installation, the remote control is ready for use.

Operating Instructions

To operate your Sony Sound Bar AV System with this remote control:

- Point the remote control directly at the infrared receiver on your Sound Bar AV System.
- Press the desired function button (e.g., Power, Volume Up/Down, Input Select) to control the system.
- Ensure there are no obstructions between the remote control and the Sound Bar AV System's receiver.

Maintenance

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the Sound Bar AV System.
 - Verify that the Sound Bar AV System is powered on.
- **Remote requires programming:**
 - This remote control is pre-programmed and does not require user programming. If it is not functioning, refer to the 'Remote not responding' steps above.

Specifications

- **Product Dimensions:** 4.53 x 1.57 x 1.38 inches
- **Item Weight:** 1.76 ounces
- **Brand:** JustFine
- **Special Feature:** Ergonomic
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Sony HT-S100F, HTS100, HT-SF200, HTSF150, HT-SF150, HTS100F, HT-S100, HTSF200 Sound Bar AV Systems
- **Connectivity Technology:** Infrared

Warranty

This product is sold with a 30-day quality warranty and a money-back guarantee. For any issues within this period, please contact customer support.

Support

For any problems or inquiries regarding your JustFine replacement remote control, please contact us via email. We are committed to providing assistance.

Contact: Please refer to your purchase platform for seller contact information.