

ALLIMITY MXQ-PRO

ALLIMITY MXQ-PRO Remote Control Instruction Manual

Model: MXQ-PRO

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your ALLIMITY MXQ-PRO remote control. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

SETUP

1. Battery Installation

The ALLIMITY MXQ-PRO remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Battery compartment with AAA batteries inserted.

2. Initial Use

This remote control is designed for immediate use with compatible devices. No programming or pairing is required. Simply insert the batteries, and the remote is ready to operate your TV box.

OPERATING INSTRUCTIONS

The ALLIMITY MXQ-PRO remote control provides intuitive access to various functions of your compatible TV box. Ensure a clear line of sight between the remote and the TV box's infrared receiver.



Figure 2: Front view of the remote control with button layout.

Button Functions:

- **Power Button (●):** Turns the TV box on or off.
- **TV Control Section (SET, TV IN, VOL-, VOL+):** These buttons are typically used for basic TV functions if the remote supports TV control. Refer to your TV box manual for specific setup if applicable.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select items. The **OK** button confirms selections.
- **Home Button (House icon):** Returns to the main home screen of the TV box.
- **Back Button (Return arrow icon):** Returns to the previous screen or menu.
- **Volume Buttons (VOL+, VOL-):** Adjusts the volume.
- **Mute Button (Mute icon):** Mutes or unmutes the audio.
- **Number Pad (0-9):** For direct input of numbers, such as channel selection or passwords.

- **APP Button:** Accesses the applications menu.
- **SETUP Button:** Accesses system settings or setup menu.

Compatible Devices:

This remote control is compatible with various TV box models, including but not limited to:

- MXQ Pro, MXQ Pro 4K
- M8, M9C, M8C, M8N, M10
- MX9
- T95M, T95N, T95X
- H96
- X96, X96mini, X96s
- V88
- TX3MINI

For optimal performance, ensure your TV box model is listed above or consult your TV box's documentation for remote control compatibility.

MAINTENANCE

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

Storage:

When not in use for extended periods, store the remote control in a cool, dry place. If storing for several months, it is recommended to remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote control and the TV box's infrared sensor. Obstructions can block the signal.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Certain buttons not working:**
 - Verify that your TV box model is listed as compatible. Some buttons may have specific functions or no function depending on the TV box's operating system.
 - Clean the remote control, especially around the unresponsive buttons, to ensure no debris is interfering with their operation.
- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

SPECIFICATIONS

Brand	ALLIMITY
Model Name	MXQ-PRO
Connectivity Technology	Infrared
Special Feature	No Programming Required
Compatible Devices	Television (specifically various TV box models)
Maximum Range	10 Meters
Battery Type	2 x AAA Alkaline batteries (not included)
Color	Black
Item Dimensions (L x W x H)	6"L x 2"W x 0.5"H (approx.)
Item Weight	1.4 Ounces (approx.)

WARRANTY AND SUPPORT

Information regarding specific warranty terms for this product is not available in the provided data. For warranty claims or technical support, please refer to the retailer's return policy or contact the manufacturer, ALLIMITY, directly through their official support channels.