

[Manuals.plus](#) /

› [NKF](#) /

› NKF NH301UD Replacement Remote Control User Manual

NKF NH301UD

Instruction Manual for NKF NH301UD Replacement Remote Control

Model: NH301UD

1. PRODUCT OVERVIEW

The NKF NH301UD is a replacement infrared (IR) remote control designed for various Emerson LCD TV and HDTV models. This remote provides a direct replacement solution, eliminating the need for complex programming or pairing procedures. It is ready for use immediately after battery installation.



Image: Angled view of the NKF NH301UD replacement remote control, showing its ergonomic black design and button layout.

2. SETUP AND BATTERY INSTALLATION

To begin using your NKF NH301UD remote control, follow these simple steps for battery installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two (2) new AAA 1.5V alkaline batteries into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Important Note:

- Batteries are not included with the remote control.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.





Image: Rear view of the NKF NH301UD remote control with the battery compartment open, showing the slots for two AAA batteries.

3. OPERATING INSTRUCTIONS

The NKF NH301UD remote control is designed for immediate use with compatible Emerson TV models without any programming. Simply point the remote at your television and press the desired button.

3.1. Compatible TV Models

This remote control is compatible with the following Emerson TV models:

- LE320
- LC391EM3
- LC501EM3
- LE190EM3
- LE220EM3
- LE260EM3
- LE320EM3

3.2. Key Functions

The remote control features standard buttons for TV operation. Refer to the image below for a visual guide to the button layout:





Image: Front view of the NKF NH301UD remote control, displaying all buttons including power, source, number pad, volume, channel, menu, and navigation controls.

Common Button Functions

Button	Function
Power (Red Button)	Turns the TV on or off.
SOURCE	Selects input sources (e.g., HDMI, AV, Component).
Number Pad (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes TV channels up or down.
Mute (Speaker with X)	Mutes or unmutes the TV audio.
MENU	Accesses the TV's main menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options.

Button	Function
OK	Confirms selections in menus.
EXIT	Exits the current menu or function.
INFO	Displays program information.

4. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Always replace both batteries at the same time.
- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your NKF NH301UD remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's IR receiver.
- **Buttons Not Working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only specific buttons are not working, the remote might be damaged.
- **Remote Works Intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure consistent line of sight to the TV's IR sensor.

Since this is a replacement remote that requires no programming, most issues are related to batteries or line of sight.

6. SPECIFICATIONS

Feature	Detail
Model Number	NH301UD

Feature	Detail
Brand	NKF
Product Dimensions	6 x 2 x 0.67 inches
Item Weight	2.3 ounces
Batteries Required	2 x AAA 1.5V Alkaline Batteries (Not Included)
Compatible Devices	Emerson LCD TV / HDTV (Specific models listed in Section 3.1)
Special Feature	Ergonomic Design
Color	Black
Max Number of Supported Devices	1
Country of Origin	China

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For any questions or concerns regarding its functionality or compatibility, please contact the seller directly. The seller is committed to resolving any issues you may encounter. Please refer to the original product listing or your purchase documentation for specific warranty details, if applicable.

Contact Information:

For support, please reach out to the seller, SZMJ, through the Amazon messaging system or the contact details provided with your purchase.

© 2023 NKF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08SBVMTJC>

More documents and user manuals: <https://manuals.plus/>