

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lenovo](#) /

› [Lenovo Tab P11 Tablet 11" Screen 4GB RAM, 128GB Storage User Manual](#)

Lenovo ZA7R0144US

Lenovo Tab P11 Tablet User Manual

Model: ZA7R0144US

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Lenovo Tab P11 Tablet. Please read this manual thoroughly before operating the device and retain it for future reference.

The Lenovo Tab P11 features an 11-inch touchscreen, powered by a Snapdragon 662 processor with 4GB RAM and 128GB storage, running on Android. It is designed for versatile use, from entertainment to productivity.

PACKAGE CONTENTS

Upon unboxing your Lenovo Tab P11, verify that all components are present:

- Lenovo Tab P11 Tablet
- USB cable
- Power adapter
- Quick Start Guide (if included)



Image: The Lenovo Tab P11 Tablet, showcasing its 11-inch display with a vibrant wallpaper. This is the main unit of the product.

SETUP

Initial Charging

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's USB-C port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will illuminate.



Image: A close-up side view of the Lenovo Tab P11, highlighting the power button and volume rocker. These controls are essential for basic device operation.

Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the Lenovo logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off".

Initial Configuration

Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account sign-in, and security settings.

OPERATING THE TABLET

Navigation and Gestures

The Lenovo Tab P11 operates using touch gestures on its 11-inch IPS display. Common gestures include:

- **Tap:** Select an item or open an app.

- **Swipe:** Scroll through screens or lists.
- **Pinch-to-zoom:** Zoom in or out on images and web pages.
- **Long press:** Access contextual menus or move icons.



Image: The Lenovo Tab P11 connected to an external keyboard, displaying multiple open application windows. This illustrates its capability for productivity tasks.

Connecting Peripherals

The tablet supports various peripherals via Bluetooth 5.1 and its USB-C port. You can connect keyboards, mice, and other accessories.



Image: A detailed view of the bottom edge of the Lenovo Tab P11, showing the magnetic connector pins. These pins are used for attaching compatible accessories like a keyboard.

Camera Usage

The tablet features an 8 MP front camera and a 13 MP rear camera with LED flash. Open the Camera app to capture photos and videos.



Image: A person holding the Lenovo Tab P11 horizontally, engaged in a video call. This demonstrates the tablet's use for communication and its front-facing camera.

Audio Features

The Lenovo Tab P11 is equipped with four speakers and Dolby Atmos support, providing an immersive audio experience. Adjust volume using the physical volume buttons or through the system settings.

MAINTENANCE

Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal longevity. The 7500 mAh battery provides approximately 9 hours of medium-to-intense use.

Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. Navigate to *Settings > System > System update*

TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect to the power adapter and wait a few minutes before attempting to power on again. If unresponsive, perform a force restart by holding the Power button for 10-15 seconds.
Screen is unresponsive.	Restart the tablet. If the issue persists, ensure the screen is clean and free of debris. Consider a factory reset as a last resort (<i>Note: This will erase all data</i>).
Wi-Fi connection issues.	Restart your Wi-Fi router and the tablet. Forget the network in tablet settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps are crashing or freezing.	Clear the app's cache (<i>Settings > Apps > [App Name] > Storage > Clear cache</i>). Update the app from the Google Play Store. If the problem continues, uninstall and reinstall the app.

SPECIFICATIONS

Feature	Detail
Model	ZA7R0144US (also ZA7R0081SE)
Screen Size	11 Inches
Screen Resolution	2000x1200

Feature	Detail
Processor	Qualcomm Snapdragon 662 (2 GHz)
RAM	4 GB
Storage	128 GB (expandable via microSD)
Operating System	Android
Wireless Type	802.11ac, Bluetooth 5.1
Front Camera	8 MP
Rear Camera	13 MP
Battery	7500 mAh
Dimensions (LxWxH)	6.3 x 0.3 x 10.24 inches
Item Weight	1.08 pounds

WARRANTY AND SUPPORT

This refurbished product is tested and certified to look and work like new. The refurbishing process includes functionality testing, basic cleaning, inspection, and repackaging. The product ships with all relevant accessories, and may arrive in a generic box.

For technical support, warranty claims, or service inquiries, please visit the official Lenovo support website or contact their customer service. Keep your purchase receipt and product serial number (located on the device or packaging) handy for faster assistance.

Online Resources:

- Lenovo Support: <https://support.lenovo.com/>
- Lenovo Official Store: <https://www.amazon.com/stores/LENOVO/page/2C6395BA-C701-4025-9D7E-BAE1BD647EEE>