

[Manuals.plus](#) /

› [EarFun](#) /

› EarFun Air Pro Hybrid ANC Wireless Earbuds User Manual

EarFun Air Pro

EarFun Air Pro Hybrid ANC Wireless Earbuds User Manual

Model: Air Pro (TW302)

INTRODUCTION

Welcome to the EarFun Air Pro Hybrid ANC Wireless Earbuds user manual. These earbuds feature Hybrid Active Noise Cancellation (ANC) technology, Bluetooth 5.0 connectivity, and a long-lasting battery for an enhanced audio experience. This manual provides detailed instructions to help you set up, operate, and maintain your earbuds for optimal performance and longevity.

WHAT'S IN THE BOX

- Wireless Earbuds
- Charging Case
- Eartips (various sizes)
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your EarFun Air Pro earbuds and charging case.



The EarFun Air Pro wireless earbuds shown with their charging case.

HYBRID ACTIVE NOISE CANCELLATION

Hybrid Composite digital noise reduction help eliminate **38dB** of ambient noise.



This diagram illustrates the Hybrid Active Noise Cancellation technology, showing feed-forward and feedback microphones working to reduce ambient noise by up to 38dB.

10MM COMPOSITE DRIVERS

Dual 10mm composite drivers produce **25%** larger frequency bandwidth for crystal clear treble and **2 times bass**.


10mm Composite Drivers deliver x2 bass



An internal view highlighting the dual 10mm composite drivers, designed to deliver clear treble and enhanced bass.

6-MIC NOISE CANCELLATION

The enhanced 6-microphone call technology help filter out **90%** of disruptive noises during a call.

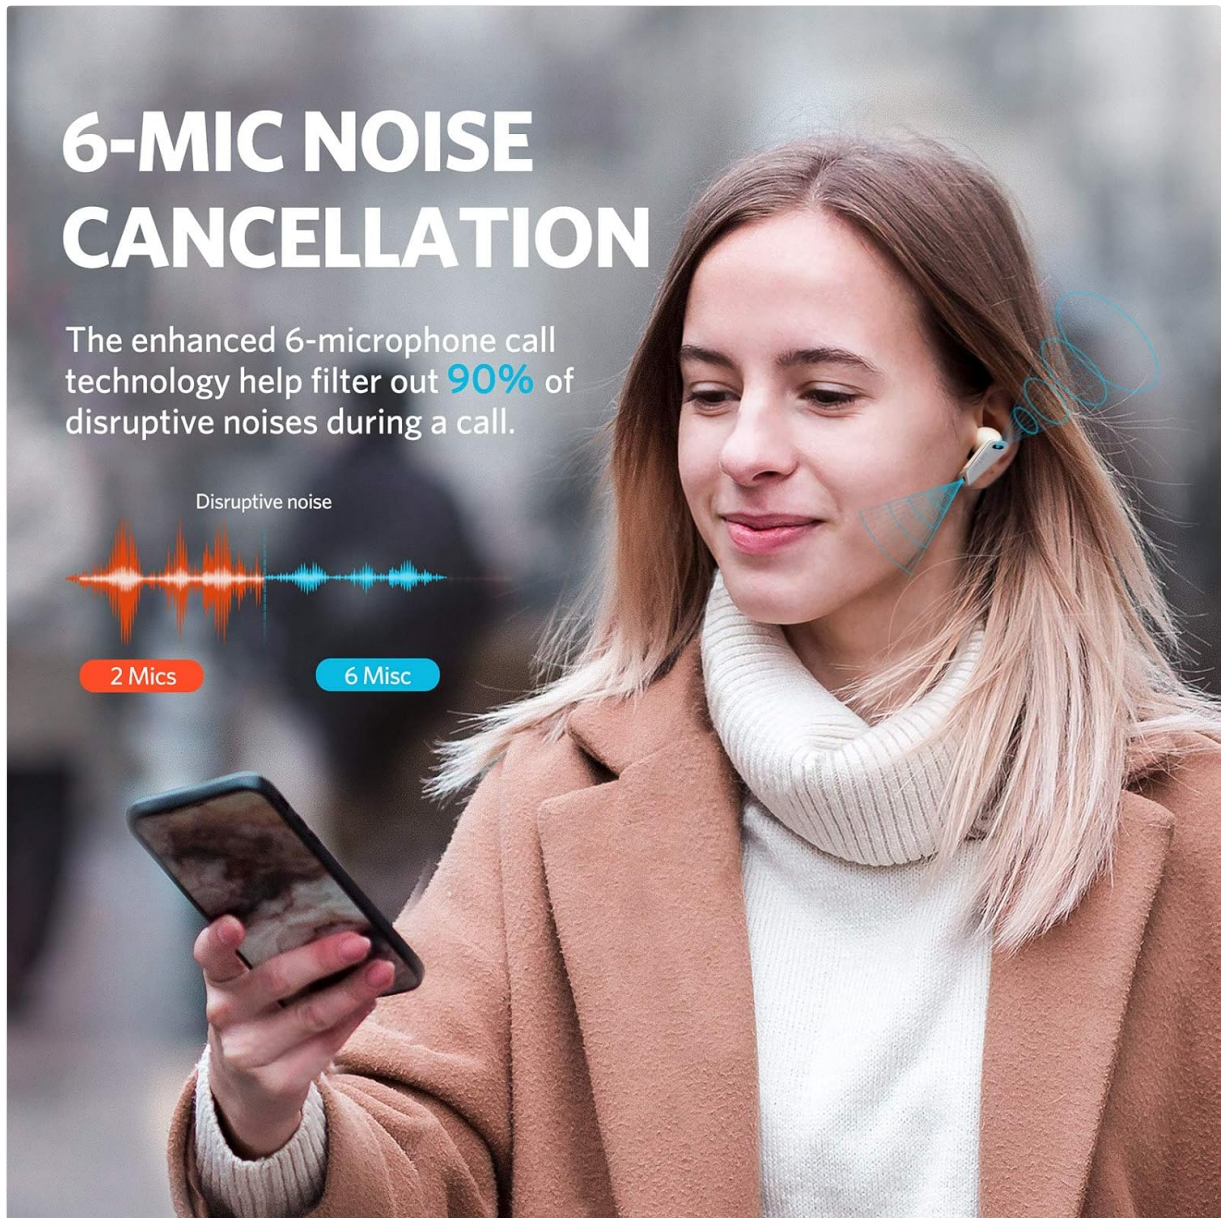

This image demonstrates how the 6-microphone system filters out disruptive background noise during phone calls, ensuring clear voice transmission.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge both the earbuds and the charging case. The charging case extends the earbuds' playtime.

- Connect the USB-C charging cable to the charging port on the case and to a power source.
- The indicator light on the case will show charging status.
- Ensure earbuds are placed correctly in the case for them to charge.
- **Important:** Dry the earbuds completely before placing them back into the charging case to prevent damage from moisture.

ALL DAY PLAY



32hrs
playtime



7hrs
for ANC mode



9hrs
for other mode



The image displays the EarFun Air Pro earbuds in their charging case, indicating up to 32 hours of total playtime, with 7 hours in ANC mode and 9 hours in other modes.

A single charge provides approximately 9 hours of listening time (7 hours with ANC on). The charging case extends total playtime to up to 32 hours.

2. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for "EarFun Air Pro" in the list of available Bluetooth devices.
4. Select "EarFun Air Pro" to connect. You will hear a confirmation tone once connected.

If pairing fails, place the earbuds back into the case, close it, and then reopen to re-enter pairing mode. For a full reset, refer to the Troubleshooting section.

3. Wearing the Earbuds

For optimal sound quality and noise cancellation, ensure a secure and comfortable fit.

- Choose the eartips that best fit your ear canals. Different sizes are provided.
- Insert the earbuds into your ears and gently twist them until they feel snug and secure.
- A good seal is crucial for effective noise cancellation and bass response.

Touch Controls

The EarFun Air Pro earbuds feature touch controls for various functions. Specific tap patterns control playback, calls, and noise control modes.

TAP CONTROL

Through **finger tap** can easily change ANC and Transparency mode, play/pause music.



A user demonstrating the tap control feature on the EarFun Air Pro earbuds to manage audio playback or calls.

Refer to the quick start guide included in the packaging for a detailed list of touch control functions (e.g., single tap, double tap, triple tap, long press for play/pause, track skip, call management, and mode switching).

Active Noise Cancellation (ANC) and Ambient Mode

The earbuds offer three listening modes:

- **Active Noise Cancellation (ANC):** Reduces ambient noise by up to 38dB, ideal for noisy environments.
- **Ambient Mode:** Allows you to hear your surroundings while listening to audio, useful for awareness in public spaces.
- **Normal Mode:** Standard listening without active noise cancellation or ambient sound passthrough.

Switch between these modes using the touch controls on the earbuds. Consult the quick start guide for the specific tap sequence.

Single Earbud Listening

You can use either the left or right earbud independently for mono listening.

SINGLE-EAR LISTENING

Either earbud can be automatically paired to your device for individual listening.



A user relaxing while listening to audio with only one EarFun Air Pro earbud.

Simply remove one earbud from the charging case, and it will automatically connect to your device if already paired. The other earbud can remain in the case or be turned off.

MAINTENANCE

Cleaning

- Regularly clean the earbuds, especially the eartips and charging contacts, with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Ensure no moisture enters the earbud openings.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

Water Resistance (IPX5)

The EarFun Air Pro earbuds are rated IPX5 water-resistant, meaning they can withstand splashes and sweat. They are not designed for swimming or submersion in water.

- Do not expose the charging case to water, as it is not water-resistant.
- Always ensure earbuds are dry before placing them in the charging case.

TROUBLESHOOTING

Earbuds Not Connecting or Only One Earbud Working

- Ensure both earbuds are charged.
- Place both earbuds back into the charging case, close the lid, and then reopen it to re-establish connection.
- **Reset Procedure:** If issues persist, place both earbuds in the charging case. Hold down the button on the case until the indicator light flashes white and green. Then, press the button twice more quickly. The light will blink solid white a couple of times, indicating a reset. Re-pair with your device.
- Forget "EarFun Air Pro" from your device's Bluetooth settings and attempt to pair again.

ANC Mode Unavailable or Not Switching

- Perform the reset procedure described above.
- Ensure earbuds are properly seated in your ears for optimal sensor function.

Poor Sound Quality or Low Bass

- Ensure the eartips provide a good seal in your ear canal. Try different sizes.
- Clean any debris from the earbud nozzles.
- Check your device's equalizer settings, if applicable.

Earbuds Disconnecting Randomly

- Ensure your device is within the Bluetooth range (up to 15 meters).
- Avoid strong electromagnetic interference.
- Perform a reset and re-pair the earbuds.

SPECIFICATIONS

Feature	Detail
Brand	EarFun
Model Name	Air Pro
Model Number	TW302
Ear Placement	In Ear
Noise Control	Active Noise Cancellation (Hybrid)

Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.0
Bluetooth Range	Up to 15 Meters
Battery Life (Earbuds)	Up to 9 hours (7 hours with ANC)
Total Playtime with Case	Up to 32 hours
Water Resistance	IPX5 (Earbuds only)
Microphone	6 Mics (for ENC Clear Call)
Drivers	Dual 10mm Composite Dynamic Drivers
Charging Port	USB-C
Weight	0.22 Kilograms (total package weight)

WARRANTY AND SUPPORT

EarFun products typically come with a limited warranty. Please refer to the warranty card included in your product packaging or visit the official EarFun website for detailed warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact EarFun customer service through their official website or the contact information provided in your product documentation.

Online Resources:

- EarFun Official Website: www.myearfun.com (Example link, actual link might vary)
- Product Support Page: Check the EarFun website for a dedicated support page for the Air Pro model.