

## Atlanta 2161

# Atlanta 2161 Children's Frog Alarm Clock User Manual

Model: 2161

## 1. INTRODUCTION

Thank you for purchasing the Atlanta 2161 Children's Frog Alarm Clock. This alarm clock is designed to be a fun and functional timepiece for children, featuring a silent quartz movement, selectable alarm sounds, and a convenient dial illumination function. Please read this manual carefully to ensure proper use and maintenance of your new alarm clock.



Figure 1: Front view of the Atlanta 2161 Children's Frog Alarm Clock.

## 2. SAFETY INSTRUCTIONS

- Keep the alarm clock away from water and high humidity.
- Do not expose the alarm clock to direct sunlight or extreme temperatures.

- Use only the specified battery type (2 x AA / LR6).
- Ensure batteries are inserted with correct polarity (+/-).
- Remove exhausted batteries promptly to prevent leakage.
- If the alarm clock will not be used for an extended period, remove the batteries.
- This product is not a toy. Adult supervision is recommended for young children.

### 3. PACKAGE CONTENTS

- 1 x Atlanta 2161 Children's Frog Alarm Clock

*Note: 2 x AA / LR6 batteries are not included and must be purchased separately.*

### 4. PRODUCT FEATURES

- **Silent Quartz Movement:** Features a silent second hand, ensuring no ticking sound to disturb sleep.
- **Selectable Alarm Sound:** Choose between a fun melody or a traditional bell sound for the alarm.
- **Dial Illumination:** Briefly illuminates the clock face by lightly pressing the front glass, useful for checking time in the dark.
- **Easy Alarm Stop:** An easily accessible alarm on/off switch is located at the top of the casing.
- **Child-Friendly Design:** Amusing frog design in green with a blue and white striped base.



Figure 2: Detailed view of the clock face and design.

## 5. SETUP

### 5.1 Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Carefully open the battery compartment cover.
3. Insert 2 x AA / LR6 batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.

4. Close the battery compartment cover securely.

## **5.2 Setting the Time**

1. On the back of the alarm clock, locate the time setting knob (usually labeled 'TIME SET' or similar).
2. Rotate this knob in either direction until the hour and minute hands display the correct current time.

## **5.3 Setting the Alarm**

1. Locate the alarm setting knob on the back of the alarm clock (usually labeled 'ALARM SET' or with an alarm icon).
2. Rotate this knob until the alarm hand points to your desired alarm time.
3. Ensure the alarm is activated using the alarm ON/OFF switch (refer to Section 6.1).





Figure 3: Back view with battery compartment and setting knobs.

## 6. OPERATING INSTRUCTIONS

### 6.1 Alarm ON/OFF Switch

The alarm ON/OFF switch is located on the top of the alarm clock. Slide the switch to the 'ON' position to activate the alarm, and to the 'OFF' position to deactivate it.

## 6.2 Dial Illumination

To briefly illuminate the clock face in the dark, lightly press the front glass of the alarm clock. The light will stay on as long as you press it and turn off when released.



*Figure 4: Dial illumination in action.*

## 6.3 Alarm Sound Selection

On the back of the alarm clock, there is a small switch or button to select between the melody alarm sound and the traditional bell alarm sound. Choose your preferred alarm type.

## 7. MAINTENANCE

### 7.1 Cleaning

To clean the alarm clock, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the clock in water.

### 7.2 Battery Replacement

When the clock starts to lose time, the alarm becomes weak, or the light dims, it is time to replace the batteries. Follow the instructions in Section 5.1 for battery installation.

## 8. TROUBLESHOOTING

- **Clock not working / Alarm not sounding:**

- Check if batteries are inserted correctly with proper polarity.
- Replace old or exhausted batteries with new ones.
- Ensure the alarm ON/OFF switch is in the 'ON' position for the alarm.

- **Light not working:**

- Ensure batteries are fresh.
- Press the front glass firmly but gently.

- **Clock losing time:**

- Replace batteries.

## 9. SPECIFICATIONS


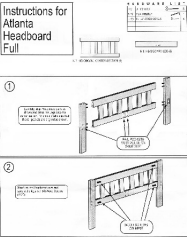


 
<b>Brand</b>	Atlanta
<b>Model Number</b>	2161
<b>Color</b>	Green
<b>Product Dimensions (L x W x H)</b>	10 x 14 x 17 cm
<b>Item Weight</b>	320 grams
<b>Material</b>	Plastic
<b>Display Type</b>	Analog
<b>Power Source</b>	Battery Powered (2 x AA required)
<b>Special Features</b>	Alarm Stop on Top, Melody or Bell Alarm, Silent Second Hand, Illumination

## 10. WARRANTY AND SUPPORT

Specific warranty information for this product may vary by region and retailer. Please refer to your purchase receipt or contact the retailer where you purchased the alarm clock for details regarding warranty coverage.

For technical support or further inquiries, please contact Atlanta customer service through their official website or the contact information provided with your product packaging.



	<p><a href="#">ATLANTA BWL 350 TS Screw Jack Gearbox: Operating and Maintenance Instructions</a></p> <p>This document provides comprehensive operating and maintenance instructions for the ATLANTA BWL 350 TS Screw Jack Gearbox. It covers installation, proper use, maintenance procedures, safety warnings, and technical specifications for industrial applications.</p>
	<p><a href="#">Atlanta Headboard Full Assembly Instructions</a></p> <p>Step-by-step assembly instructions for the Atlanta Headboard Full/Double, including hardware list, components, assembly steps, notes on mattress compatibility, and manufacturer warranty details.</p>
	<p><a href="#">Atlanta Smartwatch Serien 9720, 9721, 9730, 9731 Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für die Atlanta Smartwatch Serien 9720, 9721, 9730, 9731 und die zugehörige DaFit App. Erfahren Sie, wie Sie das Gerät einrichten, bedienen und alle Funktionen nutzen, einschliesslich Gesundheitsüberwachung und Konnektivität.</p>
	<p><a href="#">ATLANTA BWL 400 HS-Spindelhubgetriebe: Einbau- und Wartungsanleitung</a></p> <p>Umfassende Installations- und Wartungsanleitung für ATLANTA BWL 400 HS-Spindelhubgetriebe. Enthält wichtige Sicherheitshinweise, Montageanleitungen, Inbetriebnahmeverfahren und Wartungsintervalle für den sicheren und effizienten Betrieb.</p>
	<p><a href="#">Počítač ATLANTA SM5900 Návod k použití</a></p> <p>Návod k použití pro počítač ATLANTA SM5900, popisující jeho funkce, tlačítka a provozní režimy pro sledování kondice. Obsahuje nastavení, cvičební módy a důležitá upozornění.</p>



ATH-6766  
Hair dryer  
Black  
2100W  
Instruction Manual  
7/20/2019  
Ver. 2.00.2019



## [Atlanta ATH-6766 Hair Dryer Instruction Manual](#)

Instruction manual for the Atlanta ATH-6766 hair dryer, detailing safety precautions, operating instructions, technical specifications, parts identification, cleaning, and environmental disposal guidelines.