

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WE-VIBE](#) /


› [We-Vibe Tango X Bullet Vibrator User Manual](#)

WE-VIBE Tango X

We-Vibe Tango X Bullet Vibrator User Manual

INTRODUCTION

The We-Vibe Tango X is a compact and powerful bullet vibrator designed for targeted stimulation. It features a body-safe silicone construction, multiple intensity levels, and versatile vibration patterns. This manual provides essential information for the safe and effective use, care, and maintenance of your Tango X.

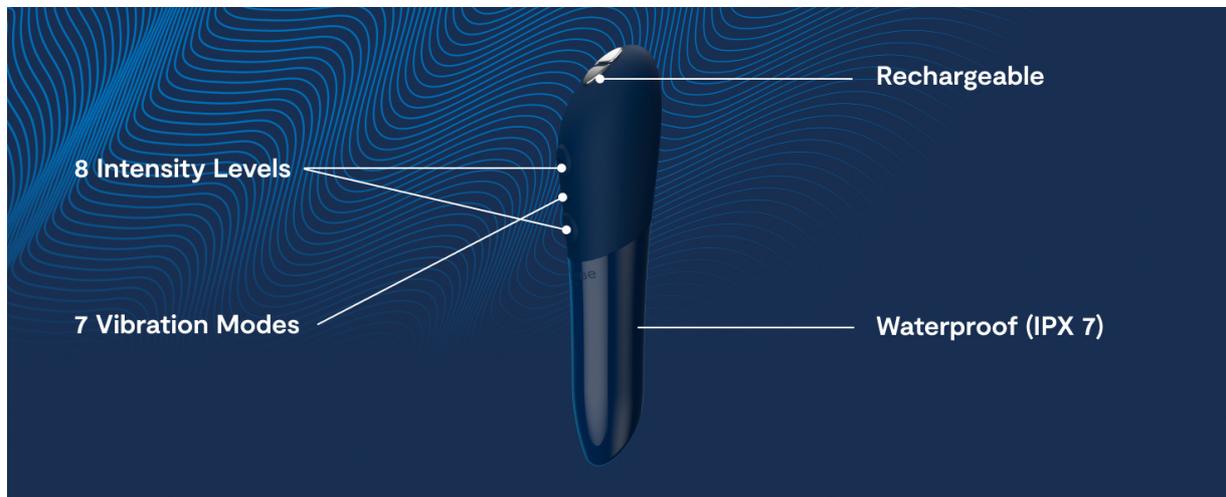

The We-Vibe Tango X, a powerful bullet vibrator designed for precise stimulation.

SAFETY INFORMATION

Please read all safety instructions before using your We-Vibe Tango X.

- **Material Safety:** The Tango X is made from body-safe silicone.
- **Lubricant Compatibility:** Use only water-based lubricants with your Tango X. Silicone-based lubricants can damage the silicone material.
- **Cleaning:** Always clean the device thoroughly before and after each use.
- **Damage:** Do not use the device if it appears damaged or if the silicone is torn.
- **Medical Conditions:** Consult a healthcare professional before use if you have any medical

conditions or are pregnant.

- **Storage:** Keep out of reach of children.

SETUP

First Use and Charging

Before the first use, fully charge your Tango X. The device comes with a magnetic charging cable.

1. Locate the magnetic charging port at the base of the Tango X.
2. Connect the magnetic charging cable to the port. Ensure a secure connection.
3. Plug the USB end of the cable into a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light on the device will illuminate to show it is charging.
5. A full charge typically takes approximately 2 hours and provides up to 2 hours of play time.



The magnetic charging port at the base of the Tango X.

OPERATING INSTRUCTIONS

Power On/Off

To turn the Tango X on, press and hold the '+' button for a few seconds until the device vibrates. To turn it off, press and hold the '-' button until the vibrations stop.

Adjusting Intensity and Modes

The Tango X offers 8 intensity levels and 7 versatile vibration patterns.

- Press the '+' button to increase the vibration intensity.
- Press the '-' button to decrease the vibration intensity.
- Press the central button (between '+' and '-') to cycle through the 7 different vibration modes.




Overview of Tango X features and controls.

Using Your Tango X

The Tango X is designed for precise, targeted stimulation. Its ergonomic shape and flat tip allow for versatile use.

- Hold the device comfortably in your hand.
- Apply the tip to desired areas for stimulation.
- Experiment with different angles and pressure to find what is most pleasurable.

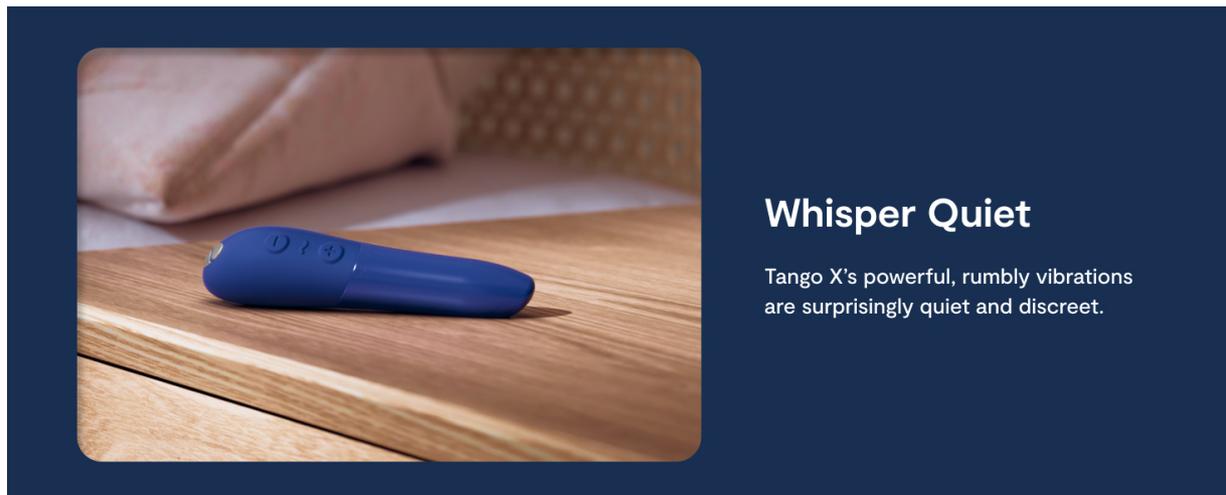

Illustrations demonstrating various ways to use the Tango X.

Official product video demonstrating the We-Vibe Tango X in use and its features.

MAINTENANCE

Cleaning

The Tango X is waterproof (IPX7 rated), making it easy to clean.

1. Wash the device with warm water and a mild, toy-safe soap or specialized toy cleaner.
2. Rinse thoroughly to remove all soap residue.
3. Dry completely with a lint-free cloth before storing.

Play with your Partner

Tango X features a silicone grip that fits perfectly in the palm of your hand, meaning there is no limit to the fun you and your partner can explore together.



The Tango X is waterproof, allowing for easy cleaning and use in water.

Storage

Store your Tango X in a clean, dry place away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent potential damage or reactions.

TROUBLESHOOTING

- **Device not turning on or charging:** Ensure the magnetic charging cable is securely connected and the device is fully charged. If the issue persists, try a different USB power source.
- **Weak vibrations:** A low battery can cause weak vibrations. Fully charge the device.
- **Unusual noise or operation:** Discontinue use immediately and contact customer support if you notice any unusual sounds, smells, or changes in performance.
- **Water ingress:** Although waterproof, if you suspect water has entered the device, stop using it and allow it to dry completely. Do not attempt to open the device.

SPECIFICATIONS

Feature	Detail
Model Name	Tango X
Brand	WE-VIBE
Material	Silicone
Waterproof Rating	IPX7
Battery	1 Nonstandard Battery (included)
Battery Life	Up to 2 hours per charge
Product Dimensions	3.94 x 2.76 x 6.3 inches

WARRANTY AND SUPPORT

The We-Vibe Tango X comes with a manufacturer's warranty. For detailed warranty information, product support, or to report an issue, please refer to the official We-Vibe website or contact their customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, visit the [WE-VIBE Store on Amazon](#).