

Manuals.plus /

› Philips /

› Philips QC5115/13 Hair Clipper User Manual

## Philips QC5115/13

# Philips QC5115/13 Hair Clipper User Manual

Model: QC5115/13

## IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **WARNING:** Do not use the appliance on children's skin or sensitive body areas.
- Avoid contact with water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always ensure the appliance is switched off and disconnected from the mains before cleaning or maintenance.
- Exercise caution with fingers and eyes when operating the appliance.
- Keep the appliance dry.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## PRODUCT OVERVIEW

The Philips QC5115/13 Hair Clipper is designed for easy and quiet hair cutting at home. It features self-sharpening stainless steel blades and an adjustable comb with 11 length settings.



**Image 1:** The product packaging for the Philips QC5115/13 Hair Clipper, highlighting its 'Family Clipper' designation, ultra-quiet operation, 11 length settings, and self-sharpening blades. The clipper itself is visible on the right side of the box.



**Image 2:** An angled view of the Philips QC5115/13 Hair Clipper, showcasing its ergonomic black body and the adjustable comb attachment. The Philips logo is visible on the side.



**Image 3:** A side profile of the Philips QC5115/13 Hair Clipper, clearly displaying the length adjustment dial with numerical settings from 3mm to 21mm. The transparent

comb attachment is also visible.

## GETTING STARTED

### Unpacking

Carefully remove all components from the packaging. Ensure all parts are present:

- Philips QC5115/13 Hair Clipper
- Adjustable comb attachment
- Cleaning brush
- Power cord

### Attaching the Comb

The clipper comes with one adjustable comb. To attach it:

1. Ensure the clipper is switched off.
2. Align the comb with the grooves on the clipper head.
3. Gently push the comb onto the clipper until it clicks into place.

### Connecting to Power

This is a corded appliance. Connect the power cord to the clipper and then plug it into a suitable mains power outlet. Ensure the voltage matches your local supply.

## OPERATION

### Adjusting Hair Length

The clipper features an integrated comb with 11 length settings, ranging from 3mm to 21mm. You can also use the clipper without the comb for a 0.5mm cut.

1. To adjust the length, rotate the dial located on the side of the clipper.
2. Select the desired length setting. The numbers on the dial correspond to the cutting length in millimeters.
3. For the shortest cut (0.5mm), remove the comb attachment.

### Turning On/Off

To turn the clipper on or off, slide the power switch located on the front of the appliance.

### Hair Cutting Tips

- Ensure hair is clean and dry before cutting.
- For best results, comb the hair in the direction of growth.
- Move the clipper against the direction of hair growth, using slow, even strokes.
- Start with a longer length setting and gradually reduce it if a shorter cut is desired.
- Regularly tap or brush off hair clippings from the comb and blades during use to maintain optimal performance.

# MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Philips QC5115/13 Hair Clipper.

## Cleaning the Blades and Comb

1. Switch off the clipper and unplug it from the mains.
2. Remove the comb attachment.
3. Use the provided cleaning brush to remove any hair clippings from the blades and the comb.
4. The blades are self-sharpening and do not require oiling.
5. Do not rinse the clipper or its blades under water, as it is not waterproof.

## Storage

Store the clipper in a dry place, away from direct sunlight and out of reach of children.

# TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in correctly or no power from outlet.	Check if the power cord is securely plugged into both the clipper and a working mains outlet. Test the outlet with another appliance.
Clipper pulls hair or cuts unevenly.	Blades are clogged with hair or comb attachment is not properly secured.	Switch off and unplug the clipper. Clean the blades and comb thoroughly. Ensure the comb is securely attached.
Clipper is unusually loud.	Hair clippings obstructing the motor or blades.	Switch off and unplug the clipper. Clean the blades and internal mechanism carefully with the brush.

# SPECIFICATIONS

**Model:** Philips QC5115/13

**Power Source:** Corded Electric

**Blade Material:** Stainless Steel

**Length Settings:** 11 (3mm to 21mm), 0.5mm without comb

**Special Features:** Self-sharpening blades, ultra-quiet operation

**Color:** Black, Silver

**Dimensions (L x W x H):** 10 x 10 x 10 mm

**Weight:** 285 grams

# WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Philips website. Keep your proof of purchase for warranty claims.

**Online Support:** [www.philips.com/support](http://www.philips.com/support)

