

NKF NS-RC4NA-18

NKF NS-RC4NA-18 Remote Control User Manual

For Insignia TV Models: NS-22D420NA18, NS-32D220NA18, NS-40D420MX16, NS-40D420NA16, NS-43D420NA18, NS-48D420NA16, NS-50D421NA16, NS-RC4NA-16, NS-RC4NA-17

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your NKF NS-RC4NA-18 Remote Control. This remote is designed as a replacement for various Insignia TV models, ensuring seamless control of your television functions.

Key features of this remote control include:

- No programming or pairing required for immediate use.
- Direct compatibility with specified Insignia TV models.
- Ergonomic design for comfortable handling.

2. SETUP

2.1 Installing Batteries

The NS-RC4NA-18 remote control requires two (2) AAA 1.5V alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment with AAA batteries installed. Ensure correct polarity.

2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the

remote control towards your Insignia TV and begin operation.

3. OPERATING YOUR REMOTE CONTROL

The NS-RC4NA-18 remote control provides access to all standard functions of your compatible Insignia TV. Familiarize yourself with the button layout and their respective functions.



Figure 2: Front view of the NS-RC4NA-18 Remote Control.

3.1 Button Functions

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the video input source (e.g., HDMI 1, AV, Component).
0-9	Directly selects TV channels.
MENU	Accesses the TV's main menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options and settings.
ENTER	Confirms selections in menus.
EXIT	Exits the current menu or screen.
FAVORITE	Accesses favorite channels list.
INFO*	Displays current channel information.
ACC	Accesses accessibility options.
CC	Activates or deactivates Closed Captions.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
MUTE	Mutes or unmutes the TV audio.
SLEEP	Sets the TV sleep timer.
ASPECT	Changes the screen aspect ratio.
GAME	Activates game mode (if supported by TV).
PICTURE	Accesses picture settings.
AUDIO	Accesses audio settings.
Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback for connected devices or TV's built-in media player.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To clean your remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

- **Remote Control Not Responding:**
 - Ensure the remote has fresh AAA batteries installed with correct polarity.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote control is pointed directly at the TV.
 - Confirm that the TV is powered on.
- **Buttons Not Working:**
 - Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be obstructing button presses.
 - If only specific buttons are not working, the remote might be damaged.
- **Remote Control Range is Limited:**
 - Replace batteries with new ones. Low battery power can reduce the remote's effective range.
 - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

6. SPECIFICATIONS

Model Number	NS-RC4NA-18
Brand	NKF
Compatible Devices	Insignia Televisions (Specific models listed in Introduction)
Connectivity Technology	Infrared (IR)
Batteries Required	2 x AAA 1.5V Alkaline Batteries (not included)
Product Dimensions	6 x 2 x 0.8 inches (approximately)
Item Weight	2.9 ounces (approximately)

7. SUPPORT AND CONTACT INFORMATION

For any questions or assistance regarding your NKF NS-RC4NA-18 Remote Control, please contact the manufacturer or seller directly. Refer to your purchase documentation for specific contact details.

Note: This product is a replacement remote control and may not be manufactured by Insignia. For Insignia TV specific support, please refer to your TV's original documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question