

[Manuals.plus](#) /

› [LUROON](#) /

› LUROON Secure Key Box Wall Mount User Manual

LUROON 697278216747

LUROON Secure Key Box Wall Mount User Manual

Model: 697278216747

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your LUROON Secure Key Box. Please read this manual thoroughly before using the product to ensure proper function and security.

The LUROON Secure Key Box is designed to provide a secure and convenient solution for storing keys, offering robust protection against unauthorized access. Its durable construction makes it suitable for both indoor and outdoor environments.



Image 1.1: LUROON Secure Key Box with keys stored inside.

2. PRODUCT OVERVIEW

2.1 Key Features

- **High Security:** Constructed from high-quality aluminum and zinc alloy, resistant to hammering, sawing, and prying.
- **Weather Resistant:** Designed to withstand outdoor elements like wind and sun, ensuring long-term durability.
- **4-Digit Combination Lock:** Resettable combination with 10,000 possible combinations for enhanced security.
- **Compact and Portable Design:** Mini size with ample internal capacity for multiple keys, room cards, or bank cards.
- **Easy Installation:** Wall-mountable design with all necessary hardware included.

2.2 Dimensions and Components

The external dimensions of the key box are approximately 7.5 cm (2.95 inches) in length, 3.5 cm (1.38 inches) in width, and 9.5 cm (3.74 inches) in height. The internal dimensions are approximately 7.0 cm (2.76 inches) in length, 2.9 cm (1.14 inches) in width, and 8.3 cm (3.27 inches) in height.



Image 2.1: Product dimensions and internal capacity.



Image 2.2: Overview of key features and internal storage.



Image 2.3: Versatile application of the key box in different environments.

3. SETUP AND INSTALLATION

3.1 Package Contents

Before installation, ensure all components are present:

- 1 x LUROON Secure Key Box
- 4 x Robust Screws
- 4 x Plastic Expansion Plugs
- 1 x User Manual




Image 3.1: Package contents.

3.2 Wall Mounting Steps

Follow these steps to securely mount your key box:

1. **Mark Screw Location Holes:** Place the key box on the desired wall surface and use a pencil to mark the four screw holes.
2. **Drill Holes:** Use a drill to create four holes at the marked locations. Ensure the drill bit size is appropriate for the expansion plugs.
3. **Insert Expansion Plugs:** Gently tap the plastic expansion plugs into the drilled holes until they are flush with the wall surface.
4. **Install the Box:** Align the key box with the holes, insert the screws, and tighten them securely to fix the box to the wall.

INSTALL STEPS

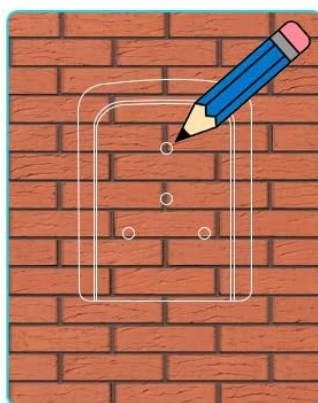

1. Mark screw location holes



2. Drilling four holes



3. Nail into expanded collar



4. Install the box with screws

Package Included



4 x Screw



4 x Expansion Plug



In 5 languages (UK/DE/FR/IT/ES)



Main Product (Back)



Main Product (Front)

Image 3.2: Installation steps for wall mounting.

4. OPERATING INSTRUCTIONS

4.1 Opening the Key Box (Default Code)

The key box comes with a default combination of **0-0-0-0**. To open:

1. Dial the default code (0-0-0-0) on the combination wheels.
2. Pull down the cover to open the key box.

4.2 Resetting Your Password

You can set your own personalized 4-digit combination. There are 10,000 unique combinations available.

1. **Step 1:** Dial the current code (default 0-0-0-0 or your last set code) to open the key box.
2. **Step 2:** Inside the key box, locate the RESET lever. Push the RESET lever from position A to position B.

3. **Step 3:** With the lever in position B, rotate the dials to set your new desired 4-digit password.
4. **Step 4:** Push the RESET lever back to position A. Your new password is now set.

WHY WE NEED A SECURE KEY STORAGE LOCK BOX?

Never take a risk to hide keys under the carpet, flowerpot or doormat, Really convenient and safe with LUROON Key safes.



Put under the carpet



Put under the flower pot

Image 4.1: Steps to reset your key box password.

4.3 Important Tips for Password Management

- **Record Your Password:** Always make sure to record your password by taking a photo or writing it down after each password reset. If you forget the code, there is no way to recover it.
- **Avoid Simple Combinations:** It is NOT recommended to use simple combinations such as "0-0-0-0", as these can be easily cracked.

5. MAINTENANCE

To ensure the longevity and smooth operation of your LUROON Secure Key Box, consider the following maintenance

tips:

- **Regular Dial Rotation:** It is recommended to rotate the combination dials weekly. This helps to keep the internal mechanisms moving freely and prevents them from seizing up, especially in outdoor environments.
- **Cleaning:** Periodically wipe down the exterior of the key box with a damp cloth to remove dirt and debris. Avoid using harsh chemicals or abrasive cleaners.
- **Lubrication (if needed):** If the dials become stiff over time, a small amount of silicone-based lubricant can be applied to the moving parts, but this is generally not required for normal operation.

6. TROUBLESHOOTING

6.1 Cannot Open the Key Box

- **Incorrect Combination:** Double-check that you are entering the correct 4-digit combination. Ensure each dial is precisely aligned with the indicator mark.
- **Forgotten Password:** If you have forgotten your password and did not record it, the key box cannot be opened. There is no master key or backdoor to reset the combination without knowing the current code.
- **Stiff Dials:** If the dials are stiff, try rotating them back and forth a few times to loosen them. Refer to the Maintenance section for lubrication tips.

6.2 Key Box Not Closing Properly

- **Obstruction:** Ensure there are no keys or other items obstructing the closing mechanism inside the box.
- **Dials Not Scrambled:** After closing, always scramble the dials to lock the box and prevent unauthorized access.

7. SPECIFICATIONS

Feature	Detail
Brand	LUROON
Model Number	697278216747
Color	Black
Material	Aluminum and Zinc Alloy
External Dimensions (L x W x H)	7.5 x 3.5 x 9.5 cm (2.95 x 1.38 x 3.74 inches)
Internal Dimensions (L x W x H)	7.0 x 2.9 x 8.3 cm (2.76 x 1.14 x 3.27 inches)
Weight	280 Grams
Lock Type	4-Digit Resettable Combination
Mounting Type	Wall Mount

Assembly Required

Yes (for mounting)

8. WARRANTY AND SUPPORT

LUROON is committed to providing high-quality products and excellent customer service.

- **Professional Customer Support:** We offer 24/7 professional customer support to assist you with any questions or issues.
- **Worry-Free Replacement:** Enjoy a worry-free replacement period of 2 years from the date of purchase.

Your feedback and suggestions are highly appreciated as we continuously strive to improve our products and services.



Image 8.1: LUROON customer support team.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question