

Ambiano B08SKP8CMC

Ambiano Mini Food Chopper Instruction Manual

Model: B08SKP8CMC

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Ambiano Mini Food Chopper. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit, cord, or plug in water or other liquids.
- **Blade Safety:** The blades are very sharp. Handle with extreme care during assembly, disassembly, and cleaning. Always hold the blade assembly by the plastic hub.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Supervision:** Close supervision is necessary when any appliance is used near children or by persons with reduced physical, sensory, or mental capabilities.
- **Usage:** Do not use the appliance for anything other than its intended purpose. Avoid processing excessively hard foods that could damage the blades or motor.
- **Maintenance:** Unplug the appliance from the outlet before cleaning, assembling, or disassembling parts.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Ambiano Mini Food Chopper.



Image 1: The Ambiano Mini Food Chopper, showing the motor unit, processing bowl, and lid.



Image 2: Close-up of the top of the chopper, highlighting the control button for operation.



Image 3: The removable stainless steel blade assembly, featuring two sharp blades.

Components:

- **Motor Unit:** Contains the motor and control button.
- **Lid:** Transparent lid with a safety interlock mechanism.
- **Blade Assembly:** Removable stainless steel blades for chopping and mixing.
- **Processing Bowl:** Transparent bowl with measurement markings.
- **Anti-slip Feet:** Located on the base for stability during operation.

3. SETUP

Follow these steps to assemble your mini food chopper before first use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the processing bowl, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry completely. The motor unit should only be wiped with a damp cloth.
3. **Place Bowl:** Position the processing bowl onto the motor unit base, ensuring it is securely seated.
4. **Insert Blade:** Carefully place the blade assembly onto the central shaft inside the processing bowl. Ensure it sits correctly.
5. **Add Ingredients:** Place your desired ingredients into the processing bowl. Do not overfill beyond the

maximum fill line.

6. **Secure Lid:** Place the lid onto the processing bowl and twist or align it until it locks securely into place. The appliance will not operate if the lid is not properly secured.

4. OPERATING INSTRUCTIONS

Your Ambiano Mini Food Chopper is designed for chopping and mixing various food items.



Image 4: The mini food chopper actively processing vegetables, demonstrating its function.

1. **Preparation:** Ensure the chopper is assembled correctly with ingredients inside and the lid securely locked.
2. **Connect Power:** Plug the power cord into a suitable electrical outlet.

3. **Operation:** Press and hold the control button on top of the motor unit to start chopping. Release the button to stop.
4. **Pulsing Technique:** For best results and to achieve desired consistency, use short pulses rather than continuous operation. This allows ingredients to fall back onto the blades and prevents over-processing.
5. **Check Consistency:** Release the button and remove the lid to check the consistency of your ingredients. If needed, replace the lid and continue processing.
6. **Finish:** Once processing is complete, release the button and unplug the appliance from the power outlet.
7. **Remove Ingredients:** Carefully remove the lid, then carefully lift out the blade assembly by its plastic hub. Scrape out the processed food from the bowl.

Tips for Best Results:

- Cut larger ingredients into smaller, uniform pieces before placing them in the bowl.
- Do not overload the bowl. Process in batches if necessary.
- For finer chopping, process for longer or use more frequent pulses.
- For mixing liquids, ensure the lid is tightly sealed to prevent splashes.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your Ambiano Mini Food Chopper.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the lid, blade assembly, and processing bowl from the motor unit.
3. **Wash Parts:** The processing bowl, lid, and blade assembly are dishwasher safe. Alternatively, wash them by hand in warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots or corrosion on the blades.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Storage:** Once all parts are clean and dry, reassemble the chopper or store the components neatly. Store in a dry place.

Caution:

- Handle the blades with extreme care.
- Do not use abrasive cleaners or scouring pads on any part of the appliance.

6. TROUBLESHOOTING

If you encounter issues with your Ambiano Mini Food Chopper, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Lid not properly secured.	Ensure the power cord is securely plugged into a working outlet. Check that the lid is correctly aligned and locked into place.
Blades are not rotating.	Blade assembly not correctly seated. Overloaded bowl.	Ensure the blade assembly is properly placed on the central shaft. Reduce the amount of food in the bowl.
Food is unevenly chopped.	Ingredients are too large or unevenly sized. Not using pulsing technique.	Cut ingredients into smaller, uniform pieces. Use short pulses and shake the bowl gently between pulses to redistribute food.
Motor smells or overheats.	Continuous operation or overloading.	Stop operation immediately and unplug the appliance. Allow it to cool down for at least 30 minutes. Do not operate continuously for more than 1 minute. Reduce load.

7. SPECIFICATIONS

Technical details for the Ambiano Mini Food Chopper, Model B08SKP8CMC.

- **Brand:** Ambiano
- **Model:** B08SKP8CMC
- **Power:** 200 Watts
- **Number of Speeds:** 1
- **Blade Material:** Stainless Steel
- **Power Source:** Corded Electric
- **Recommended Uses:** Chopping, Mixing
- **Product Dimensions:** Approximately 19.5 x 15.3 x 12.3 cm
- **Product Weight:** Approximately 857 g
- **Care:** Dishwasher safe parts (bowl, lid, blade assembly)

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation provided at the time of purchase or contact Ambiano customer service through their official website or designated support channels. Keep your proof of purchase for warranty claims.