

[Manuals.plus](#) /

> [Devoko](#) /

> Devoko 7 Pieces Outdoor Sectional Sofa Patio Furniture Sets Instruction Manual

## Devoko DV20NSS14RD

# Devoko 7 Pieces Outdoor Sectional Sofa Patio Furniture Sets Instruction Manual

Model: DV20NSS14RD

Brand: Devoko

## INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Devoko 7 Pieces Outdoor Sectional Sofa Patio Furniture Set. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.



Image: The complete Devoko 7-piece outdoor sectional sofa set, featuring black wicker frames, vibrant red cushions, and a central glass-top coffee table. The set includes various seating modules for flexible arrangement.

## SAFETY INFORMATION

Adhere to the following safety guidelines to prevent injury and damage to the product:

- Keep the furniture away from direct sunlight and excessive heat sources to prevent material degradation and fading.
- Avoid prolonged exposure to rain and harsh weather conditions. Use a protective cover when the furniture is not in use, especially during adverse weather.
- Ensure all connections are securely tightened before and during use. Periodically check and re-tighten fasteners as needed.
- Do not exceed the weight limit of 330 pounds per seating unit.
- Handle the tempered glass tabletop with care to avoid chipping or breakage.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. The Devoko 7-piece set typically includes:

- 2 x Corner Chairs
- 4 x Armless Chairs
- 1 x Glass Coffee Table
- 7 x Seat Cushions (Red)
- 6 x Back Cushions (Red)
- Assembly Hardware (screws, washers, Allen wrench)
- Installation Instruction Manual (PDF available online)

*Note: The product is shipped in multiple boxes. If you only receive one or two boxes, please not worry, the other box is on the way to your house.*



# MODERN & COMFORTABLE

Better to decorate your house

Image: An overhead view displaying the various components of the sofa set laid out, including the wicker frames for the chairs and table, and the red cushions.

## SETUP AND ASSEMBLY

Assembly is required for this furniture set. It is recommended to have at least two people for assembly. An installation manual (PDF) is available for detailed steps: [Download Installation Manual](#).

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches. Identify each part using the provided parts list in the manual.
2. **Assemble Chair Frames:** Follow the instructions in the PDF manual to connect the frame pieces for each chair (corner and armless) using the provided screws and Allen wrench. Do not fully tighten screws until all pieces are aligned.
3. **Assemble Coffee Table:** Connect the frame pieces for the coffee table. Once the frame is assembled, carefully place the tempered glass top onto the table.
4. **Final Tightening:** Once all frames are assembled and aligned, fully tighten all screws. Ensure stability.
5. **Place Cushions:** Position the seat and back cushions onto the assembled chairs.



# SECTIONAL & SUITABLE

Combine freely as needed

Image: A detailed view of the assembly process, highlighting the connection points and the use of the provided tools to secure the furniture frame.

## OPERATING INSTRUCTIONS

Your Devoko outdoor sectional sofa is designed for flexible arrangement and comfortable outdoor living.

- **Arrangement:** The modular design allows you to freely rearrange the corner and armless chairs into various configurations to suit your space and occasion, such as an L-shape, U-shape, or individual seating units.
- **Comfort:** The high-elastic and thickened sponge cushions provide comfort for sitting or lounging.
- **Weight Distribution:** Distribute weight evenly across the seating surfaces. Avoid standing or jumping on the furniture.




Image: The sectional sofa set configured in an L-shape, demonstrating its versatility in an outdoor patio setting with a swimming pool in the foreground.

## MAINTENANCE

Regular maintenance will extend the life and appearance of your outdoor furniture set.

- **Cleaning Wicker:** Wipe the PE wicker frames with a damp cloth to remove dust and dirt. For stubborn stains, use a mild soap solution and rinse thoroughly. Dry completely.
- **Cushion Care:** The cushions are water-resistant. For general cleaning, wipe with a damp cloth. For deeper cleaning, use a mild detergent and water, then air dry. Ensure cushions are completely dry before storing or covering to prevent mildew. The cushion covers are not removable.
- **Glass Tabletop:** Clean the tempered glass tabletop with a glass cleaner and a soft cloth. Avoid abrasive cleaners or scouring pads.
- **Protection:** Use a weather-resistant furniture cover when the set is not in use, especially during prolonged periods of rain, snow, or intense sunlight, to prevent fading and wear.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten as necessary to maintain

structural integrity.

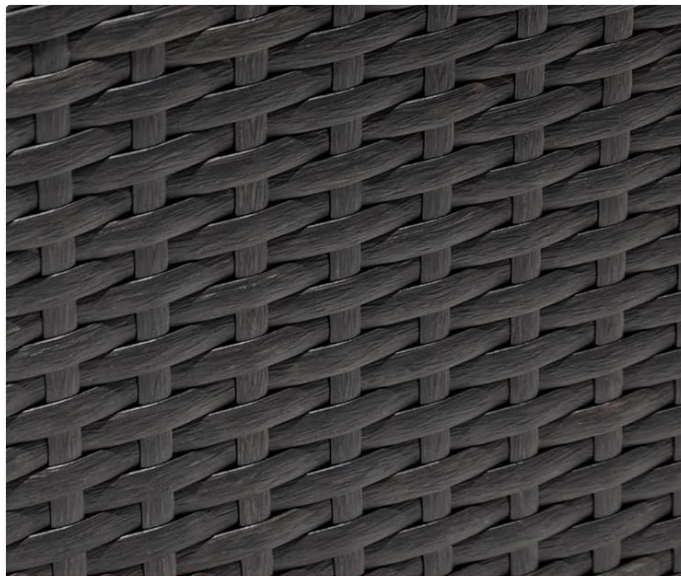

**All-weather PE rattan**



**Thickened Cushion**



**Tempered glass**



**Wider armrests**

Image: A collage of close-up images detailing the materials: the durable PE rattan weave, the thickness of the cushions, the smooth tempered glass tabletop, and the design of the armrests.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your Devoko outdoor furniture set.

Problem	Possible Cause	Solution
Furniture feels wobbly or unstable.	Loose assembly screws. Uneven ground.	Check and tighten all assembly screws. Move the furniture to a level surface or use shims under legs if necessary.
Cushions blow away easily.	Lightweight cushions. Windy conditions.	Store cushions indoors during strong winds. Consider using outdoor furniture clips or non-slip mats under cushions.

Problem	Possible Cause	Solution
Cushions are fading.	Prolonged exposure to direct sunlight.	Use a furniture cover when not in use. Position the furniture in a shaded area if possible.
Glass tabletop slides.	Suction cups not adhering properly or missing.	Ensure suction cups are clean and dry before placing the glass. Press firmly to create a seal. If missing, contact customer support for replacements.

## SPECIFICATIONS

Feature	Detail
Brand	Devoko
Model Number	DV20NSS14RD
Product Dimensions	101.02"D x 50.51"W x 25"H (Overall Sectional)
Item Weight	59.54 Pounds
Color	Red (Cushions), Brown (Frame)
Material	Polyethylene (PE) Rattan, Alloy Steel (Frame), Foam (Fill), Tempered Glass (Tabletop)
Number of Pieces	7 (2 corner chairs, 4 armless chairs, 1 coffee table)
Seat Depth	23.77 inches
Seat Height	15 Inches
Weight Limit	330 Pounds (per seating unit)
Special Feature	Water Resistant Cushions
Assembly Required	Yes
Cushion Construction	Foam-based, 3" thickness
Product Care Instructions	Wipe with Damp Cloth, Wipe with Dry Cloth



# HIGH ELASTIC CUSHION

Enjoy a leisurely afternoon

Image: A technical diagram illustrating the key dimensions of the assembled sectional sofa and coffee table, providing measurements for planning your outdoor space.

## WARRANTY AND SUPPORT

Devoko offers a limited warranty on this product. For specific warranty details, please refer to the documentation included with your purchase or contact Devoko customer support.

### Protection Plans

Additional protection plans may be available for purchase to extend coverage beyond the standard warranty:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)

### Customer Support

For any questions, concerns, or assistance with your Devoko product, please contact the seller, devokowholesale, or refer to the

customer support options provided at the point of purchase. You can also visit the official Devoko store for more information: [Devoko Store](#).

This product is eligible for 30-day easy returns through the retailer.

