



[Manuals.plus](#) /

> [Goshyda](#) /

> Goshyda KX-T6001CID Big Button Corded Telephone User Manual

Goshyda KX-T6001CID

Goshyda KX-T6001CID Big Button Corded Telephone User Manual

Model: KX-T6001CID | Brand: Goshyda

INTRODUCTION

Thank you for choosing the Goshyda KX-T6001CID Big Button Corded Telephone. This manual provides detailed instructions to help you set up, operate, and maintain your new telephone. Please read this manual thoroughly before use to ensure proper functionality and to take full advantage of its features.

SAFETY INFORMATION

- Do not expose the telephone to water or moisture.
- Avoid placing the telephone in direct sunlight or near heat sources.
- Use only the provided telephone line cord.
- Do not attempt to open or repair the telephone yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Handset
- 1 x Telephone Base Unit
- 1 x Handset Cord
- 1 x Telephone Line Cord
- 1 x User Manual



Image: The Goshyda KX-T6001CID telephone, showing the base unit, handset, and coiled cord.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your telephone.



- ✓ LCD brightness level adjustable in five levels.
- ✓ 10 groups of double key memory function.
- ✓ 1-99 hours do not disturb function.

Image: Front view of the telephone, highlighting the LCD display, large numeric keypad, and function buttons.

Keypad and Display:

- **Numeric Keypad (0-9, *, #):** For dialing phone numbers.
- **LCD Display:** Shows caller ID, time, date, and menu options.
- **M1/M2 Buttons:** One-touch memory dialing keys.
- **SET/STORE Button:** Used for entering settings menu and saving entries.
- **UP/DOWN Buttons:** Navigate through menu options or adjust volume.
- **RING Button:** Adjust ringer volume.
- **VOL Button:** Adjust earpiece/speaker volume.
- **FL/BRT (Flash/Brightness) Button:** Flash function for call waiting, also adjusts LCD brightness.
- **REDIAL Button:** Redials the last dialed number.
- **H.F (Hands-Free) Button:** Activates speakerphone mode.



Image: A close-up view of the large, easy-to-read buttons on the telephone's keypad.

SETUP

1. Connecting the Telephone:

1. Connect one end of the coiled handset cord to the handset and the other end to the handset jack on the left side of the telephone base unit.
2. Connect one end of the telephone line cord to the LINE jack on the back of the telephone base unit.
3. Connect the other end of the telephone line cord to your wall telephone jack.





Image: The telephone line cord, used to connect the phone to the wall jack.

2. Initial Settings:

Upon initial connection, the LCD display may prompt you to set the date and time. Follow the on-screen instructions using the **UP** and **DOWN** buttons to adjust values and the **SET/STORE** button to confirm.

OPERATING INSTRUCTIONS

Making a Call:

1. Lift the handset or press the **H.F** button for speakerphone.
2. Dial the desired phone number using the numeric keypad.
3. Wait for the call to connect.
4. To end the call, replace the handset or press the **H.F** button again.

Answering a Call:

When the phone rings, lift the handset or press the **H.F** button to answer.

Redialing:

Lift the handset or press **H.F**, then press the **REDIAL** button to call the last dialed number.

Using Memory Keys (M1/M2):

Storing a Number:

1. Lift the handset or press **H.F**.
2. Press **SET/STORE**.
3. Dial the phone number you wish to store.
4. Press **SET/STORE** again.
5. Press either **M1** or **M2** to save the number to that memory key.

Dialing from Memory:

Lift the handset or press **H.F**, then press either **M1** or **M2** to dial the stored number.

FEATURES

- **DTMF/FSK Dual System Caller ID:** Supports both DTMF and FSK caller ID systems for displaying incoming call information.



Image: The telephone's display, showing its capability for DTMF/FSK dual system caller ID function.

- **FLASH Time Adjustment:** Adjustable FLASH time (90/95/100/120/180/300/600/1000ms) for compatibility with various PBX systems or call waiting services.
- **16 Ringtone Options:** Choose from 16 different ringtones.

16 ringtones to choose



Image: The telephone with graphic elements suggesting a choice of 16 ringtones.

- **Adjustable LCD Brightness:** Five levels of LCD screen brightness adjustment for optimal viewing.
- **3 Alarm Clock Functions:** Set up to 3 different alarm clocks, each with unique alarm sounds.
- **10 Groups of Dual Key Memory:** Store up to 10 frequently called numbers using dual-key memory functions.
- **1-99 Hours Do Not Disturb Function:** Set a "Do Not Disturb" period from 1 to 99 hours.

MAINTENANCE

- Clean the telephone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Keep the telephone away from dust and extreme temperatures.
- Ensure cords are not tangled or pinched to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is disconnected or faulty.	Check all cable connections. Try a different telephone line cord. Test the wall jack with another phone.

Problem	Possible Cause	Solution
Cannot make or receive calls	Line issue, or phone is in "Do Not Disturb" mode.	Verify phone line service. Check if "Do Not Disturb" is active and disable it.
Caller ID not displayed	Caller ID service not subscribed or incompatible system.	Contact your telephone service provider to ensure Caller ID service is active.
Display is dim or blank	LCD brightness setting is too low.	Adjust the LCD brightness using the FL/BRT button or menu settings.

SPECIFICATIONS

Feature	Detail
Model	KX-T6001CID
Brand	Goshyda
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	White
Type	Corded Telephone
Dialer Type	Single Keypad
Caller ID	Yes (DTMF/FSK Dual System)
Flash Time	90/95/100/120/180/300/600/1000ms
Ringtones	16 options
LCD Brightness	5 levels adjustable
Alarm Functions	3 groups
Memory Function	10 groups of dual key memory
Do Not Disturb	1-99 hours
Item Weight	481 Grams
Dimensions (L x W x H)	10 x 10 x 10 millimeters (approximate)
Power Source	Battery Powered (likely referring to LCD/memory backup, as corded phones are line-powered for basic functions)

WARRANTY AND SUPPORT

This Goshyda product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact Goshyda customer support.

For technical assistance or further inquiries, please contact Goshyda customer service through their official website or the contact information provided with your product.

