

[Manuals.plus](#) /

› [Homemory](#) /

› Homemory LED Flameless Taper Candles with Remote Timer - Instruction Manual

Homemory HMBLS3DLLGLYK

Homemory LED Flameless Taper Candles with Remote Timer - Instruction Manual

Model: HMBLS3DLLGLYK

INTRODUCTION

Thank you for choosing Homemory Real Wax LED Flameless Taper Candles. These candles provide the aesthetic appeal of traditional candles without the hazards of open flames, smoke, or dripping wax. Featuring a realistic 3D flickering flame, remote control, and timer functions, they are designed for safe and convenient use in various indoor settings.

This manual provides detailed instructions for setting up, operating, and maintaining your LED taper candles. Please read it thoroughly before use.

PACKAGE CONTENTS

Each package contains:

- 6 x Homemory LED Flameless Taper Candles
- 2 x 10-Key Remote Controls

Note: 2 AAA batteries are required per candle (not included).

SETUP

1. Battery Installation

1. Gently twist the bottom cap of each candle counter-clockwise to open the battery compartment.
2. Insert two (2) AAA batteries into each candle, ensuring correct polarity (+/-).
3. Replace the bottom cap by twisting it clockwise until secure.



Figure 1: Illustration of battery installation. Twist the bottom cap, insert two AAA batteries, and then secure the cap.

Your browser does not support the video tag.

Video: Demonstrates the battery installation process for Homemory Ivory LED Taper Candles.

2. Initial Placement

Place the candles in your desired location, such as windowsills, fireplaces, or dining tables. Ensure they are stable and upright.



Figure 2: Flameless taper candles arranged on a dining table, showcasing their decorative use.

OPERATING INSTRUCTIONS

Using the Remote Control

The included 10-key remote control allows for convenient operation of your candles. Point the remote directly at the candles for optimal response.

USING THE REMOTE CONTROL

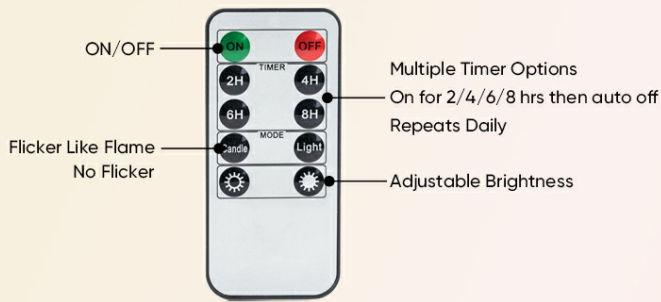


Figure 3: The 10-key remote control with its various functions.

- **ON/OFF:** Press the **ON** button to turn the candles on. Press the **OFF** button to turn them off.
- **Timer Function:**
 - Press **2H**, **4H**, **6H**, or **8H** to activate the automatic timer. The candles will stay on for the selected duration and then turn off automatically.
 - The timer cycle repeats every 24 hours. For example, if you set a 4-hour timer at 7 PM, the candles will turn on at 7 PM each day and turn off at 11 PM.
 - To cancel the timer, press the **OFF** button.
- **Light Mode:**
 - Press **MODE** to switch between "Flicker Like Flame" (realistic flickering effect) and "No Flicker" (steady light).
- **Brightness Adjustment:**
 - Press **+** to increase brightness.
 - Press **-** to decrease brightness.



Figure 4: The realistic 3D flickering flame effect.

MAINTENANCE

Cleaning

To clean the candles, gently wipe them with a soft, dry cloth. Do not use abrasive cleaners or immerse them in water.

Battery Replacement

When the light dims or the candles stop responding to the remote, it is time to replace the batteries. Follow the battery installation steps in the "Setup" section.

- Always replace all batteries in a candle at the same time.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the candles will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Candles do not turn on.	Batteries are inserted incorrectly or are depleted.	Check battery polarity. Replace with fresh AAA batteries.
Remote control is not working.	Remote battery is depleted or remote is too far/not pointed correctly.	Ensure the remote's battery is functional. Point the remote directly at the candles within a reasonable range.
Candle light is dim.	Batteries are low. Brightness setting is too low.	Replace batteries. Use the '+' button on the remote to increase brightness.
Timer function is not working as expected.	Timer was not set correctly or was cancelled.	Re-set the desired timer duration using the remote. Ensure the candles are not manually turned off after setting the timer.

SPECIFICATIONS

- **Model Number:** HMBLS3DLLGLYK
- **Dimensions:** 0.78"D x 0.78"W x 9.6"H
- **Material:** Plastic, Real Wax
- **Light Source Type:** LED
- **Power Source:** Battery Powered (2 x AAA per candle, not included)
- **Voltage:** 3 Volts
- **Control Method:** Remote Control (IR)
- **Additional Features:** Cordless, Dimmable, Timer, Flickering/Steady Light Modes
- **Indoor/Outdoor Usage:** Indoor
- **Water Resistance Level:** Not Water Resistant



Figure 5: Product dimensions and remote control features overview.

SAFETY INFORMATION

- These candles are for indoor use only. Do not expose them to water or high humidity.
- Avoid using in high-temperature environments, as the real wax exterior may melt or deform.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or modify the candles.
- Dispose of used batteries responsibly according to local regulations.

WARRANTY AND SUPPORT

Each Homemory battery-powered taper candle undergoes rigorous testing before sale. If you encounter any problems during use, please contact our Customer Support Team for assistance. We are committed to resolving any issues as soon as possible.

For further support or inquiries, please visit the [Homemory Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question