

[Manuals.plus](#) /

> [UPGRAVITY](#) /

> User Manual for imlib TV Stand with Tripod Base

UPGRAVITY imlib TV Stand

imlib TV Stand with Tripod Base

USER MANUAL

Product Overview

The imlib TV Stand with Tripod Base is designed to transform your flat screen television into a stylish, portable display. This stand offers a modern aesthetic with its wooden finish and robust construction, providing a stable and secure mounting solution for various TV sizes. It is ideal for enhancing viewing experiences in diverse environments such as home theaters, studio apartments, modern offices, and trade shows.

Key Features

- **Universal Compatibility:** Supports 45-inch to 65-inch LED, LCD, and OLED flat screens.
- **Robust Weight Capacity:** Safely holds TVs weighing up to 77 lbs (35 kg).
- **VESA Compliance:** Compatible with VESA patterns ranging from 200x200mm to 600x400mm.
- **Adjustable Viewing:** Features fluid 360° swivel and height adjustment for optimal viewing angles.
- **Integrated Cable Management:** Includes cable ties and extra velcro straps to keep cords organized and out of sight.
- **Stylish Design:** Modern wooden finish tripod base complements various interior designs.

Specifications

Brand	UPGRAVITY
Manufacturer	imlib
Compatible TV Sizes	45 - 65 inches
Maximum Load Capacity	77 lbs (35 kg)

VESA Compatibility	200x200mm to 600x400mm
Mounting Type	Floor Mount (Tripod Base)
Movement Type	Swivel, Height Adjustable
Item Weight	5.6 kg (approx. 12.3 lbs)
Color	Black (with wooden finish legs)

Package Contents

Before beginning assembly, please verify that all components are present and undamaged. The package typically includes:

- Tripod Base Assembly (legs and central hub)
- TV Mounting Bracket
- Assorted Hardware (screws, washers, spacers for various TV models)
- Cable Management Ties / Velcro Straps
- Assembly Instructions Guide

If any parts are missing or damaged, please contact customer support before proceeding.

Setup and Assembly Instructions

Follow these steps carefully to assemble your imlib TV Stand. It is recommended to have a second person assist during the TV mounting phase for safety.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Assemble Tripod Base:** Attach the three wooden legs to the central hub of the tripod base. Ensure all connections are secure and tightened according to the included hardware instructions.
3. **Attach Mounting Bracket:** Secure the TV mounting bracket to the central pole of the tripod base. Adjust the height of the bracket to your desired viewing level, but do not fully tighten until the TV is mounted.
4. **Prepare TV for Mounting:** Identify the VESA mounting holes on the back of your television. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV model. Attach the TV mounting arms (if separate from the main bracket) to the back of your TV.
5. **Mount TV to Stand:** With assistance, carefully lift your television and hook or secure it onto the mounting bracket on the stand. Ensure the TV is securely seated and locked into place.
6. **Final Adjustments:** Once the TV is securely mounted, adjust the height and swivel to your preferred position. Tighten all screws and connections to ensure stability.
7. **Cable Management:** Use the provided cable ties and velcro straps to neatly route and secure all TV and power cables along the stand's central pole, minimizing clutter.



Image: The imlib TV Stand fully assembled, supporting a flat-screen television. The stand features a sturdy tripod base with wooden legs and a central black support column, designed for aesthetic integration into living spaces.

Operating Instructions

- **Swivel Adjustment:** To adjust the viewing angle, gently rotate the television left or right on the stand. The stand is designed for a fluid 360° swivel.
- **Height Adjustment:** To change the height of the television, loosen the height adjustment mechanism on the central pole (refer to assembly instructions for specific fasteners). Carefully raise or lower the TV to the desired height, then re-tighten the mechanism securely. Always ensure the TV is balanced and stable after adjustment.
- **Cable Management:** Periodically check cable ties and velcro straps to ensure cables remain neat and secure, preventing tangles or accidental disconnections.

Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe down the stand's surfaces. For stubborn marks, a slightly damp cloth with

mild soap can be used, followed by drying. Avoid abrasive cleaners or solvents.

- **Hardware Check:** Periodically inspect all screws and connections to ensure they remain tight and secure. Retighten if necessary to maintain stability.
- **Environmental Conditions:** Keep the stand in a dry environment, away from direct sunlight or extreme temperatures, to preserve the integrity of the materials.

Troubleshooting

Problem	Possible Cause	Solution
Stand feels unstable.	Loose connections or uneven floor.	Ensure all screws are tightened. Move stand to a level surface.
TV is not level.	Mounting bracket not aligned correctly.	Re-check TV mounting bracket alignment and adjust as needed.
Difficulty swiveling TV.	Mechanism might be stiff or obstructed.	Ensure no cables are obstructing movement. Apply a small amount of silicone lubricant if necessary (avoid oil-based lubricants).
Cables are messy.	Cable management not fully utilized.	Re-route cables using the provided ties and straps.

Warranty and Support

For warranty information or technical support regarding your imlib TV Stand, please refer to the contact details provided with your purchase documentation or visit the official UPGRAVITY website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact customer service via:

- **Email:** support@upgravity.com
- **Phone:** 1-800-123-4567
- **Website:** www.upgravity.com