

## Beko RFNE448E35W

# Beko RFNE448E35W Freezer Instruction Manual

Model: RFNE448E35W

## 1. IMPORTANT SAFETY INFORMATION

---

Please read this instruction manual thoroughly before using your appliance. Keep it for future reference. This manual contains important information regarding the safe installation, operation, and maintenance of your Beko RFNE448E35W freezer.

- Ensure the appliance is unplugged before any cleaning or maintenance.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is intended for household use only.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

## 2. SETUP AND INSTALLATION

---

Proper installation is crucial for the efficient and safe operation of your freezer.

### 2.1 Unpacking and Initial Inspection

Carefully remove all packaging materials. Inspect the appliance for any transit damage. Report any damage to your retailer immediately.

### 2.2 Placement

Choose a dry, well-ventilated location away from direct sunlight and heat sources (e.g., radiators, cookers). Ensure there is sufficient space around the appliance for proper air circulation. The dimensions are approximately 77 cm (depth) x 70 cm (width) x 192 cm (height).



Figure 1: Front view of the Beko RFNE448E35W freezer. Note the sleek white finish and integrated handle.

## 2.3 Leveling

Adjust the leveling feet at the bottom of the appliance to ensure it stands stable and level. This prevents vibrations and ensures proper door sealing.

## 2.4 Electrical Connection

Connect the appliance to a grounded power outlet. Ensure the voltage (230 Volts) matches your household supply. Do not use extension cords or multiple adapters.

## 2.5 Initial Operation

After connecting to power, allow the freezer to stand for at least 4 hours before loading it with food. This allows the refrigerant to settle. The appliance will begin to cool down to the set temperature.

# 3. OPERATING INSTRUCTIONS

---

This section details how to use the various features of your Beko freezer.

## 3.1 Temperature Control

The freezer features an electronic display for temperature control. Use the control panel to set the desired freezing temperature. The recommended temperature for optimal food preservation is  $-18^{\circ}\text{C}$ .



*Figure 2: Front view showing the digital temperature display and control panel.*

### **3.2 Fast Freeze Function**

For rapid freezing of fresh food, activate the Fast Freeze function. This lowers the temperature quickly to preserve food quality. It is recommended to activate this function 24 hours before placing large quantities of fresh food inside and to deactivate it once the food is frozen.

### **3.3 Storage Compartments**

The freezer offers a generous 404 liters of usable capacity, distributed across multiple drawers and shelves for organized storage.



Figure 3: Interior view of the freezer, showcasing the various transparent drawers and shelves for efficient organization of frozen goods.



Figure 4: A closer look at the robust and transparent freezer drawers, designed for easy access and visibility of stored items.

### 3.4 Twist & Serve Ice Maker

Your freezer is equipped with a convenient Twist & Serve ice maker. Fill the ice trays with water, allow them to freeze, then simply twist the knob to release the ice cubes into the collection bin below.



*Figure 5: Detailed view of the Twist & Serve ice maker, located inside the freezer compartment, ready for use.*

## **4. MAINTENANCE AND CARE**

---

Regular maintenance ensures the longevity and efficiency of your appliance.

### **4.1 Cleaning**

Always unplug the freezer before cleaning. Clean the interior and exterior surfaces regularly with a soft cloth and a mild detergent. Avoid abrasive cleaners or solvents. The No Frost feature eliminates the need for manual defrosting, but regular cleaning of surfaces is still recommended.

### **4.2 Door Seal Care**

Periodically check and clean the door seals to ensure they are free from food particles and remain flexible. A clean, tight seal helps maintain optimal temperature and energy efficiency.

## 4.3 Power Outage

In case of a power outage, keep the freezer door closed to maintain the internal temperature for as long as possible. The freezer can typically keep food frozen for several hours if the door remains unopened.

## 5. TROUBLESHOOTING

---

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer not cooling	Not plugged in; power outage; temperature set too high.	Check power connection; verify power supply; adjust temperature setting.
Excessive noise	Appliance not level; objects touching the back; normal operating sounds.	Level the appliance; ensure clearance; some sounds (e.g., refrigerant flow) are normal.
Door not closing properly	Door seal dirty or damaged; food blocking closure; appliance not level.	Clean or replace seal; rearrange food; level the appliance.
Temperature too warm	Door opened too frequently; large amount of warm food added; poor ventilation.	Minimize door openings; allow food to cool before freezing; ensure adequate air circulation.

## 6. SPECIFICATIONS

---

Key technical specifications for the Beko RFNE448E35W freezer:

**Brand:** Beko

**Model Number:** RFNE448E35W

**Product Dimensions:** 77 x 70 x 192 cm (Depth x Width x Height)

**Weight:** 82.5 Kilograms (82500 Grams)

**Capacity:** 404 Liters (Usable Capacity)

**Noise Emission:** 10 dB (Airborne Acoustical Noise Emission)

**Installation Type:** Freestanding

**Color:** White

**Voltage:** 230 Volts

**Door Hinge:** Right (reversible)

**Certification:** CE

**Origin:** Romania

## 7. WARRANTY AND SUPPORT

---

Your Beko RFNE448E35W freezer comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your appliance or visit the official Beko website.

For technical support, spare parts, or service requests, please contact Beko customer service. Contact details can typically be found on the Beko official website or in the documentation provided with your purchase.

You can visit the official Beko store on Amazon for more information: [Beko Store](#)

