

Combrite WM41

COMBRITE WM41 Wireless Optical Mouse User Manual

Model: WM41 | Brand: Combrite

1. INTRODUCTION

Thank you for choosing the COMBRITE WM41 Wireless Optical Mouse. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new mouse. Please read this manual carefully before use to ensure optimal performance and longevity of your device.



Image 1.1: COMBRITE WM41 Wireless Optical Mouse with its USB receiver.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x COMBRITE WM41 Wireless Optical Mouse
- 1 x 2.4 GHz USB Receiver (often stored inside the mouse battery compartment)
- 1 x User Manual (this document)

Note: AA battery is not included and must be purchased separately.

3. PRODUCT OVERVIEW

The COMBRITE WM41 mouse features an ergonomic design suitable for both left and right-handed users, with a comfortable silicone-coated surface and a rubber scroll wheel for enhanced grip and durability.



Image 3.1: Key features of the COMBRITE WM41 Wireless Mouse.

3.1. Mouse Components

1. **Left Click Button:** Standard primary click function.
2. **Right Click Button:** Standard secondary click function.
3. **Scroll Wheel:** For vertical scrolling. Made of rubber for anti-slip and comfortable touch.
4. **DPI Adjustment Button:** Allows switching between 3 DPI levels (800, 1200, 1600) for precise tracking.
5. **Advanced Optical Sensor:** Provides sensitive, accurate, and energy-saving tracking.
6. **Battery Compartment:** Located on the underside, holds one AA battery.
7. **USB Receiver Storage Slot:** Located inside the battery compartment for convenient storage of the 2.4GHz USB adapter.



Image 3.2: Mouse dimensions and available DPI settings.

4. SETUP

Follow these steps to set up your COMBRITE WM41 Wireless Optical Mouse:

1. Install Battery:

- Locate the battery compartment cover on the underside of the mouse.
- Slide the cover open.
- Insert one AA battery, ensuring the polarity (+/-) matches the diagram inside the compartment.
- Close the battery compartment cover securely.



Image 4.1: Battery compartment and USB receiver storage.

2. Connect USB Receiver:

- If the USB receiver is stored inside the mouse, gently remove it from its slot.
- Plug the 2.4 GHz USB receiver into an available USB port on your computer (PC, laptop, Smart TV, tablet, etc.).
- The mouse will automatically connect to the receiver. No driver installation is required (Plug and Play).



Image 4.2: Connecting the USB receiver to a laptop.

3. **Power On:** The mouse typically powers on automatically once a battery is inserted and the USB receiver is connected. There is no separate power switch.

5. OPERATING INSTRUCTIONS

5.1. Basic Functions

- **Left Click:** Press the left button to select items, open links, etc.
- **Right Click:** Press the right button to open context menus.
- **Scroll Wheel:** Roll the wheel up or down to scroll through documents or web pages.

5.2. DPI Adjustment

The mouse features a DPI adjustment button located behind the scroll wheel. Press this button to cycle through three different DPI (Dots Per Inch) settings:

- **800 DPI:** Slower cursor movement, ideal for precise tasks.
- **1200 DPI:** Medium cursor movement, suitable for general use.
- **1600 DPI:** Faster cursor movement, useful for quick navigation across large screens.

Choose the DPI setting that best suits your preference and task requirements.

5.3. Multi-Platform Compatibility

The COMBRITE WM41 mouse is designed for wide compatibility and works seamlessly with various operating systems and devices:

- Windows XP/Vista/7/8/10
- Mac OS X
- Linux
- Android (with compatible devices)
- Chrome OS

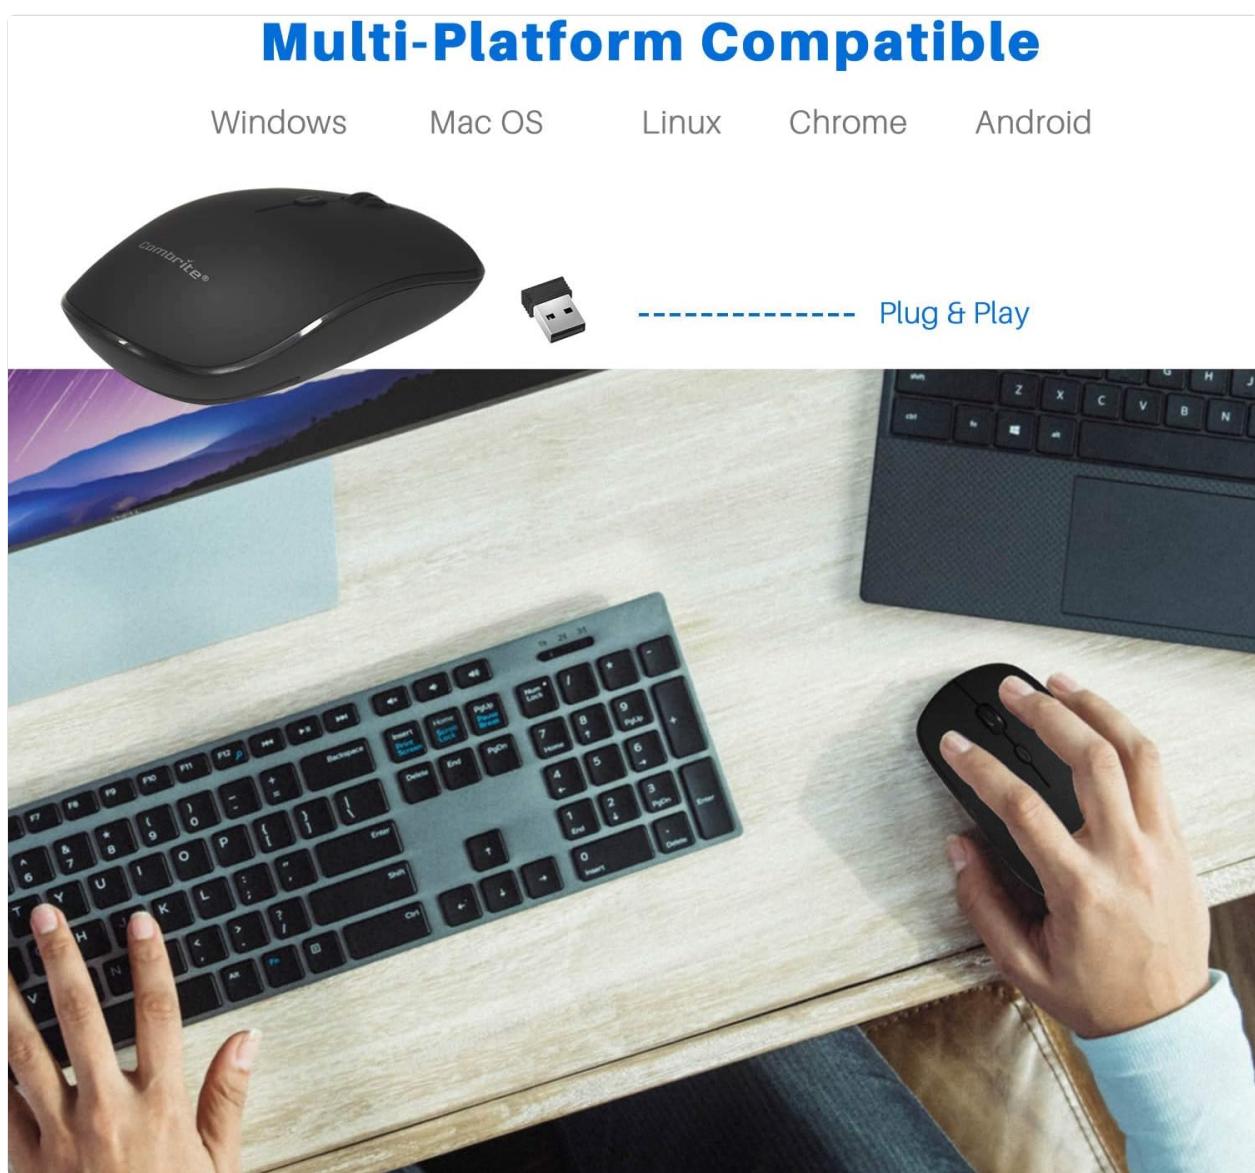


Image 5.1: The mouse is compatible with multiple operating systems.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your mouse.

6.1. Cleaning

- Use a soft, dry cloth to wipe the surface of the mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals or immerse the mouse in water.

6.2. Battery Replacement

When the mouse performance degrades or stops responding, it's likely time to replace the battery. Follow the steps in Section 4.1 to replace the AA battery.

6.3. Storage

- When not in use for extended periods, remove the battery to prevent leakage.
- Store the USB receiver in its dedicated slot inside the battery compartment to prevent loss.
- Store the mouse in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your COMBRITE WM41 mouse, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mouse not responding	Low or dead battery	Replace the AA battery.
Mouse not responding	USB receiver not properly connected	Ensure the USB receiver is fully inserted into a working USB port. Try a different USB port.
Mouse not responding	Interference	Move the mouse closer to the USB receiver. Avoid placing the receiver near other wireless devices.
Erratic cursor movement	Dirty optical sensor	Clean the optical sensor on the underside of the mouse with a soft, dry cloth.
Erratic cursor movement	Unsuitable surface	Use the mouse on a non-reflective, opaque, and even surface, or use a mouse pad.
DPI button not changing speed	Software conflict or temporary glitch	Restart your computer. Ensure no other mouse software is interfering.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Description
Model Name	WM41
Model Number	CB-WM041
Brand	Combrite
Connectivity Technology	2.4 GHz Wireless, USB Receiver
Movement Detection Technology	Optical
DPI Levels	800, 1200, 1600 (Adjustable)
Number of Buttons	3 (Left, Right, Scroll Wheel/Middle Click)
Hand Orientation	Ambidextrous
Color	Black
Power Source	1 x AA Battery (not included)
Compatible Devices	Desktop PC, Laptop, Smart TV, Tablet
Compatible Operating Systems	Windows XP/Vista/7/8/10, Mac OS X, Linux, Android, Chrome OS
Special Features	Ergonomic Design, Plug and Play, Smart Power Saving (Auto-Sleep/Wake Up)
Recommended Use	Office

9. WARRANTY AND SUPPORT

The COMBRITE WM41 Wireless Optical Mouse comes with a standard manufacturer's warranty. Please refer to the product packaging or the retailer's website for specific warranty terms and conditions. For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the retailer or COMBRITE customer service through their official channels. Keep your purchase receipt as proof of purchase.

© 2024 Combrite. All rights reserved.