

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro furReal Dazzlin' Dimples My Playful Dolphin: Instruction Manual F2401

Hasbro F2401

Hasbro furReal Dazzlin' Dimples My Playful Dolphin: Instruction Manual F2401

This manual provides detailed instructions for the setup, operation, and care of your Hasbro furReal Dazzlin' Dimples My Playful Dolphin interactive electronic pet.

1. SAFETY INFORMATION

Warning: Choking Hazard - Small parts may be generated. Not for children under 3 years. Adult supervision is recommended during play.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x furReal Dazzlin' Dimples My Playful Dolphin
- 1 x Fish Snack Accessory
- 1 x Grooming Brush Accessory
- 1 x Play Ball Accessory



Image 2.1: The furReal Dazzlin' Dimples Dolphin shown with its fish snack, grooming brush, and play ball accessories.

3. BATTERY INSTALLATION

The furReal Dazzlin' Dimples Dolphin requires 4 AA batteries. These batteries are included with the product.

1. Locate the battery compartment on the underside of the dolphin.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

4. GETTING STARTED

After battery installation, locate the ON/OFF switch, typically near the battery compartment. Slide the switch to the 'ON' position to activate the dolphin. The dolphin will perform an initial sequence of sounds and movements.

5. INTERACTING WITH DAZZLIN' DIMPLES

Dazzlin' Dimples features over 80 sounds and reactions. Interact with the dolphin using the included accessories and gentle touch.

5.1. Feeding

Place the fish snack accessory near the dolphin's mouth. Dimples will respond with eating sounds and movements.



Image 5.1: A child offering the fish snack accessory to the Dazzlin' Dimples dolphin.

5.2. Grooming

Gently brush the dolphin's soft body with the included grooming brush. Dimples may respond with happy sounds and tail wags.

5.3. Playtime

Roll the included play ball towards the dolphin's flippers. Dimples will attempt to bat the ball back. Tickle the dolphin's belly for additional reactions.



Image 5.2: A child interacting with the Dazzlin' Dimples dolphin, which is positioned near a small play ball.

5.4. Affectionate Responses

Cuddle the dolphin and gently touch or 'kiss' its nose. Dimples may respond with a 'kiss' back and a magical glow, indicating affection.



Image 5.3: A child gently touching the nose of the Dazzlin' Dimples dolphin, simulating a kiss.

5.5. Nighttime Mode

When it's time for rest, activate the dolphin's nighttime mode. In this mode, Dimples will play calming ocean sounds, providing a soothing companion.



Image 5.4: A child comfortably snuggling with the Dazzlin' Dimples dolphin, demonstrating its use as a comforting companion.

6. CARE AND MAINTENANCE

- **Cleaning:** Surface clean the dolphin with a damp cloth. Do not immerse in water.
- **Battery Replacement:** Replace batteries when the dolphin's responses become slow or sounds are distorted. Refer to Section 3 for battery installation instructions.
- **Storage:** When not in use for extended periods, turn the dolphin OFF to conserve battery life. Store in a clean, dry place away from direct sunlight.

7. TROUBLESHOOTING

- **Dolphin is not responding:**
 - Ensure the ON/OFF switch is in the 'ON' position.
 - Check battery installation and replace batteries if necessary.
- **Sounds are distorted or movements are slow:**

- This indicates low battery power. Replace all 4 AA batteries.

8. SPECIFICATIONS

Model Number	F2401
Brand	Hasbro furReal
Material	Plush
Color	Blue
Product Dimensions	20.32 x 55.88 x 35.56 cm
Item Weight	85.05 g
Batteries Required	4 x AA (Included)
Recommended Age	4 years and up

9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support contact details is not available in the provided product data. Please refer to the product packaging or the manufacturer's official website for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

