

[Manuals.plus](#) /

› [Just Play](#) /

› Just Play Disney Junior Minnie Mouse Bowtique Cash Register Instruction Manual (Model 89839)

Just Play 89839

Just Play Disney Junior Minnie Mouse Bowtique Cash Register Instruction Manual

Model: 89839

INTRODUCTION

Welcome to the world of imaginative play with the Disney Junior Minnie Mouse Bowtique Cash Register. This interactive toy is designed to provide hours of fun, allowing children to engage in pretend shopping scenarios, learn basic counting, and develop social skills. Featuring realistic sound effects, Minnie Mouse phrases, and various play accessories, this cash register offers an engaging experience for young users.



Image: The Minnie Mouse Bowtique Cash Register, showcasing its pink and purple design, keypad, display, cash drawer, scanner, and included play money and credit card.

SAFETY INFORMATION

WARNING: May contain small pieces. Not suitable for children under 3 years due to potential choking hazards. Adult supervision is recommended during play.

WHAT'S IN THE BOX

- 1 x Disney Junior Minnie Mouse Bowtique Cash Register with cash drawer
- 1 x Play Scanner
- 4 x Play Paper Money Bills
- 3 x Play Coins
- 1 x Play Credit Card

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the cash register.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 2 x AA batteries, ensuring correct polarity (+/-). The product includes batteries.
4. Replace the battery compartment cover and secure it with the screw.

Accessory Placement

- Place the play scanner in its designated holder on the side of the cash register.
- Store the play paper money bills and play coins in the cash drawer.
- Keep the play credit card accessible for use with the credit card machine.

OPERATING INSTRUCTIONS

Power On/Off

The cash register activates automatically when buttons are pressed. To conserve battery life, the unit will enter sleep mode after a period of inactivity. Press any button to reactivate.

Using the Keypad

- Press the numbered buttons (0-9) to simulate entering prices. Each button press produces a sound.
- Press the 'Total' button to hear Minnie Mouse phrases, such as "Will that be cash or credit?"

Cash Drawer Operation

To open the cash drawer, pull the heart-shaped knob located at the front of the register. The drawer will slide out, revealing compartments for play money and coins.



Image: A hand pulling the heart-shaped knob to open the cash drawer of the Minnie Mouse cash register, revealing compartments for play money.

Credit Card Machine

Insert or swipe the play credit card through the slot on the side of the cash register to simulate a credit card transaction. This action triggers sound effects.



Image: A hand demonstrating how to insert the Minnie Mouse play credit card into the designated slot on the cash register.

Scanner Functionality

Use the handheld play scanner to scan pretend items. The scanner produces a clicking sound when activated, enhancing the realistic play experience.



Image: Two young children engaged in pretend play with the Minnie Mouse cash register, one child is using the play scanner.

MAINTENANCE

Cleaning

Wipe the cash register and accessories with a slightly damp cloth. Do not immerse the toy in water. Avoid using harsh chemicals or abrasive cleaners.

Battery Replacement

If the sounds become faint or the toy stops functioning, replace the AA batteries as described in the 'Battery Installation' section. Always use new batteries of the same type and brand.

Storage

Store the cash register and all its accessories in a cool, dry place away from direct sunlight when not in use. Ensure all play money and cards are securely stored in the cash drawer or a separate container to prevent loss.

TROUBLESHOOTING

- **No Sound/Power:** Check if the batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
- **Cash Drawer Not Opening:** Ensure there are no obstructions preventing the drawer from sliding open. Gently pull the heart-shaped knob.
- **Scanner Not Functioning:** The play scanner is designed to produce a clicking sound when its button is pressed. It does not electronically connect to the main unit.
- **Missing Play Money/Accessories:** While not a malfunction, it is common for small play pieces to get misplaced. Always store them in the cash drawer or a dedicated storage area after play.

SPECIFICATIONS

Product Dimensions	11.5 x 6 x 6.5 inches
Item Weight	1.72 pounds
Item Model Number	89839
Manufacturer Recommended Age	36 months - 8 years
Batteries	2 AA batteries required (included)
Manufacturer	Just Play



Image: The Minnie Mouse cash register with an arrow indicating its height of 6.1 inches, providing a visual reference for its size.

WARRANTY AND SUPPORT

For warranty information or product support, please contact the manufacturer, Just Play, directly. Refer to the product packaging for specific contact details or visit their official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question