

iRobot R694020

# iRobot Roomba 694 Robot Vacuum User Manual

Model: R694020 | Brand: iRobot

## INTRODUCTION

The iRobot Roomba 694 Robot Vacuum is designed to simplify your home cleaning routine. This intelligent device learns your cleaning habits, offering personalized schedules to tackle daily dirt, dust, and debris from various floor types, including carpets and hard floors. Its adaptive navigation and smart sensors ensure thorough coverage, while voice assistant compatibility provides convenient hands-free control.



Image: The iRobot Roomba 694 Robot Vacuum, a circular charcoal grey device, is shown next to a smartphone displaying the iRobot Home App logo. This illustrates the vacuum's smart connectivity features.

## SETUP

Before its first use, ensure your Roomba 694 is properly set up and charged. The package includes the robot vacuum, a Home Base Charging Station, a line cord, and an extra filter.

### Initial Charging

Place the Home Base Charging Station against a wall in an area with good Wi-Fi coverage. Connect the line cord to the charging station and plug it into a power outlet. Position the Roomba 694 onto the charging contacts of the Home Base. The vacuum will automatically begin charging. The battery indicator light will turn green when fully charged.

Your browser does not support the video tag.

Video: An unboxing and setup guide for the iRobot Roomba 694, demonstrating how to connect the charging station and place the

vacuum for its initial charge. This video is from a seller and is genuinely useful.

## Wi-Fi Connectivity

Download the iRobot Home App from the App Store or Google Play. Follow the in-app instructions to connect your Roomba 694 to your home Wi-Fi network. This enables personalized cleaning recommendations, scheduling, and voice control via compatible devices like Amazon Alexa and Google Home.

## OPERATING INSTRUCTIONS

---

The Roomba 694 is designed for effortless daily cleaning. It runs for up to 90 minutes before automatically docking and recharging.

### Cleaning Modes

- **Automatic Cleaning:** Press the "CLEAN" button on the robot or use the iRobot Home App to start a cleaning cycle. The robot will adapt to your home's unique layout and clean until its battery is low, then return to its Home Base.
- **Spot Cleaning:** For concentrated cleaning of a specific dirty area, place the Roomba over the spot and activate spot cleaning via the app. The robot will spin in place, cleaning for up to 2 minutes.



Image: The Roomba 694 is shown cleaning under a coffee table, demonstrating its ability to navigate under and around furniture for thorough cleaning.

## Adaptive Navigation

A full suite of advanced sensors allows Roomba to navigate under and around furniture, and along edges. Cliff Detect keeps it from falling downstairs. The robot also focuses on dirtier areas with Dirt Detect™ Technology, ensuring no spot is missed.

Your browser does not support the video tag.

Video: A quick review of the iRobot Roomba 694 Robot Vacuum Cleaner, showcasing its navigation capabilities and how it handles obstacles and different floor types. This video is from a seller and is genuinely useful.

## Voice Control

Pair with Alexa, Siri, or Google Assistant-enabled devices and say commands like "Alexa, tell Roomba to vacuum" to start a cleaning session. The iRobot Home App also provides a Clean Map™ Report to show where your robot has cleaned and display details such as coverage and duration for completed jobs.



## MAINTENANCE

Regular maintenance ensures your Roomba 694 operates efficiently and extends its lifespan. The iRobot Home App's Product Health dashboard helps monitor the status of your robot's components.

### Cleaning the Dustbin

The dustbin should be emptied after each cleaning cycle, especially if you have pets. To remove the dustbin, press the release tab and pull it out. Open the bin door and tap it against a trash container to shake off debris. The filter should be removed before emptying the bin.

Your browser does not support the video tag.

Video: A detailed guide on how to replace filters and brushes for the Roomba 694 Vacuum. This video is from a seller and is genuinely useful for maintenance.

### Filter Replacement

The AeroVac™ Filter captures fine dust and debris. It is recommended to replace the filter every few months, or as indicated by the iRobot Home App, to maintain optimal suction performance. Filters are not designed to be washed.



Image: An illustration highlighting the key cleaning components of the Roomba 694: the Edge-Sweeping Brush, Dual Multi-Surface Brushes, and Power-Lifting Suction. This visual aids in understanding maintenance points.

## Brush Cleaning and Replacement

Periodically inspect and clean the Edge-Sweeping Brush and Dual Multi-Surface Brushes. Hair and debris can get tangled around them, reducing cleaning effectiveness. Use the provided cleaning tool or scissors to remove any wrapped hair. The Auto-Adjust Cleaning Head automatically adapts its height to effectively clean carpets and hard floors, ensuring consistent contact with the floor.

## TROUBLESHOOTING

If your Roomba 694 encounters issues, try these common troubleshooting steps:

- **Robot Not Charging:** Ensure the Home Base is plugged in and the Roomba is properly aligned on the charging contacts. Check for any debris on the charging contacts of both the robot and the base.
- **Robot Getting Stuck:** Clear any loose cables, rugs with long fringes, or small objects from the cleaning area. The Roomba's sensors help it navigate, but excessive clutter can cause it to get trapped.
- **Poor Cleaning Performance:** Empty the dustbin and clean or replace the AeroVac™ Filter. Inspect and clean the Dual Multi-Surface Brushes and Edge-Sweeping Brush for tangled hair or debris.
- **Wi-Fi Connection Issues:** Ensure your Wi-Fi router is on and within range. Restart both your router and the Roomba. If issues persist, try re-connecting the Roomba to the iRobot Home App.

## SPECIFICATIONS

- **Brand:** iRobot
- **Model Name:** R694 Vac
- **Special Feature:** Cordless
- **Color:** Charcoal Grey
- **Product Dimensions:** 13.4"L x 13.4"W x 3.54"H
- **Included Components:** 1 Roomba® 694 Robot Vacuum, 1 Home Base® Charging Station, Filter
- **Filter Type:** Cartridge
- **Battery Life:** 90 minutes
- **Power Source:** Battery Powered
- **Are Batteries Included:** Yes
- **Control Method:** Voice
- **Compatible Devices:** Smartphones, Amazon Echo, Amazon Alexa, Google Home, Smartwatches
- **Form Factor:** Robotic
- **Item Weight:** 6.77 pounds
- **Manufacturer:** iRobot
- **Item model number:** R694020

## WARRANTY & SUPPORT


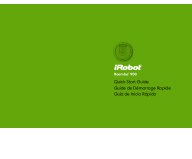
For detailed warranty information, please refer to the official Warranty (PDF) document provided by iRobot. You can also find the full User Manual (PDF) for comprehensive instructions and support.

- [User Manual \(PDF\)](#)
- [Warranty \(PDF\)](#)

For additional support, visit the official iRobot Store or contact iRobot Customer Care.

### Related Documents - R694020

<small>User Manual of Product 1: iRobot Roomba 694 Robot Vacuum - Wi-Fi Connectivity, Personalized Cleaning Recommendations, Works with Alexa, Good for Pet Hair, Carpets, Hard Floors, Self-Charging</small>	<a href="#">iRobot Roomba 694 Robot Vacuum Owner's Guide</a> Comprehensive owner's guide for the iRobot Roomba 694 robot vacuum, covering safety instructions, setup, operation, maintenance, troubleshooting, and regulatory information.
<small>User Manual of Product 1: iRobot Roomba 671 Robot Vacuum with Wi-Fi Connectivity, Works with Alexa, Good for Pet Hair, Carpets, and Hard Floors</small>	<a href="#">iRobot Roomba 671 Robot Vacuum User Manual</a> This user manual provides detailed instructions for setting up, using, and maintaining the iRobot Roomba 671 Robot Vacuum with Wi-Fi Connectivity. Learn about its features, safety instructions, troubleshooting, and customer care.
<small>User Manual of Product 1: iRobot Roomba i3 EVO (3150) Wi-Fi Connected Robot Vacuum - New Clean As You Go System with Smart Mapping Works with Alexa Good for Pet Hair, Carpets &amp; Hard Floors, Recharge II</small>	<a href="#">iRobot Roomba i3 EVO (3150) User Manual: Setup, Cleaning, and Maintenance</a> Comprehensive user manual for the iRobot Roomba i3 EVO (3150) Wi-Fi Connected Robot Vacuum. Learn about setup, operation, cleaning, maintenance, safety, and troubleshooting for your Roomba.
<small>User Manual of Product 1: iRobot Roomba 692 Robot Vacuum - Wi-Fi Connected, Personalized Cleaning Recommendations, Works with Alexa, Good for Pet Hair, Carpets, Hard Floors, Self-Charging</small>	<a href="#">iRobot Roomba 692 Robot Vacuum Owner's Guide   Features, Safety, and Care</a> Comprehensive owner's guide for the iRobot Roomba 692 Robot Vacuum. Learn about setup, usage, safety instructions, maintenance, troubleshooting, and customer support for your Wi-Fi connected, Alexa-compatible cleaning robot.

 <p><b>694</b> Roomba Robot Vacuum</p> <p>High performance, Wi-Fi connected</p> <p><b>Learn why we call it a 3-Stage Cleaning System.</b></p> <p><b>Discover how the 3-Stage Cleaning System works.</b></p> <p><b>Learn how the 3-Stage Cleaning System works.</b></p>	<p><a href="#">iRobot Roomba 694 Robot Vacuum: High Performance, Wi-Fi Connected Cleaning</a></p> <p>Discover the iRobot Roomba 694, a Wi-Fi connected robot vacuum featuring a 3-Stage Cleaning System, Dual Multi-Surface Brushes, Edge-Sweeping Brush, and Dirt Detect™ Technology for efficient cleaning of carpets and hard floors.</p>
 <p><b>900</b> Roomba Robot Vacuum</p> <p>High performance, Wi-Fi connected</p>	<p><a href="#">iRobot Roomba 900 Series Quick Start Guide</a></p> <p>A concise guide for setting up and starting your iRobot Roomba 900 robot vacuum. Learn how to set up the Home Base, activate the robot, and download the iRobot HOME app for enhanced features.</p>