

[Manuals.plus](#) /

› [MINNIE](#) /

› Disney Junior Minnie Mouse Roller-Skating Party Feature Plush Instruction Manual

MINNIE 13003

Disney Junior Minnie Mouse Roller-Skating Party Feature Plush Instruction Manual

Model: 13003

INTRODUCTION

Welcome to the world of Disney Junior Minnie Mouse Roller-Skating Party! This interactive plush toy set features Minnie Mouse and her panda friend, designed to provide engaging play with lights, sounds, and motion. This manual provides essential information for the safe and proper use of your toy.



Image: Minnie Mouse and her panda friend, both wearing roller skates and helmets, ready for action.

SETUP

What's Included

- Disney Junior Minnie Mouse Roller-Skating Party Minnie Mouse plush
- Roller-Skating Panda plush

Battery Installation

The Minnie Mouse Roller-Skating Party toy requires 3 x AAA batteries. These batteries are included with the product. To install or replace batteries:

1. Locate the battery compartment on the underside of Minnie Mouse's roller skate base.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-).

4. Replace the battery compartment cover and secure it with the screw.

Note: Ensure the toy's power switch is in the 'OFF' position before installing or replacing batteries.

Assembly

No assembly is required for this product. Minnie Mouse and her panda friend are ready for play directly out of the box.

OPERATING INSTRUCTIONS

Powering On/Off

Locate the power switch on the underside of Minnie Mouse's roller skate base. Slide the switch to the 'ON' position to activate the toy. Slide it to 'OFF' to power down.

Basic Operation

To initiate the skating party, press the button located on Minnie Mouse's left foot. Minnie Mouse will begin to skate, talk, and sing the song "Minnie's Roller-Skating Dreams." Her bow helmet will also light up during play.



Image: Minnie Mouse's helmet features a twinkling bow that lights up during interactive play.

Interactive Play Modes

Minnie Mouse and her panda friend can perform various skating movements:

- **Side-by-Side Skating:** Attach Minnie Mouse and Panda by their hands to have them skate together.
- **Conga Line:** Place the skating duo in front or behind each other to form a conga line.
- **360° Turns:** The toys are capable of performing 360-degree spins as part of their routine.



Image: Minnie Mouse and Panda can skate together, holding hands.

Let's Go
Roller-Skating,
Panda!



SKATE!

Image: The toys can be arranged to skate in a conga line.



Image: Minnie Mouse and Panda are capable of performing 360-degree spins.

Official Product Video

Your browser does not support the video tag.

Video: An official demonstration of the Disney Junior Minnie Mouse Roller-Skating Party toy, showcasing its various movements and interactive features.

MAINTENANCE

Cleaning

To clean the plush toys, gently wipe the surface with a damp cloth. Do not immerse the toys in water, as this may damage the electronic components. Avoid using harsh chemicals or abrasive cleaners.

Battery Care

- Always use fresh batteries of the recommended type (3 x AAA).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.

Storage

Store the toy in a cool, dry place away from direct sunlight and extreme temperatures to preserve its condition and functionality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not move or make sounds.	Batteries are low or incorrectly installed.	Check battery polarity and replace with fresh AAA batteries. Ensure the power switch is ON.
Minnie Mouse's bow does not light up.	Battery issue or internal connection.	Replace batteries. If the issue persists, contact customer support.
Toys get stuck or fall over frequently.	Uneven surface or obstacles.	Ensure the toys are used on a flat, smooth surface free of obstructions.

SPECIFICATIONS

Feature	Detail
Brand	MINNIE
Model Name	Minnie Mouse Roller-Skating Party Feature Plush
Model Number	13003
UPC	886144130038
Item Dimensions (L x W x H)	12.5" x 6" x 14.8"
Item Weight	2.97 Pounds
Material Type	Fabric
Age Range	36 Months to 96 Months
Batteries Required	Yes, 3 x AAA (included)
Special Features	Lights, Talking, Singing, Motion



Image: The Minnie Mouse toy stands approximately 14.8 inches tall.

WARRANTY AND SUPPORT

Warranty Information

This product comes with no stated manufacturer warranty. Please refer to the retailer's return policy for any issues.

Customer Support

For further assistance or inquiries, please visit the manufacturer's website or contact their customer service department. You can also refer to the [product page on Amazon](#) for additional information and customer reviews.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question