

FurReal F1971

FurReal GoGo My Dancin' Pup Electronic Pet Toy Instruction Manual

Model: F1971

1. INTRODUCTION

The FurReal GoGo My Dancin' Pup is an interactive electronic pet designed to provide engaging play for children aged 4 and up. This adorable puppy features over 50 unique sounds and reactions, including dancing to 5 different songs and making happy pup noises. It comes with an automatic leash for interactive walking and dancing. This manual provides essential information for setting up, operating, and maintaining your GoGo My Dancin' Pup.



The FurReal GoGo My Dancin' Pup with its automatic leash.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Always supervise young children during play. Ensure all components are securely attached before use. Keep the toy away from water and extreme temperatures.

3. WHAT'S INCLUDED

- 1 x FurReal GoGo My Dancin' Pup electronic pet
- 1 x Automatic Leash accessory
- Instructions manual
- 4 x AA batteries (included)

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment on the underside of the pup.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

4.2. Attaching the Leash

Connect the automatic leash to the designated port on the pup's back. Ensure it is firmly attached.


4.3. Switching to Play Mode

The pup may initially be in 'Demo' mode. To unlock full functionality, locate the switch within the Velcro pouch on the pup's tummy. Slide the switch from 'Demo' to 'Play' mode. This will enable all leash button functions for walking and dancing.

5. OPERATING INSTRUCTIONS

5.1. Walking the Pup

To take GoGo for a walk, press the **Walk button** (paw print icon) on the automatic leash. The pup will move forward, making various fun sounds and bobbing its head. Release the button to stop.

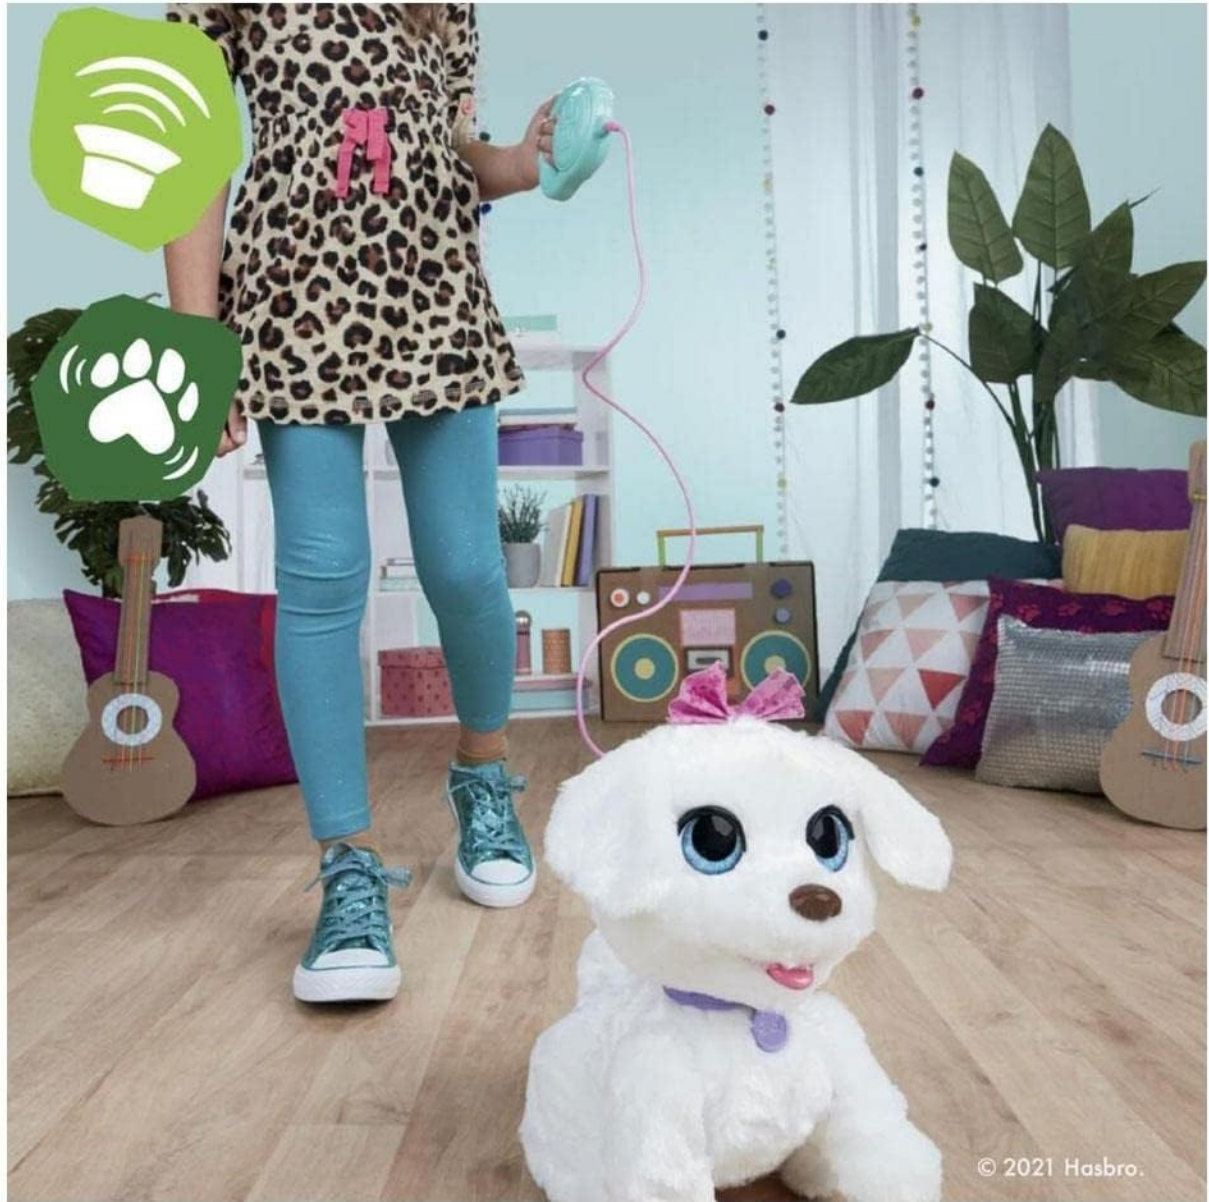

Enjoy walking your GoGo My Dancin' Pup.

5.2. Dancing and Music

To make GoGo dance and play music, press the **Dance button** (star icon) on the automatic leash. The pup will stand up and perform special moves to 5 different songs. Release the button to stop the dancing.



GoGo My Dancin' Pup showing off its dance moves.

5.3. Sounds and Reactions

GoGo My Dancin' Pup features over 50 unique sounds and reactions, including barks, happy pup noises, and musical tunes. These sounds are activated through interaction with the leash buttons and the pup's movements.



Interactive moments with your FurReal pup.

6. CARE AND MAINTENANCE

6.1. Cleaning

To clean your GoGo My Dancin' Pup, gently wipe the surface with a damp cloth. Do not immerse the toy in water, as this may damage the electronic components. Avoid using harsh chemicals or abrasive cleaners.

6.2. Storage

When not in use, store the pup and its leash in a clean, dry place away from direct sunlight and extreme temperatures. Remove batteries if the toy will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

7.1. Pup Not Responding or Only Playing One Song/Movement

If your GoGo My Dancin' Pup is not responding correctly to the leash buttons or is stuck in a repetitive mode, ensure the mode switch is set to 'Play'. The switch is located in a Velcro pouch on the pup's tummy.

If it is in 'Demo' mode, switch it to 'Play' for full functionality.

7.2. No Sounds or Movement

Check the batteries. Ensure they are correctly installed and are not depleted. Replace with fresh AA batteries if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	FurReal
Model Number	F1971
Product Dimensions	7.52 x 12.01 x 14.02 inches
Item Weight	3.31 Pounds (1.5 Kilograms)
Recommended Age	4 years and up
Batteries Required	4 AA batteries (included)
Sounds & Reactions	50+
Songs	5 different songs
Material Type	Plastic, Fabric
Color	White

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service department. Specific warranty terms may vary by region and retailer.

10. PRODUCT VIDEOS

No official seller videos were available for embedding based on the provided criteria.