

[Manuals.plus](#) /

› [One Fire](#) /

› One Fire Night Light Projector WH-E07 User Manual

One Fire WH-E07

One Fire Night Light Projector WH-E07 User Manual

Model: WH-E07

1. INTRODUCTION

Thank you for purchasing the One Fire Night Light Projector. This device is designed to create a captivating starry sky or themed projection experience, ideal for children's rooms. It features multiple projection films, various lighting modes, and a 360-degree rotation function. This manual provides essential information for safe operation, setup, and maintenance of your projector.



Image 1.1: The One Fire Night Light Projector in operation, showcasing its star and moon projection, alongside the six available projection films.

2. SAFETY WARNINGS

Please read and understand all safety warnings before using this product.



WARNING

1. Not suitable for children under 3 years old;
2. This product is not a toy and is suitable for people over 14 years old;
3. The product contains small parts, please do not allow children under 3 years old to play;
4. Please pay attention to the sharp corners or edges of the product to avoid injury.

1. Nicht geeignet für Kinder unter 3 Jahren;
2. Dieses Produkt ist kein Spielzeug und für Personen über 14 Jahren geeignet;
3. Das Produkt enthält Kleinteile, bitte lassen Sie Kinder unter 3 Jahren nicht spielen;
4. Bitte achten Sie auf die scharfen Ecken und Kanten des Produkts, um Verletzungen zu vermeiden.

1. Ne convient pas aux enfants de moins de 3 ans ;
2. Ce produit n'est pas un jouet et convient aux personnes de plus de 14 ans.
3. Le produit contient de petites pièces, veuillez ne pas laisser les enfants de moins de 3 ans jouer.
4. Veuillez faire attention aux coins ou bords tranchants du produit pour éviter toute blessure.

1. No apto para niños menores de 3 años;
2. Este producto no es un juguete y es adecuado para personas mayores de 14 años;
3. El producto contiene piezas pequeñas, no permita que los niños menores de 3 años jueguen;
4. Preste atención a las esquinas o bordes afilados del producto para evitar daños.

1. Non adatto a bambini di età inferiore a 3 anni;
2. Questo prodotto non è un giocattolo ed è adatto a persone di età superiore ai 14 anni;
3. Il prodotto contiene piccole parti, si prega di non lasciare che i bambini di età inferiore a 3 anni giochino;
4. Prestare attenzione agli angoli acuti o ai bordi del prodotto per evitare danni.

- 1、3歳未満のお子様には適していません。
- 2、この製品はおもちゃではなく、14歳以上の方に適しています。
- 3、製品には小さな部品が含まれています。3歳未満のお子様には遊ばせないでください。
- 4、怪我を避けるために、製品の鋭い角や端にご注意してください。

Image 2.1: Product packaging displaying important safety warnings.

- This product is **not suitable for children under 3 years old**
- This product is **not a toy** and is suitable for individuals **over 14 years old**.
- The product contains small parts. To prevent choking hazards, **do not allow children under 3 years old to play with it**.
- Exercise caution with the **sharp corners or edges** of the product to avoid injury.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- One Fire Night Light Projector (Model WH-E07)
- USB Charging Cable (Type-C)

- 6 Projection Films (Pre-installed or separate)
- User Manual
- Built-in Lithium Ion Battery

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your projector.



Image 4.1: Front view of the projector base with control buttons and charging port.

Control Buttons:

- **Power Button (①):** Press to turn the projector On/Off.
- **Rotation Button (②):** Press to activate or deactivate the 360-degree rotation of the projection.
- **Light Mode Button (③):** Press to cycle through different light colors and projection modes.

Ports:

- **USB-C Charging Port:** Used to charge the internal battery.

5. SETUP INSTRUCTIONS

5.1 Charging the Projector

The projector is equipped with a rechargeable 2400mAh Lithium Ion battery. Before first use, fully charge the device.

1. Connect the provided USB-C charging cable to the charging port on the projector.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included), power bank, or computer USB port.
3. The charging indicator light will illuminate (typically red) during charging.
4. Once fully charged, the indicator light may change color or turn off. A full charge provides approximately 5-7 hours of cordless operation.



The image shows a baby sleeping peacefully in a wooden crib. A projector is placed on the crib, casting vibrant, colorful patterns of unicorns and stars onto the tent and the surrounding walls. The patterns include a large purple unicorn, a blue unicorn, a green unicorn, and a red unicorn, all with wings and horns. The background is dark blue with many small, colorful stars. The overall scene is magical and soothing.

save \$999 a year

2400mAh

>6H Plug-in

≤6H Cordless

3AAA

POWER

5.2 Installing/Changing Projection Films

The projector comes with 6 different projection films to vary the visual experience.

1. Gently remove the top dome cover of the projector.
2. Carefully align the desired projection film with the internal slots or guides. Ensure it sits securely.
3. Replace the top dome cover, ensuring it is properly seated.



Image 5.2: The six distinct projection films available for the projector.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- Press the **Power Button** (①) once to turn the projector on.

- Press the **Power Button** (①) again to turn the projector off.

6.2 Adjusting Light Modes and Colors

The projector offers 13 RGB colors and 6 films, resulting in 78 projection options.

- Press the **Light Mode Button** (③) repeatedly to cycle through various single colors, multi-color combinations, and dynamic lighting effects.
- The selected projection film will be illuminated with the chosen light mode.



Image 6.1: Visual representation of the projector's color and film combinations.

6.3 Activating 360-Degree Rotation

- Press the **Rotation Button** (②) once to start the 360-degree rotation of the projection.
- Press the **Rotation Button** (②) again to stop the rotation.
- The rotation operates quietly to avoid disturbing sleep.

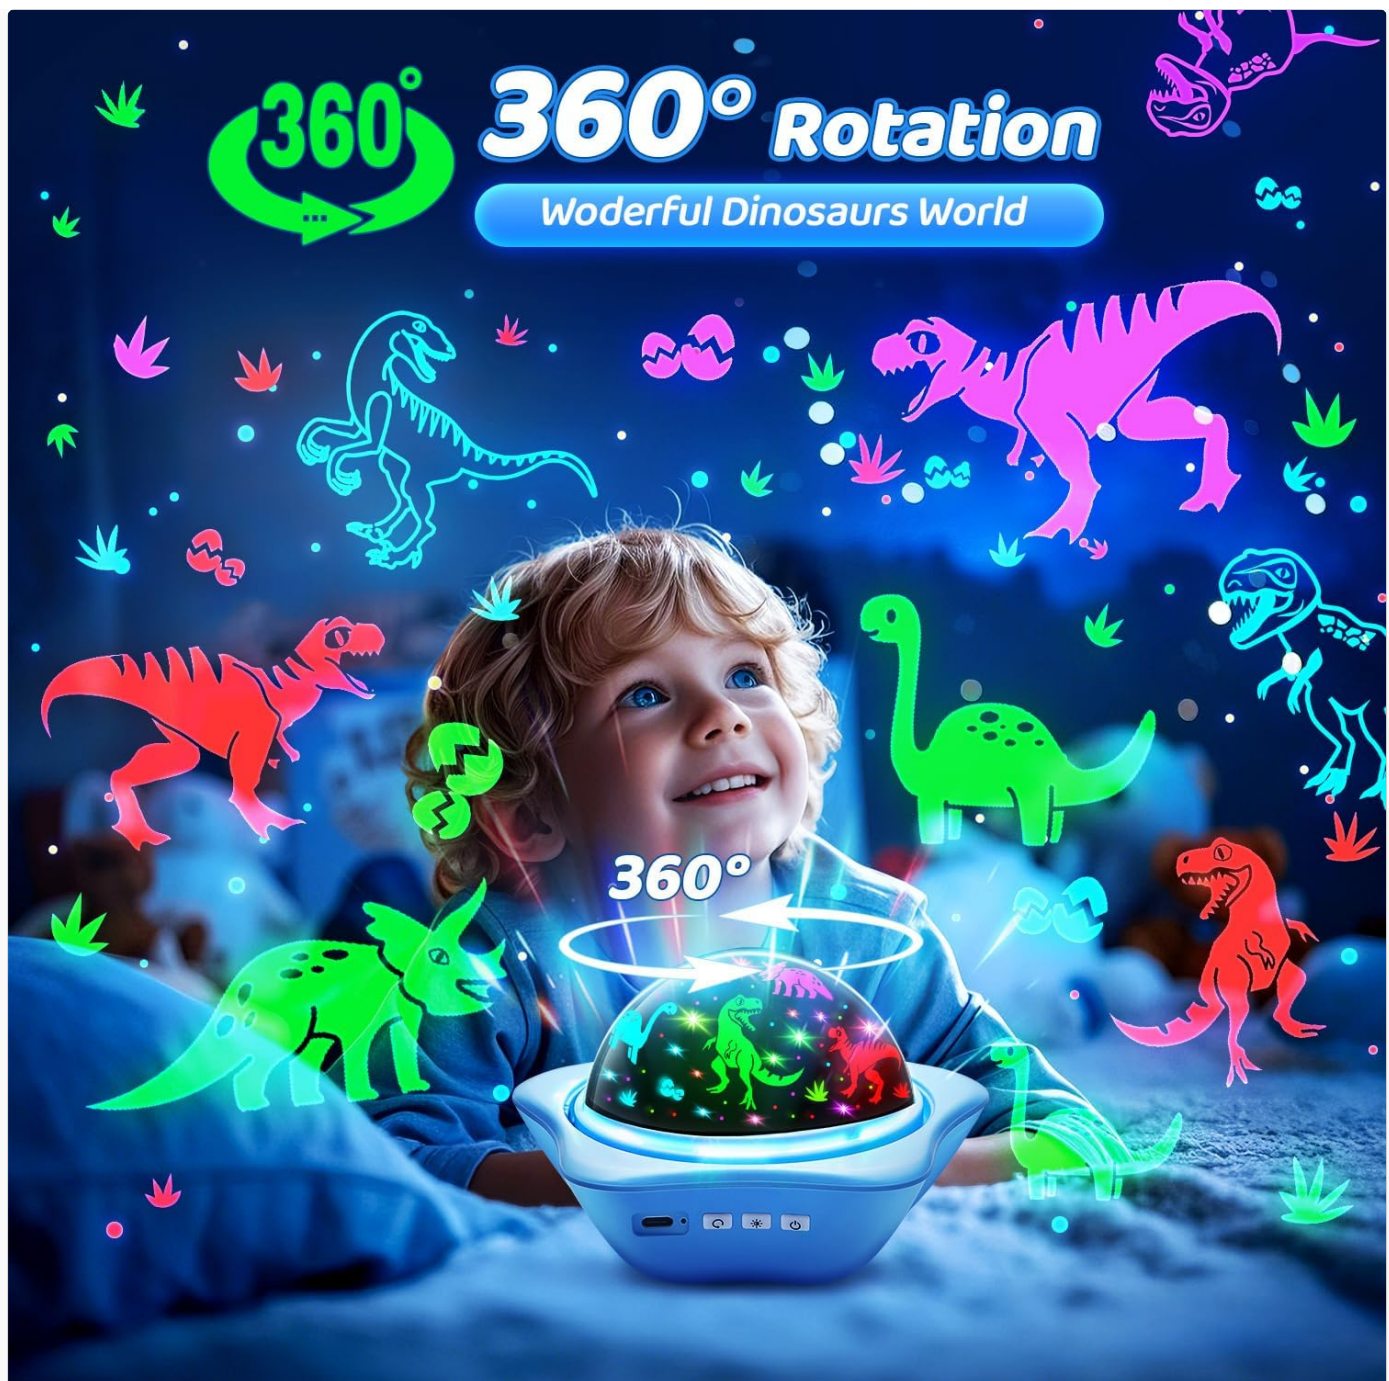


Image 6.2: The projector's 360-degree rotation feature creating a dynamic scene.

7. MAINTENANCE

7.1 Cleaning

- Ensure the projector is turned off and unplugged before cleaning.
- Wipe the exterior of the projector with a soft, dry cloth.
- For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface.
- Keep the projection films clean and free of dust or fingerprints to ensure clear projections.

7.2 Storage

- Store the projector in a cool, dry place away from direct sunlight and extreme temperatures.

- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan. Recharge every few months if not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	Low battery or no power.	Charge the projector using the USB-C cable. Ensure the power source is active.
Projection is dim or unclear.	Room is too bright; projection film is dirty or incorrectly installed.	Ensure the room is dark. Clean the projection film and the projector lens. Reinstall the film correctly.
Rotation function is not working.	Rotation feature is not activated; mechanical obstruction.	Press the Rotation Button (②). Check for any obstructions around the rotating mechanism.
Short battery life.	Battery not fully charged; aging battery.	Ensure the projector is fully charged. Battery performance may decrease over time.

9. SPECIFICATIONS

Feature	Detail
Model Number	WH-E07
Dimensions (L x W x H)	5.12" x 5.12" x 5.12" (13 x 13 x 13 cm)
Weight	0.32 ounces (approx. 9 grams)
Material	Acrylonitrile Butadiene Styrene (ABS)
Light Source Type	LED
Brightness	6 Lumen
Power Source	Battery Powered (Rechargeable Lithium Ion)
Battery Capacity	2400mAh
Voltage	3.6 Volts
Number of Films	6
Lighting Modes	13 RGB Colors, 78 Projection Options
Rotation	360-degree quiet rotation
Mounting Type	Wall mount or ceiling mount (placement dependent)

10. WARRANTY AND SUPPORT

One Fire provides a **24-month quality commitment** for this product. For technical support, warranty claims, or general inquiries, please contact the manufacturer or their authorized representatives:



Image 10.1: Contact details for manufacturer and representatives.

- **Manufacturer:** TK Co., Ltd. (One Fire)
- **European Representative:** CET PRODUCT SERVICE SP. Z O.O.
Address: Ul. Długa 33 102, Zgierz 95-100 Polen
E-mail: info.cetservice@gmail.com
Tel: +49 71416432251
- **British Representative:** CET PRODUCT SERVICE LTD.
Address: Beacon House Stokenchurch Business Park, Ibstone Rd, Stokenchurch, High Wycombe HP14 3FE United Kingdom
E-mail: info.cetservice@gmail.com
Tel: +44 7419325266

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question