

Weceleh WEID-A212

Weceleh 12-Inch 2-Burner Induction Cooktop User Manual

Model: WEID-A212 | Brand: Weceleh

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your new Weceleh induction cooktop. Retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the cooktop is installed by a qualified electrician in accordance with local codes and regulations.
- Do not touch hot surfaces. Use handles or knobs.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Use only cookware compatible with induction cooktops (magnetic base).

Safety Features

- **Child Safety Lock:** Prevents accidental operation by locking the control panel.
- **Over-Temperature Protection:** Automatically shuts off the cooktop if it detects excessive heat.
- **Automatic Shutdown Feature:** The cooktop will automatically turn off if left unattended for an extended period or if no cookware is detected.
- **Overflow Protection:** Designed to prevent damage from spills.
- **Automatic Pot Detection:** The cooktop will only activate when suitable cookware is placed on the cooking zone.

Weceleh Induction Cooktop Installation Instruction

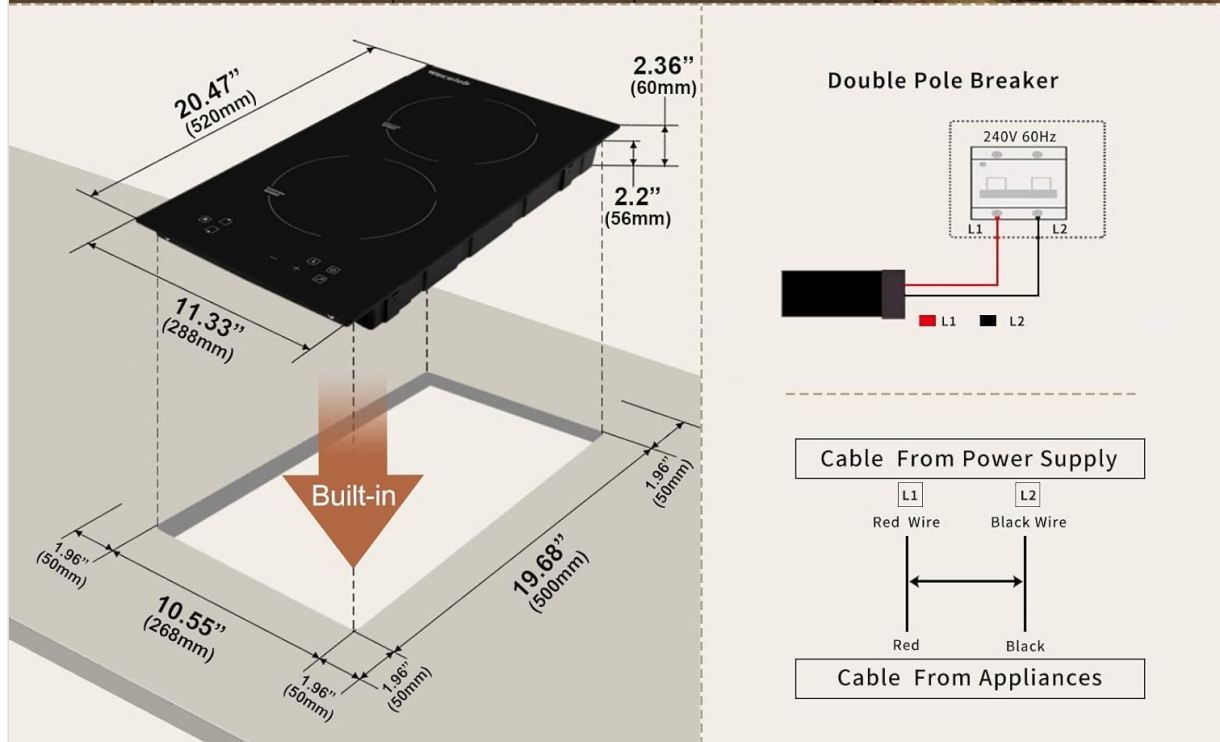


Figure 1: Child Safety Lock and Timer. This image illustrates the child safety lock feature, which prevents unintended operation, and the integrated timer function, allowing for precise cooking control.

DIGITAL SENSOR TOUCH CONTROLS AND 9 POWER LEVELS

Easy control the electric stove heating accurately.



Over-Temperature Protection



Auto Shutdown Protection



9-Power Levels Setting



2 Burners Can Work Together

Figure 2: Digital Sensor Touch Controls and Safety Features. This image highlights the cooktop's digital sensor touch controls and various safety mechanisms, including over-temperature protection and automatic shutdown, ensuring safe and accurate cooking.

2. PRODUCT OVERVIEW

The Weceleh 12-inch 2-burner induction cooktop is designed for efficient and safe cooking. It features two powerful cooking zones, digital touch controls, and multiple safety functions.

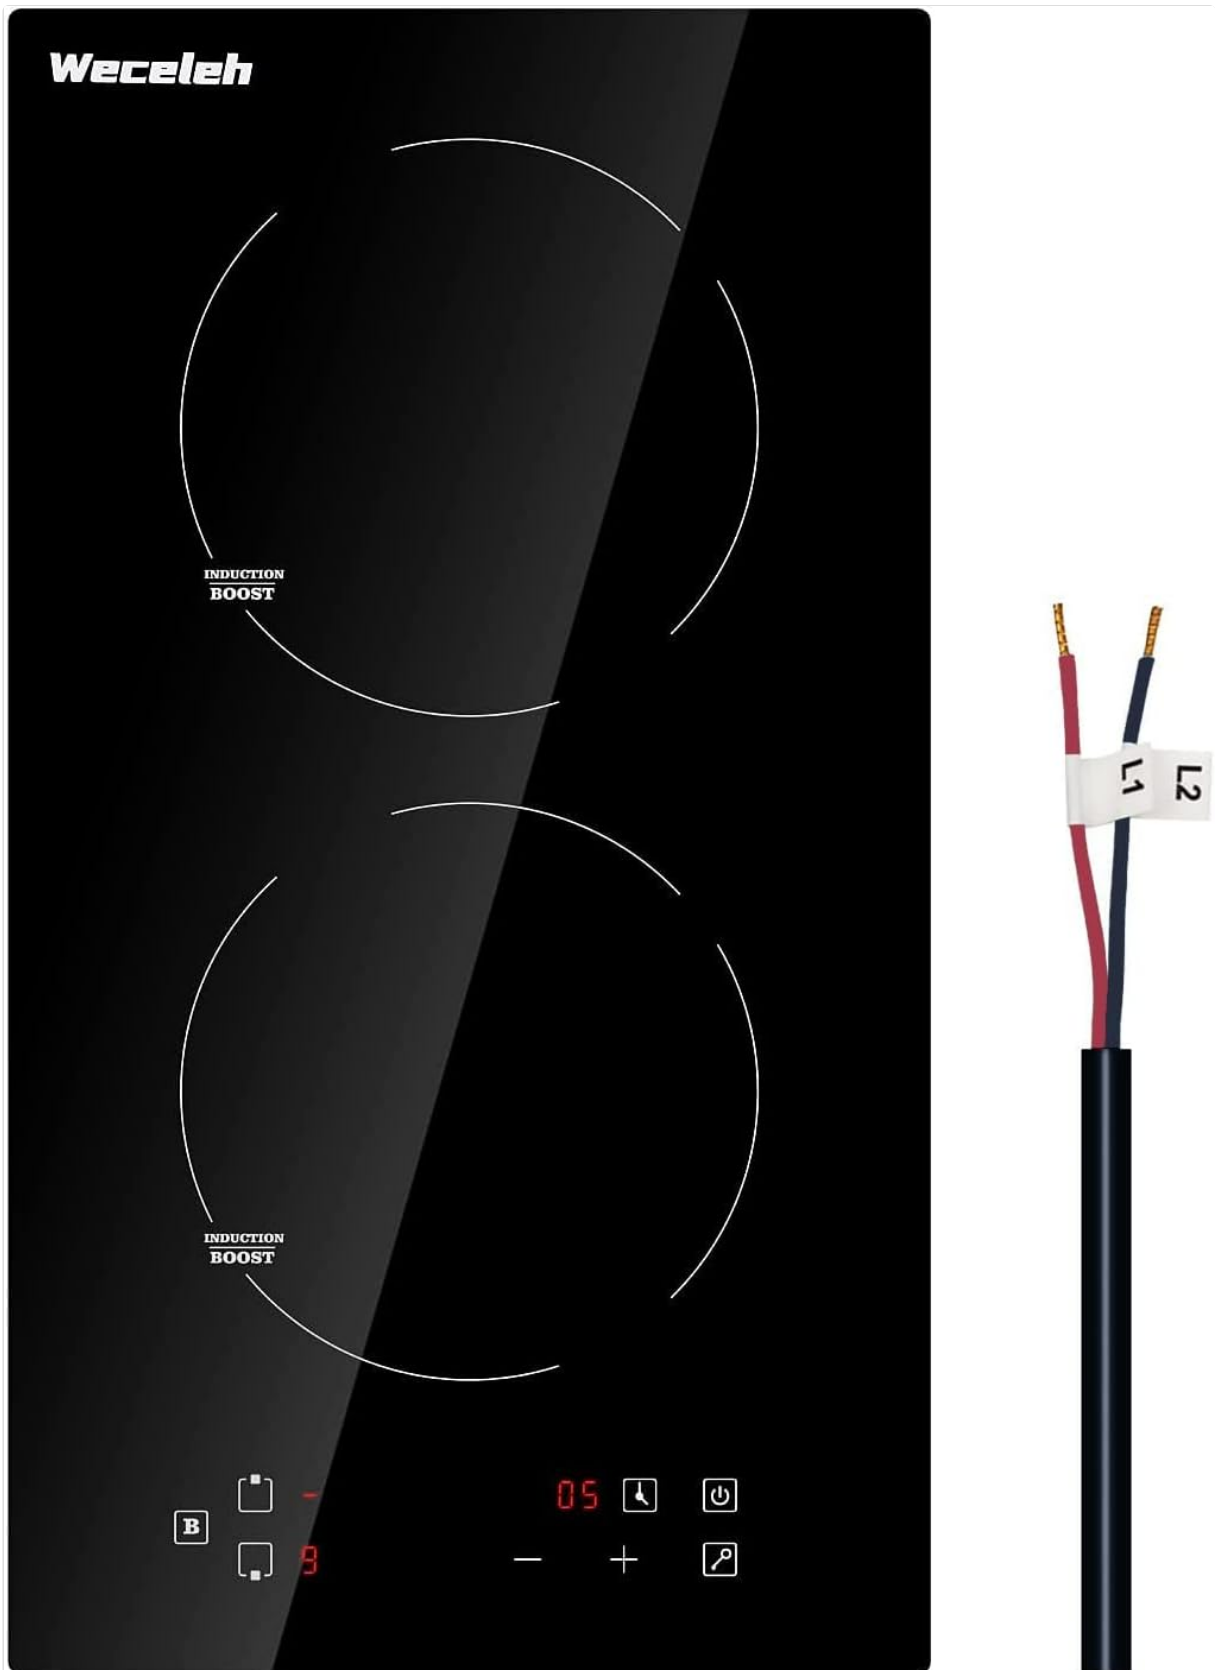


Figure 3: Weceleh 12-Inch 2-Burner Induction Cooktop. This image displays the overall design of the cooktop, including its two induction zones, touch control panel, and the hardwired connection for installation.

Key Features:

- **Dual Cooking Zones:** Two independent induction burners (1500W and 1800W, with boost functions up to 1800W and 2000W respectively).
- **9 Power Levels:** Precise temperature control for various cooking needs.
- **Digital Sensor Touch Controls:** Easy and intuitive operation.
- **Timer Function:** Adjustable from 1 to 99 minutes.

- **Boost Function:** Provides extra power for rapid heating.
- **Compatible Cookware:** Works with magnetic cookware such as stainless steel, cast iron, and enameled iron.
- **Durable Glass Surface:** Easy to clean and resistant to high temperatures.

BOOST FUNCTION

High Heat Energy Ensures Fast Cooking

High Power
»»
2mins

Suitable Pots

- stainless steel
- cast aluminum
- cast iron
- enameled iron

Figure 4: Boost Function and Cookware Compatibility. This image demonstrates the cooktop's boost function for faster cooking and lists compatible cookware materials like stainless steel, cast aluminum, cast iron, and enameled iron.

CHILD SAFETY LOCK AND TIMER

Keep your hands free and Safe cooking.



Figure 5: Professional Intelligent Control Panel. This image provides a detailed view of the cooktop's touch control panel, indicating the functions of each button for precise operation.



Figure 6: 9 Power Levels and Cooking Versatility. This diagram illustrates the range of 9 power levels available on the cooktop, suitable for diverse cooking techniques from simmering to deep frying.



Figure 7: Multi-Function Capabilities. This image highlights the various functions of the cooktop, including instant heating, child safety lock, timer, and multiple safety protections, emphasizing its convenience and safety.



Figure 8: Surface Material Properties. This image details the properties of the cooktop's ceramic tempered glass surface, noting its durability, heat resistance, waterproof nature, and energy-saving benefits.

3. INSTALLATION INSTRUCTIONS

The Weceleh 12-inch induction cooktop is designed for drop-in installation and requires hardwiring. Professional installation is recommended.

Dimensions and Cut-Out Requirements:

- **Product Dimensions:** 11.3" (width) x 20.5" (depth) x 2.4" (height)
- **Recommended Cut-Out Hole Size:** 10.5" (width) x 19.7" (depth)



Figure 9: Installation Dimensions and Wiring. This diagram provides critical measurements for the cooktop and the countertop cut-out, along with a clear wiring schematic for connecting the 220-240V power supply to the cooktop.

Electrical Connection:

The cooktop requires a 220-240V, 3500W hardwired connection. It does not come with a traditional plug. Ensure proper grounding and follow all electrical safety guidelines.

4. OPERATING INSTRUCTIONS

Powering On/Off:

1. To turn on the cooktop, press the **Power** button. The display will show "Lo" or similar indicator.
2. To turn off the cooktop, press the **Power** button again.

Selecting a Cooking Zone and Adjusting Power:

1. Place suitable induction-compatible cookware on the desired cooking zone.
2. Press the corresponding **Heating Zone Selection** button for the burner you wish to use.
3. Use the "+" or "-" buttons to adjust the power level from 1 to 9.
4. The cooktop will automatically detect the pot and begin heating.

Using the Boost Function:

- After selecting a cooking zone and setting a power level, press the **Boost** button to activate maximum power for rapid heating.
- The boost function is temporary and will automatically reduce power after a set period to prevent overheating.

Setting the Timer:

1. While a cooking zone is active, press the **Timer** button.
2. Use the "+" or "-" buttons to set the desired cooking time (1-99 minutes).

3. The cooktop will automatically turn off the selected zone once the timer expires.

Activating Child Safety Lock:

- To activate the child safety lock, press the **Key Lock** button. The control panel will be locked, preventing accidental changes.
- To deactivate, press and hold the **Key Lock** button again until the lock indicator disappears.

5. CLEANING AND MAINTENANCE

Regular cleaning will help maintain the appearance and performance of your induction cooktop.

- Always ensure the cooktop is cool and unplugged (if applicable) before cleaning.
- For daily cleaning, wipe the glass surface with a soft cloth and mild detergent.
- For stubborn stains, use a ceramic cooktop cleaner and a non-abrasive pad.
- Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the glass surface.
- Wipe dry with a clean cloth to prevent water spots.

6. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on or respond to controls.	No power supply. Child safety lock is active. Cooktop is in standby mode (displaying "Lo").	Check the circuit breaker. Deactivate the child safety lock by pressing and holding the Key Lock button. Press the Power button to activate the cooktop from standby.
"Lo" or "E" error code displayed.	No suitable cookware on the zone. Cookware is too small or not centered. Internal error.	Place induction-compatible cookware on the cooking zone. Ensure cookware covers at least 70% of the cooking zone. Turn off the cooktop, wait a few minutes, then turn it back on. If the error persists, contact customer support.
Cooktop makes a humming or buzzing noise.	Normal operation of induction technology. Cookware material or construction.	This is normal and not a defect. Try different cookware.

Problem	Possible Cause	Solution
Cooktop shuts off unexpectedly.	Over-temperature protection activated. Automatic shutdown feature. Cookware removed from zone.	Allow the cooktop to cool down. Ensure cookware is always on the zone during operation. Restart the cooktop.

If the problem persists after attempting these solutions, please contact Weceleh customer support.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Weceleh
Model Number	WEID-A212
Item Weight	10 pounds
Product Dimensions	11.3"D x 20.5"W x 2.4"H (4.72 x 7.87 x 0.94 inches)
Installation Type	Drop-In
Special Features	Adjustable Temperature, Timer
Burner Type	Induction
Heating Elements	2
Color	Black
Control Console	Touch
Voltage	220-240 Volts
Wattage	3500 watts
Fuel Type	Electric
Material Type	Glass (Ceramic Tempered Glass)
Included Components	Glass (Cooktop Unit)
First Available Date	January 11, 2021

8. WARRANTY AND SUPPORT

The Weceleh 12-inch induction cooktop comes with a **2-year warranty**.

For technical assistance, warranty claims, or any other inquiries, please contact Weceleh customer support. Our dedicated team is ready to assist you.

You can also refer to the official User Manual PDF for more detailed information [Download User Manual \(PDF\)](#)

