

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ariete](#) /
- › [Ariete Vintage 156 Toaster and 2877 Kettle Instruction Manual](#)

Ariete Vintage 156, Vintage 2877

Ariete Vintage 156 Toaster and 2877 Kettle Instruction Manual

Model: Vintage 156 Toaster, Vintage 2877 Kettle

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Ariete Vintage 156 Toaster and Ariete Vintage 2877 Kettle. Keep this manual for future reference.

- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Use the appliance on a stable, heat-resistant surface, away from flammable materials.
- **For the Toaster:** Do not insert oversized foods, metal foil packages, or utensils into the toaster. Do not cover the toaster while it is operating. Be aware that surfaces become hot during use.
- **For the Kettle:** Do not overfill the kettle beyond the maximum fill line. Only boil water in the kettle. Be cautious of hot steam escaping from the spout or lid during and after boiling. The cool-touch handle and steel walls are designed to prevent accidental burns.

SETUP AND FIRST USE

Unpacking

- Carefully remove both the toaster and kettle from their packaging.
- Remove all packaging materials, stickers, and labels.
- Wipe the exterior surfaces of both appliances with a damp cloth and dry thoroughly.

Ariete Vintage 156 Toaster First Use

Before toasting bread for consumption, operate the toaster a few times without bread at the highest browning setting. This will burn off any manufacturing residues and eliminate odors. Ensure the area is well-ventilated during this process.



Image: The Ariete Vintage 156 4-slice toaster, featuring its retro design and controls.

Ariete Vintage 2877 Kettle First Use

- Fill the kettle with fresh water to the maximum fill line.
- Boil the water, then discard it. Repeat this process 2-3 times to clean the interior and remove any manufacturing tastes.



Image: The Ariete Vintage 2877 electric kettle, showcasing its vintage design and handle.

OPERATING INSTRUCTIONS

Using the Ariete Vintage 156 Toaster

1. Place the toaster on a stable, flat, heat-resistant surface.
2. Insert up to four slices of bread into the toasting slots. The toaster features two independent pairs of slots.
3. Select your desired browning level using the browning control dial (settings 1-6). A lower number results in lighter toast, a higher number in darker toast.
4. Press the carriage lever down until it locks into place. The toasting cycle will begin.
5. The toast will automatically pop up when the selected browning cycle is complete.
6. Use the dedicated buttons for additional functions:
 - Defrost:** For toasting frozen bread.
 - Reheat:** For warming up already toasted bread.
 - Cancel:** To stop the toasting cycle at any time.

Using the Ariete Vintage 2877 Kettle

1. Remove the kettle from its power base.
2. Open the lid and fill the kettle with fresh water. Do not fill below the minimum (MIN) mark or above the maximum (MAX) mark. The water level indicator is located on the side of the kettle.



Image: Close-up of the Ariete Vintage 2877 kettle's water level indicator, showing MIN and MAX fill lines.

3. Close the lid securely.
4. Place the kettle back onto its power base.
5. Press the ON/OFF switch located at the base of the handle. The indicator light will illuminate.

6. The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
7. Carefully pour the hot water. The cool-touch handle ensures safe handling.

MAINTENANCE AND CLEANING

Always unplug both appliances and allow them to cool completely before cleaning.

Ariete Vintage 156 Toaster Cleaning

- **Crumb Tray:** Pull out the crumb trays located at the bottom of the toaster. Empty crumbs into a waste bin. Wipe the trays with a damp cloth and dry thoroughly before reinserting.



Image: A hand demonstrating the removal of the crumb trays from the bottom of the Ariete Vintage 156 toaster for cleaning.

- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never insert objects into the toasting slots to remove stuck bread. Unplug the toaster and carefully invert it to dislodge bread.

Ariete Vintage 2877 Kettle Cleaning

- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Filter:** The kettle has a removable filter located behind the spout. Remove the filter and rinse it under running water. If necessary, use a soft brush to remove any deposits. Reinsert the filter securely.



Image: A hand removing the removable filter from the Ariete Vintage 2877 kettle for cleaning.

- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle. To descale, fill the kettle with a mixture of equal parts water and white vinegar, or use a commercial descaling solution according to its instructions. Let it soak for at least 30 minutes (or as recommended by the descaler), then boil. Discard the solution and rinse the kettle thoroughly several times with fresh water.

TROUBLESHOOTING

General Issues

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household's circuit breaker.

Ariete Vintage 156 Toaster Issues

- **Bread not toasting evenly:** Ensure bread slices are of uniform thickness. Adjust the browning control setting.
- **Bread stuck in slots:** Unplug the toaster immediately. Allow it to cool, then carefully remove the bread using non-metallic tongs. Never use metal utensils.

Ariete Vintage 2877 Kettle Issues

- **Kettle not boiling water:** Ensure the kettle is properly seated on its power base and the ON/OFF switch is pressed. Check that the power base is plugged in.
- **Water has an unusual taste:** Perform the first-use cleaning steps again (boil and discard water several times). Descale the kettle if limescale buildup is present.

SPECIFICATIONS

| Feature | Ariete Vintage 156 Toaster | Ariete Vintage 2877 Kettle |
|----------------------------|----------------------------|----------------------------|
| Brand | Ariete | Ariete |
| Model | Vintage 156 | Vintage 2877 |
| Power | 1600 Watts | 2000 Watts |
| Number of Slots / Capacity | 4 Slices | 1.7 Liters |
| Browning Settings | 6 Levels | N/A |
| Material | Steel | Steel |
| Color | Beige Pastel | Beige Pastel |

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Warranty terms may vary by region and retailer.

For technical support or inquiries regarding your Ariete Vintage 156 Toaster or Ariete Vintage 2877 Kettle, please contact Ariete customer service or visit their official website for assistance.