

Roland F701-LA

Roland Digital Piano F701-LA Instruction Manual

Model: F701-LA (Light Oak)

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Roland F701-LA Digital Piano is designed for home use, offering a blend of modern aesthetics and advanced musical performance. It features Roland's SuperNATURAL sound engine and a PHA-4 Standard keyboard for expressive playability. Its compact design integrates seamlessly into various living spaces. This manual provides essential information for setting up, operating, and maintaining your digital piano.

Key Features:

- Rich expression from Roland's SuperNATURAL piano technology.
- Authentic acoustic piano feel with the PHA-4 Standard keyboard.
- Understated modern design and compact size for discreet placement.
- Headphones 3D Ambience for an immersive and realistic playing experience.
- Intuitive display with easy-to-use icons for navigation.
- Bluetooth audio and MIDI connectivity for smartphone integration and music apps.
- Compatibility with Roland's Piano Every Day app for enhanced learning.
- Includes BNC-05 height-adjustable bench (region dependent).

2. SETUP

2.1 Unboxing and Assembly

Carefully remove all components from the packaging. It is recommended to have two people for assembly due to the weight and fragility of the instrument. Follow the detailed instructions provided in the included Owner's Manual for proper assembly of the piano stand and pedals.



Figure 2.1: Front view of the Roland F701-LA Digital Piano in Light Oak, showcasing the keyboard and pedal unit.

2.2 Power Connection

Connect the included AC adaptor to the DC IN jack on the rear of the piano, then plug the power cord into a standard electrical outlet. Ensure all connections are secure before powering on the instrument.

2.3 Bench Assembly (if included)

If your package includes the BNC-05 height-adjustable bench, assemble it according to its separate instructions. Adjust the height to a comfortable playing position.



Figure 2.2: The Roland F701-LA Digital Piano with its accompanying adjustable bench, highlighting the complete setup.

3. OPERATION

3.1 Power On/Off

Press the **POWER** button located on the left side of the control panel to turn the piano on or off. The display will illuminate upon startup.

3.2 Volume Control

Adjust the master volume using the **VOLUME** knob or buttons on the control panel. For private practice, connect headphones to the 3.5mm or 1/4-inch headphone jacks located on the underside of the piano. The Headphones 3D Ambience effect provides an immersive sound experience.



Figure 3.1: Detailed view of the control panel, showing power, volume, and sound selection buttons.

3.3 Sound Selection

Use the dedicated buttons or the display interface to select different instrument sounds (e.g., Grand Piano, Electric Piano, Strings). Refer to the Owner's Manual for a complete list of available tones and how to access them.

3.4 Bluetooth Connectivity

The F701-LA supports Bluetooth audio and MIDI. To connect your smartphone or tablet:

1. Activate Bluetooth on your device.
2. On the piano, press the **Bluetooth** button (usually indicated by a Bluetooth icon).
3. Select "F701-LA" from your device's Bluetooth settings.
4. Once connected, you can stream audio from your device through the piano's speakers or use MIDI apps for interactive lessons and recording.



Figure 3.2: A tablet connected via Bluetooth displaying sheet music, demonstrating the piano's smart device integration.

4. MAINTENANCE

4.1 Cleaning

Wipe the piano's surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the finish. Do not spray cleaners directly onto the piano.

4.2 Storage and Care

Keep the piano away from direct sunlight, extreme temperatures, and high humidity. These conditions can affect the instrument's performance and lifespan. When not in use, close the keyboard lid to protect the keys from dust and debris.

5. TROUBLESHOOTING

- **No Sound:**

- Ensure the power cord is securely connected and the piano is turned on.
- Check the master volume level.
- If headphones are connected, disconnect them to hear sound from the speakers.

- **Keys Not Responding:**

- Verify the piano is powered on.
- If specific keys are unresponsive, contact customer support.

- **Bluetooth Connection Issues:**

- Ensure Bluetooth is enabled on both the piano and your smart device.
- Try unpairing and re-pairing the devices.
- Move your device closer to the piano to ensure a strong signal.

• **Unusual Noises:**

- Check for loose connections or objects on or near the speakers.
- If the noise persists, power off the piano and contact customer support.

For further assistance, refer to the comprehensive troubleshooting section in the included Owner's Manual or visit the Roland support website.

6. SPECIFICATIONS

Brand	Roland
Model Name	F701 L
Model Number	F701-LA
Color	Light Oak
Number of Keys	88
Skill Level	All
Special Feature	Digital Display
Connector Type	USB A, USB B, 3.5mm Jack
Connectivity Technology	Bluetooth
Power Source	USB
Headphones Jack	3.5mm Jack, 1/4-inch Jack
Item Dimensions	53.6 x 13.65 x 36 inches
Included Components	AC adaptor, Owner's Manual, Power cord

7. WARRANTY & SUPPORT

7.1 Warranty Information

The Roland F701-LA Digital Piano comes with a 1-year manufacturer's warranty. Please retain your proof of purchase for any warranty claims. For detailed terms and conditions, refer to the warranty section in your Owner's Manual.

7.2 Customer Support

For technical support, service, or additional information, please visit the official Roland website or contact their customer service department. Contact details can be found in your Owner's Manual or on the Roland website.