

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio Sport Watch LW-204-1BCF User Manual](#)

Casio LW-204-1BCF

Casio Sport Watch LW-204-1BCF User Manual

Brand: Casio

Model: LW-204-1BCF

INTRODUCTION

The Casio Sport Watch LW-204-1BCF is a versatile and functional digital timepiece designed for everyday wear and active lifestyles. It combines sporty aesthetics with practical features, offering reliability and comfort. This manual provides comprehensive instructions for setting up, operating, and maintaining your watch, ensuring you get the most out of its capabilities.



Figure 1: Front view of the Casio Sport Watch LW-204-1BCF, showcasing its digital display and sleek design.

SETUP

Initial Setup

Upon receiving your Casio LW-204-1BCF watch, it is recommended to perform an initial check. Ensure the watch is functioning correctly and the display is clear. The watch comes with a pre-installed CR2016 battery, providing approximately 3 years of life.



Figure 2: The packaging box for the Casio Sport Watch LW-204-1BCF.

Setting the Time and Date

To set the time and date on your watch, follow these general steps:

1. In the Timekeeping Mode, press and hold the **Adjust** button (usually located on the top-left side) until the seconds begin to flash, indicating the setting mode.
2. Press the **Mode** button (usually located on the bottom-left side) to cycle through the settings: seconds, hour, minute, year, month, day.
3. Use the **Light** or **Start/Stop** buttons (usually on the right side) to increase or decrease the flashing value.
4. Once all settings are correct, press the **Adjust** button again to exit the setting mode.
5. You can switch between 12-hour and 24-hour formats by pressing the **Light** button while the hour/minute setting is flashing.

OPERATING MODES

Your Casio LW-204-1BCF watch features several operating modes accessible via the **Mode** button:

- **Timekeeping Mode:** This is the default mode, displaying the current time, day of the week, and date. It supports

both 12-hour and 24-hour formats.

- **Stopwatch Mode:** Ideal for timing events, this mode offers 1/100-second accuracy.
 - Press the **Start/Stop** button to start and stop the stopwatch.
 - Press the **Adjust** button to reset the stopwatch.
- **Countdown Timer Mode:** Use this feature for timed activities.
 - To set the countdown time, enter the Countdown Timer Mode and hold the **Adjust** button.
 - Use the **Mode** button to select hours, minutes, or seconds, and the **Light/Start/Stop** buttons to adjust the values.
 - Press **Start/Stop** to begin the countdown. An alarm will sound when the timer reaches zero.
- **Alarm Mode:** Set a daily alarm to alert you at a specific time.
 - In Alarm Mode, hold the **Adjust** button to set the alarm time.
 - Use the **Mode** button to select hours or minutes, and the **Light/Start/Stop** buttons to adjust.
 - Press **Adjust** to confirm. You can also enable/disable the alarm and hourly time signal in this mode.
- **Hourly Time Signal:** This feature causes the watch to beep every hour on the hour. It can be toggled on or off in the Alarm Mode.

KEY FEATURES

- **50-Meter Water Resistance:** The watch is designed to withstand water exposure up to 50 meters. This makes it suitable for daily activities such as washing hands, bathing, or swimming in shallow water. It is not recommended for diving or prolonged submersion.



Figure 3: Icon representing water resistance.

- **LED Backlight with Afterglow:** For enhanced visibility in low-light conditions, the watch features an LED backlight. The afterglow function keeps the light on for a few seconds after the button is released, allowing for easy time checking in the dark.



Figure 4: Icon representing the LED backlight feature.

- **Flash Alert:** This feature provides a visual cue by flashing the display in conjunction with the audible buzzer for alarms and the hourly time signal. This is particularly useful in noisy environments or for users with hearing impairments.



Figure 5: Icon representing the alarm and flash alert feature.

- **Full Auto-Calendar (to year 2039):** The watch automatically adjusts for different month lengths and leap years up to the year 2039, ensuring accurate date display without manual adjustment.
- **Long Battery Life:** The Casio LW-204-1BCF is powered by a CR2016 battery, offering an approximate battery life of 3 years under normal usage conditions.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance and longevity of your watch, regularly wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using chemical cleaners or abrasive materials, as these can damage the resin case and strap.

Battery Replacement

When the display becomes dim or the watch stops functioning, it may be time to replace the battery. The Casio LW-204-1BCF uses a CR2016 battery. It is highly recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

If you encounter any issues with your Casio LW-204-1BCF watch, refer to the following common troubleshooting tips:

- **Blank or Dim Display:** This usually indicates a low battery. Replace the CR2016 battery.
- **Buttons Not Responding:** Ensure the watch is not in a specific mode that locks buttons (e.g., setting mode without confirmation). Try pressing the **Adjust** button to exit any setting mode. If unresponsive, a battery issue might be present.
- **Incorrect Time/Date:** Re-enter the time setting mode and adjust the time and date as per the "Setting the Time and Date" section. Ensure the 12/24-hour format is correctly selected.
- **Water Inside the Watch:** If moisture appears inside the watch, stop using it immediately and take it to a qualified technician. This could indicate a compromised water seal.

For issues not covered here, please contact Casio customer support or visit an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	LW-204-1BCF
Case Dimensions	35.9 x 35.9 x 9.4 mm (approx.)
Weight	4 ounces (approx.)

Feature	Detail
Case/Bezel Material	Resin
Band Material	Resin
Water Resistance	50 meters (5 BAR)
Battery Type	CR2016
Battery Life	Approx. 3 years
Calendar	Full auto-calendar (to year 2039)
Time Format	12/24-hour format
Origin	China

WARRANTY AND SUPPORT

Casio products are manufactured to high-quality standards and come with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Casio website. Keep your proof of purchase for warranty claims.

For technical support, service, or inquiries regarding your Casio Sport Watch LW-204-1BCF, please contact Casio customer service through their official channels. You can typically find contact information on the Casio website or in the product packaging.