

Qoosea KC909

Qoosea Portable CD Player User Manual

Model: KC909

1. SAFETY INSTRUCTIONS

- Read all instructions carefully before use.
- Keep the device away from water, moisture, and high temperatures.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Use only the provided power adapter to avoid damage.
- Avoid exposing the CD player to direct sunlight or extreme heat.
- Keep out of reach of children.


2. PACKAGE CONTENTS

Verify that all items are present in the package:

- CD Player
- 5V-2A USB Adaptor
- Remote Control
- Wall-mount Kit
- Wall-mount Plate
- User Manual
- Desk Stand
- 3.5mm Male-to-Male Audio Cable

3. PRODUCT OVERVIEW

Main Unit Controls and Ports

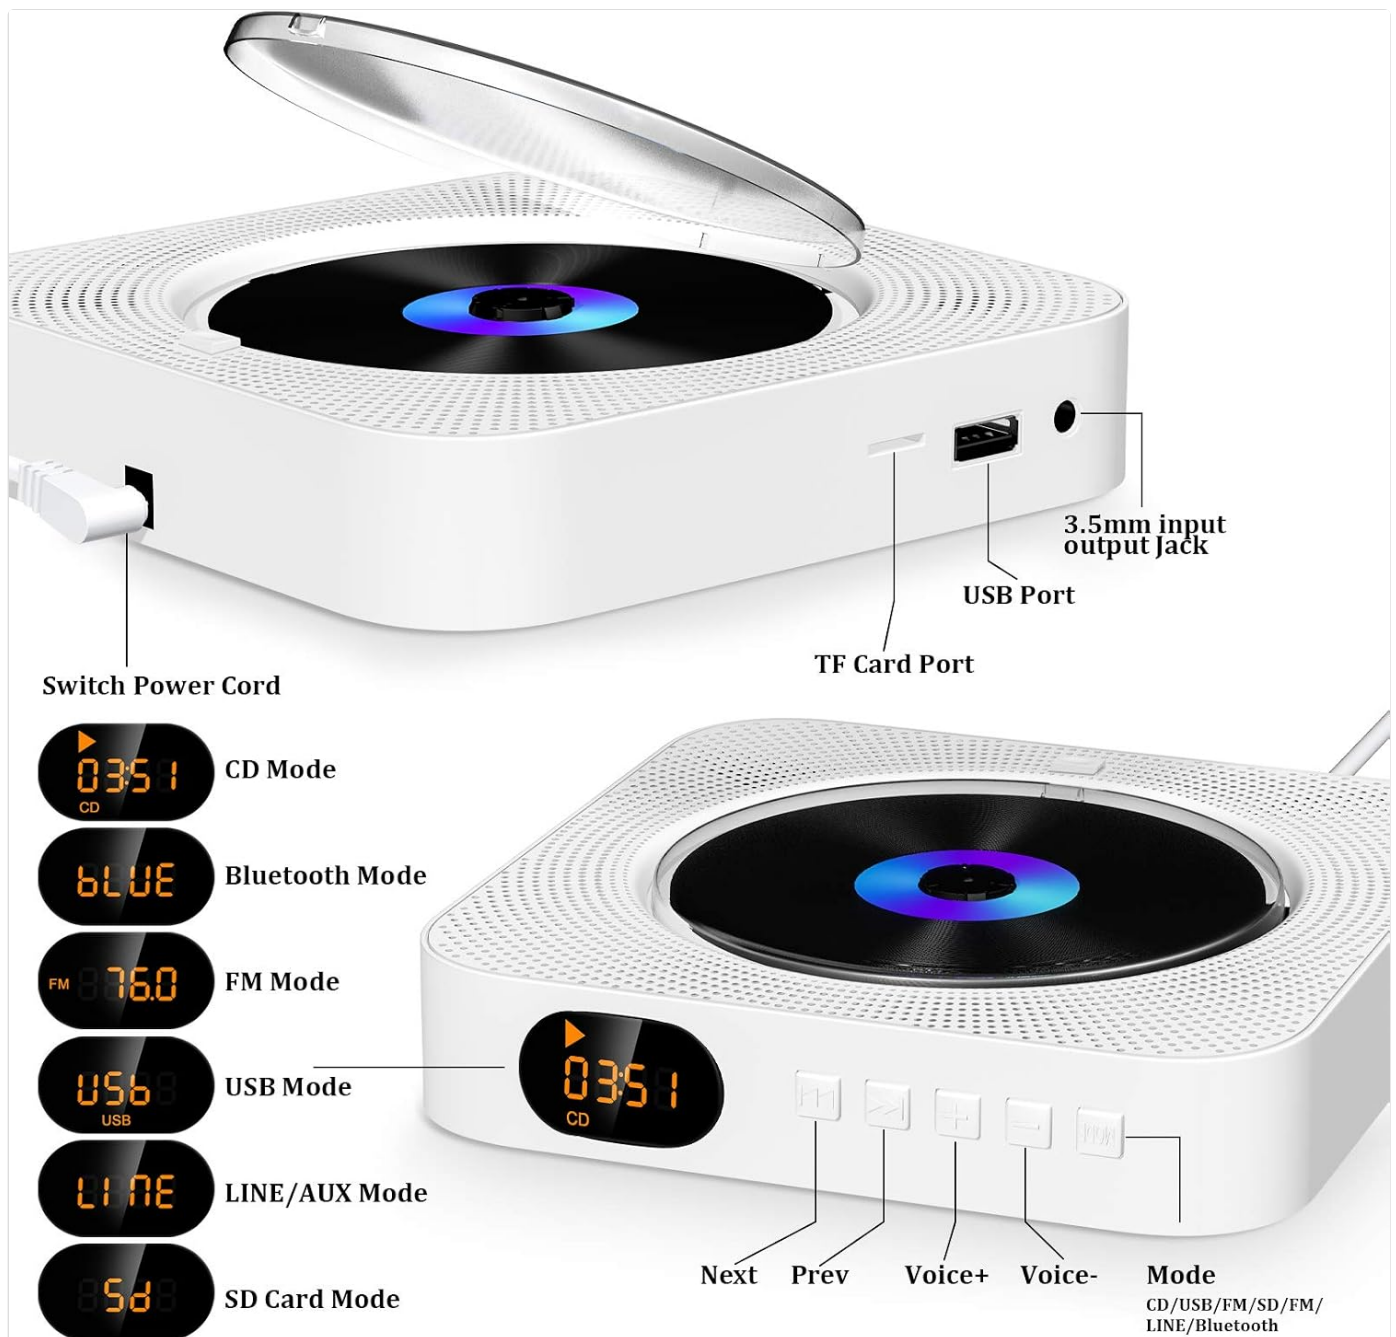

This image illustrates the various ports and controls on the main unit of the CD player. On the side, you will find the power switch cord, TF Card Port, USB Port, and a 3.5mm input/output jack. The front panel features a digital display indicating the current mode and track information, along with control buttons for navigation (Next, Prev), volume adjustment (Voice+, Voice-), and mode selection (Mode).

- **Power Switch Cord:** Pull to power on/off.
- **TF Card Port:** Insert a TF (Micro SD) card for music playback.
- **USB Port:** Insert a USB flash drive for music playback.
- **3.5mm Input/Output Jack:** Connect headphones or external audio devices.
- **Display:** Shows current mode (CD, Blue, FM, USB, Line, SD Card) and track/frequency information.
- **Control Buttons:** Navigate tracks, adjust volume, and change modes directly on the unit.

Remote Control

Convenient Remote Control Operation



The remote control provides convenient access to all functions from a distance. It includes buttons for power, mode selection (AUX, FM/SH, USB, CD), volume control, track navigation, repeat functions, and a numeric keypad for direct track selection.

- **Power Button:** Turns the device on or off.
- **Mode Buttons (AUX, FM/SH, USB, CD, Bluetooth):** Select the desired playback mode.
- **Volume +/-:** Adjust the audio volume.
- **Play/Pause, Next/Previous:** Control media playback.
- **Repeat Button:** Cycles through repeat options (e.g., repeat one, repeat all).
- **Numeric Keypad:** Directly select CD tracks.

4. SETUP

Power Connection

1. Connect the provided 5V-2A USB adaptor to the CD player's power input.

2. Plug the USB adaptor into a standard wall outlet.

Remote Control Battery Installation

- The remote control requires two AAA batteries (not included).
- Open the battery compartment on the back of the remote control.
- Insert the batteries, ensuring correct polarity (+/-).
- Close the battery compartment.

5. BASIC OPERATION

Power On/Off

- **Using the Pull Cord:** Gently pull the power cord downwards to turn the player on or off.
- **Using the Remote Control:** Press the power button () on the remote control.

Mode Selection

The CD player supports multiple modes, each indicated by a different background light color on the unit's display:



**Different Mode
Different Color**



This image shows the various modes available on the CD player, each with a distinct light color for easy identification. The modes include CD Play, USB Play, Micro SD Play, FM Radio, Line In/Out, and Bluetooth.

- **On the Unit:** Press the 'Mode' button repeatedly to cycle through available modes (CD, USB, SD Card, FM Radio, LINE/AUX, Bluetooth).
- **On the Remote Control:** Press the dedicated mode buttons (CD, USB, FM/SH, AUX, Bluetooth) to directly select a mode.

Volume Control

- **On the Unit:** Use the 'Voice+' and 'Voice-' buttons.
- **On the Remote Control:** Use the 'VOL+' and 'VOL-' buttons.

Play/Pause and Track Navigation

- **Play/Pause:** Press the Play/Pause button (▶||) on the unit or remote.
- **Next/Previous Track:** Press the Next (▶▶) or Previous (◀◀) buttons on the unit or remote.

6. OPERATING MODES

CD Play Mode

This mode allows playback of audio CDs.

- **Supported Formats:** CD, CD-R, CD-RW, MP3, WMA.
- **Inserting a CD:** Gently open the dust cover and place the CD onto the spindle with the label side facing up. Close the dust cover. The player will automatically detect and begin playing the CD.
- **Removing a CD:** Open the dust cover and carefully lift the CD from the spindle.
- **Repeat Function:** Press the 'REPEAT' button on the remote to cycle through repeat options (e.g., repeat one track, repeat all tracks).

Bluetooth Mode

Connect your Bluetooth-enabled devices wirelessly.

ALL IN ONE BLUETOOTH CD PLAYER



This image highlights the Bluetooth 5.1 connectivity, allowing you to stream music wirelessly from devices like smartphones. It also shows the FM Radio feature with its frequency range.

- **Pairing:** Select Bluetooth mode. The player will enter pairing mode, indicated by 'BLUE' on the display. On your device, search for 'Qoosea CD Player' and connect.
- **Bluetooth Version:** 5.1, with a connectivity range of up to 33 feet.
- **Note:** This device functions as a Bluetooth receiver only. It cannot connect to other Bluetooth speakers or headphones.

FM Radio Mode

Listen to your favorite FM radio stations.

- **Frequency Range:** Supports 76MHz-108MHz.
- **Auto-Scan:** In FM mode, press the 'Play/Pause' button on the remote to auto-scan and save available stations.

- **Manual Tuning:** Use the 'Next/Previous' buttons to manually tune to stations.

USB Play Mode

Play music directly from a USB flash drive.

- **Supported Formats:** MP3, WMA.
- **Insertion:** Insert a USB flash drive into the USB port. The player will automatically switch to USB mode and begin playback.

SD Card Play Mode

Play music directly from a TF (Micro SD) card.

- **Supported Formats:** MP3, WMA.
- **Insertion:** Insert a TF card into the TF Card Port. The player will automatically switch to SD Card mode and begin playback.

LINE/AUX Play Mode

Connect external audio devices using the 3.5mm audio cable.

- **Connection:** Use the provided 3.5mm male-to-male audio cable to connect the CD player to an external device (e.g., smartphone, tablet, laptop).
- **Selection:** Select LINE/AUX mode on the player. Audio from the connected device will play through the CD player's speakers.

7. TIMER FUNCTION


The Qoosea CD player includes a timer switch function. Refer to the detailed instructions in the full user manual for setting and utilizing this feature.

8. INSTALLATION OPTIONS

The CD player offers versatile installation options, including wall mounting and desk stand placement.

BLUETOOTH 5.1

Enjoy Your Wireless Music

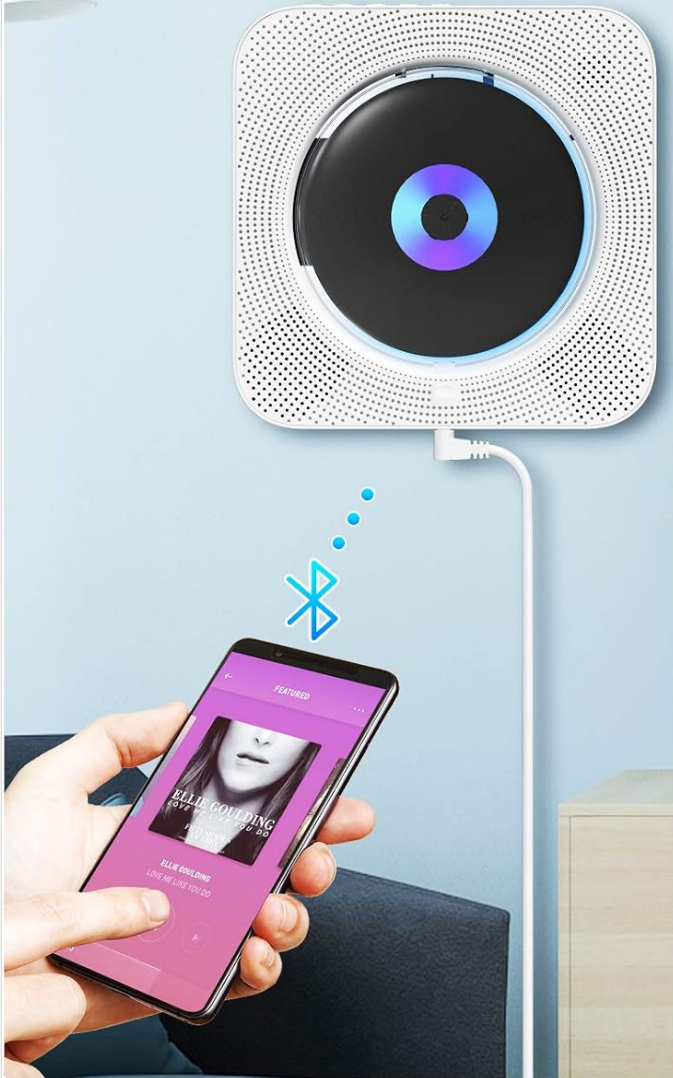

Full-band FM Radio

Supports 76MHz-108.0MHz



This image provides an overview of the CD player's compact dimensions and key features, including its various connectivity options and the dust cover design.

Wall Mounting



This image demonstrates the versatility of the CD player, showing it used in different environments, including a wall-mounted setup.

- Use the provided Wall-mount Kit and Wall-mount Plate.
- Choose a suitable location on a wall.
- Securely attach the wall-mount plate to the wall using appropriate screws and anchors.
- Carefully slide the CD player onto the mounted plate until it clicks into place.

Desk Stand Installation

- Attach the provided Desk Stand to the bottom of the CD player.
- Place the player on a flat, stable surface such as a desk or table.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	No power connection or faulty adapter.	Ensure the power adapter is securely connected and plugged into a working outlet. Try a different outlet.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD with a soft cloth. Check for scratches. Reinsert the CD correctly with the label side up.
No sound.	Volume is too low or muted. Incorrect mode selected.	Increase the volume. Ensure the correct mode (CD, Bluetooth, etc.) is selected. Check headphone connection if applicable.
Bluetooth pairing fails.	Device is out of range or not in pairing mode.	Ensure the CD player is in Bluetooth mode and within 33 feet of your device. Restart both devices and try pairing again.
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and player.	Replace AAA batteries, ensuring correct polarity. Remove any obstructions.

10. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.5 x 1.22 x 6.5 inches
Item Weight	1.61 pounds
Model Number	KC909
Connectivity Technology	Auxiliary, Bluetooth 5.1, USB
Supported Disc Formats	CD, CD-R, CD-RW, MP3, WMA
Supported Media (USB/SD)	MP3, WMA
FM Radio Frequency	76MHz-108MHz
Special Feature	Portable, Wall-Mountable, Desk Stand, Dust Cover, Timer Switch

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Qoosea website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question