

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Epson](#) /
- › [Epson BrightLink 725Wi Ultra Short Throw 3LCD Projector User Manual](#)

## Epson 725Wi

# Epson BrightLink 725Wi Ultra Short Throw 3LCD Projector User Manual

Model: 725Wi

## INTRODUCTION

---

This manual provides instructions for the safe and efficient operation of your Epson BrightLink 725Wi Ultra Short Throw 3LCD Projector. Please read this manual thoroughly before using the product and retain it for future reference.

The Epson BrightLink 725Wi is designed to deliver bright, clear, and interactive projections, ideal for educational and professional environments. It features 4,000 lumens of color and white brightness, 3LCD technology, and WXGA resolution for images up to 100 inches.

## WHAT'S IN THE BOX

---

Verify that all items listed below are included in your package:

- BrightLink 725Wi WXGA 3LCD Interactive Laser Display
- User Manual (this document)
- 6' Power Cable
- 16' USB A/B Cable
- Projector Remote Control
- 2 x Interactive Pens
- 4 x Soft Pen Tips
- 2 x Hard Pen Tips
- Pen Tray
- 2 x AA Batteries (for Interactive Pens)
- 2 x AA Batteries (for Remote)
- Projector Feet
- Corner Markers
- Magnets for Corner Markers
- Password Protect Sticker
- SMART Learning Suite Redemption Code

### 1. Unpacking and Placement

Carefully remove the projector and all accessories from the packaging. Place the projector on a stable, flat surface or mount it securely. The ultra-short throw design allows for placement very close to the projection surface.



Figure 1: Epson BrightLink 725Wi Projector with its interactive bar, illustrating its compact design and connectivity options.

### 2. Connecting Power

Connect the provided power cable to the projector's power inlet and then to a standard electrical outlet. Ensure the power source meets the projector's voltage requirements.

### 3. Connecting Input Devices

The BrightLink 725Wi supports various input sources:

- **HDMI:** Connect an HDMI cable from your computer or video source to one of the HDMI ports on the projector.
- **USB:** Use the USB A/B cable to connect to a computer for interactive functions or for PC-free projection from a USB

drive.

- **Wi-Fi:** The projector features built-in wireless connectivity. Refer to the network setup section for details on connecting to a wireless network.

## 4. Initial Power On and Image Adjustment

Press the power button on the projector or remote control. The projector will power on and display the Epson logo. Adjust the projector's position and focus to achieve a clear, rectangular image on your screen or wall. The automatic image alignment and pen calibration features will assist in optimizing the display.

## OPERATING INSTRUCTIONS

---

### 1. Basic Operation

- **Power On/Off:** Use the power button on the projector or remote.
- **Source Selection:** Press the "Source" button on the remote or projector to cycle through available input sources (HDMI, USB, Wireless).
- **Menu Navigation:** Use the arrow keys and "Enter" button on the remote to navigate the on-screen menu for settings adjustments.

### 2. Interactive Features

The BrightLink 725Wi supports interactive functionality with the included interactive pens and optional touch modules. Up to eight users can interact simultaneously.

- **Pen Calibration:** Perform pen calibration after initial setup or if the interactive pens are not accurately tracking. This is typically an automatic process.
- **Using Interactive Pens:** The pens allow you to write, draw, and control your computer desktop directly on the projected image.
- **SMART Learning Suite:** Utilize the provided redemption code to access the SMART Learning Suite software for enhanced interactive lessons and presentations.

### 3. Wireless Connectivity

To connect the projector to a wireless network or cast content wirelessly:

1. Access the projector's menu and navigate to the "Network" settings.
2. Select "Wireless LAN" and enable it.
3. Choose your desired network and enter the password if prompted.
4. Follow the on-screen instructions to connect your device (computer, tablet, smartphone) to the projector for wireless content sharing.

## MAINTENANCE

---

The Epson BrightLink 725Wi features a virtually maintenance-free laser light source with a 20,000-hour lifespan, eliminating the need for lamp replacements.

### 1. Cleaning the Projector

- **Exterior:** Wipe the exterior casing with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth with a mild detergent, then wipe dry.
- **Lens:** Gently clean the projector lens with a lens cleaning cloth or lens paper. Avoid using abrasive materials or excessive force.

- **Air Vents:** Periodically check the air vents for dust accumulation. Use a soft brush or compressed air to clear any blockages, ensuring proper airflow.

## 2. Storing the Projector

When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. Use the original packaging or a protective case to prevent dust and damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	Projector not powered on. Input source not selected. Cable connection loose or incorrect.	Ensure power cable is securely connected and power button is pressed. Press the "Source" button to select the correct input. Check HDMI/USB cable connections at both ends.
Image is blurry or out of focus	Projector not positioned correctly. Focus not adjusted.	Adjust projector position for optimal distance and angle. Use the focus ring or menu option to sharpen the image.
Interactive pens not working	Pens need new batteries. Pen calibration required. USB A/B cable not connected (for interactive functionality).	Replace AA batteries in the interactive pens. Perform pen calibration through the projector menu. Ensure the USB A/B cable is connected between the projector and the computer.
No sound	Volume too low or muted. Audio source not configured correctly.	Increase volume using the remote or projector controls. Check audio settings on the connected source device and the projector.

## SPECIFICATIONS

Feature	Detail
Brand	Epson
Model Number	725Wi
Display Technology	3LCD
Brightness	4,000 Lumens (Color and White Brightness)
Resolution	WXGA (1280 x 800)
Aspect Ratio	16:10
Light Source	Laser (20,000-hour lifespan)
Projection Size	Up to 100 inches diagonal
Connectivity	HDMI, USB, Wi-Fi

Feature	Detail
Special Features	Ultra Short Throw, Interactive (up to 8 users), Automatic Image Alignment, Pen Calibration
Product Dimensions	15.6 x 14.1 x 5.3 inches
Item Weight	18.11 pounds
Recommended Use	Classroom

## WARRANTY AND SUPPORT



 


For warranty information and technical support, please refer to the official Epson website or contact Epson customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

 
**Online Support:** Visit [Epson Support](#) for drivers, FAQs, and troubleshooting guides.

**Contact Information:** Refer to your region-specific Epson website for phone numbers and service center locations.



### Related Documents - 725Wi

  BrightLink® 685Wi/695Wi User's Guide	<a href="#">Epson BrightLink 685Wi/695Wi User's Guide</a> Comprehensive user guide for Epson BrightLink 685Wi and 695Wi interactive projectors, covering setup, features, network connectivity, interactive functions, maintenance, and troubleshooting.
 Installation Guide 	<a href="#">Epson ELPMB75 Projector Wall Mount Installation Guide</a> This guide provides detailed instructions and safety precautions for installing the Epson ELPMB75 projector wall mount with compatible ultra-short-throw projectors like the EB-810E, EB-815E, EH-QS100B, and EH-QS100W.
 ELPSC35 ELPSC36 Installation Guide	<a href="#">Epson ELPSC35/ELPSC36 Installation Guide</a> This installation guide provides detailed instructions for setting up and installing the Epson ELPSC35 and ELPSC36 Ultra Short Throw Screens, including safety precautions, package contents, and specifications.
 EB-755F EB-750F EB-735F Multimedia Projector Quick Start Guide	<a href="#">Epson EB-755F/750F/735F Series Multimedia Projector Quick Start Guide</a> This guide provides essential information for setting up and operating your Epson EB-755F, EB-750F, EB-735F series multimedia projector, covering connections, initial setup, and basic functions.



[Epson ELPMB75 User's Guide: Installation and Operation](#)

Comprehensive user's guide for the Epson ELPMB75 ultra-short-throw projector wall mount, detailing installation, adjustments, and safety precautions for various Epson projector models.

BrightLink EB-1485Fi, BrightLink EB-1480Fi  
PowerLite EB-800F, PowerLite EB-805F

[Epson Projector Firmware Update Notes: BrightLink EB-1485Fi, EB-1480Fi, PowerLite EB-800F, EB-805F](#)

Detailed firmware release notes for Epson BrightLink EB-1485Fi, EB-1480Fi, and PowerLite EB-800F, EB-805F projectors, covering updates from version 3.62 down to 3.50, including feature improvements, security updates, and bug fixes.