

NKF N2QAYB000100

NKF N2QAYB000100 Replacement Remote Control for Panasonic TV User Manual

Model: N2QAYB000100

INTRODUCTION

This manual provides comprehensive instructions for the NKF N2QAYB000100 replacement remote control, designed for use with various Panasonic TV models. This remote control is a direct replacement and does not require any programming or pairing. Simply insert batteries, and it is ready for operation.

Compatible Panasonic TV Models:

- TC-26LX70, TC-26LX85, TC-32LX70, TC-32LX70N, TC-32LX700, TC-32LX85, TC-37LZ85
- TH-42PC77U, TH-42PE77U, TH-42PX77U, TH-42PZ700U, TH42PZ700UA, TH-42PZ77U, TH-42PX80U, TH-42PX80UA, TH-42PZ80U
- TH-46PZ80U, TH-46PZ80UA, TH-50PC77U, TH-50PE700U, TH-50PE77U, TH-50PX77U, TH-50PZ700
- Substitutes for N2QAYB000102, N2QAYB000103, N2QAYB000221, N2QAYB000321, N2QAYB000323

SETUP

Battery Installation

The NKF N2QAYB000100 remote control requires two AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Back of the remote control with the battery cover removed, revealing the two AAA battery slots.

Important: Ensure correct battery polarity. Incorrect installation may prevent the remote from functioning or cause battery leakage.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Panasonic TVs once batteries are installed. No programming or pairing is required.



Image: Front view of the NKF N2QAYB000100 remote control, displaying the layout of all buttons.

Key Functions

Button	Function
POWER	Turns the TV on or off.

Button	Function
TV / VCR / DBS/CBL / DVD	Selects the input source (TV, VCR, Cable/Satellite Box, DVD Player).
MENU	Accesses the TV's main menu.
OK	Confirms selections within menus.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
EXIT	Exits the current menu or screen.
RETURN	Returns to the previous screen or channel.
VOL +/-	Adjusts the volume level.
CH ^ / v	Changes the TV channel up or down.
MUTE	Mutes or unmutes the TV audio.
Number Buttons (0-9)	Direct channel selection.
TV/VCR	Switches between TV and VCR modes (if applicable).
REC, PLAY, PAUSE, STOP, SKIP, SEARCH	Controls for connected recording or playback devices (e.g., VCR, DVD).
R-TUNE	Function for fine-tuning channels (may vary by TV model).
ASPECT	Adjusts the screen aspect ratio.
FAVORITE	Accesses favorite channels.
RECALL	Recalls the last viewed channel.
Ezsync, SAP	Specific functions for Panasonic's Ezsync (HDMI-CEC) and Secondary Audio Program.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions, typically displayed on-screen by the TV.

MAINTENANCE

Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation.

Warning: Remove batteries if the remote control will not be used for an extended period to prevent

potential leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote not responding.	Obstruction between remote and TV.	Ensure a clear line of sight between the remote's infrared emitter and the TV's IR receiver.
Remote not responding.	Remote is too far from the TV.	Operate the remote within the effective range (up to 10 meters).
Specific buttons not working.	Button stuck or damaged.	Gently press the button multiple times. If still unresponsive, the button may be faulty.
TV not responding to input source buttons (e.g., VCR, DVD).	Device not connected or powered on.	Ensure the external device (VCR, DVD player) is properly connected to the TV and powered on.

If troubleshooting steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

Model: N2QAYB000100

Brand: NKF

Connectivity Technology: Infrared

Compatible Devices: Panasonic Televisions

Power Source: 2 x AAA Batteries (not included)

Maximum Range: 10 Meters (approx. 33 feet)

Number of Buttons: 51

Color: Black

Dimensions (L x W x H): 6.5" x 2" x 0.7" (16.5 cm x 5.1 cm x 1.8 cm)

Weight: 2.6 Ounces (approx. 73.7 grams)

SUPPORT AND WARRANTY

Customer Support

For any questions or assistance regarding your NKF N2QAYB000100 remote control, please contact the seller directly through the platform where the purchase was made. Providing your order details will help expedite the support process.

Warranty Information

Specific warranty details may vary by retailer. Please refer to your purchase documentation or contact the seller for information regarding warranty coverage and return policies. The product is typically covered by a standard return policy as per the retailer's terms.

