

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool TDLR 6232S FR N Top-Load Washing Machine User Manual

Whirlpool TDLR6232SFRN

Whirlpool TDLR 6232S FR N Top-Load Washing Machine User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool TDLR 6232S FR N top-load washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

1. SETUP AND INSTALLATION

Unpacking and Initial Inspection

Carefully remove all packaging materials. Inspect the washing machine for any transport damage. If damage is found, do not install or operate the appliance and contact your retailer.

Important: Before first use, ensure that the metallic bar securing the drum for transport is removed from the rear of the machine. Failure to do so will result in excessive vibrations and noise during operation.



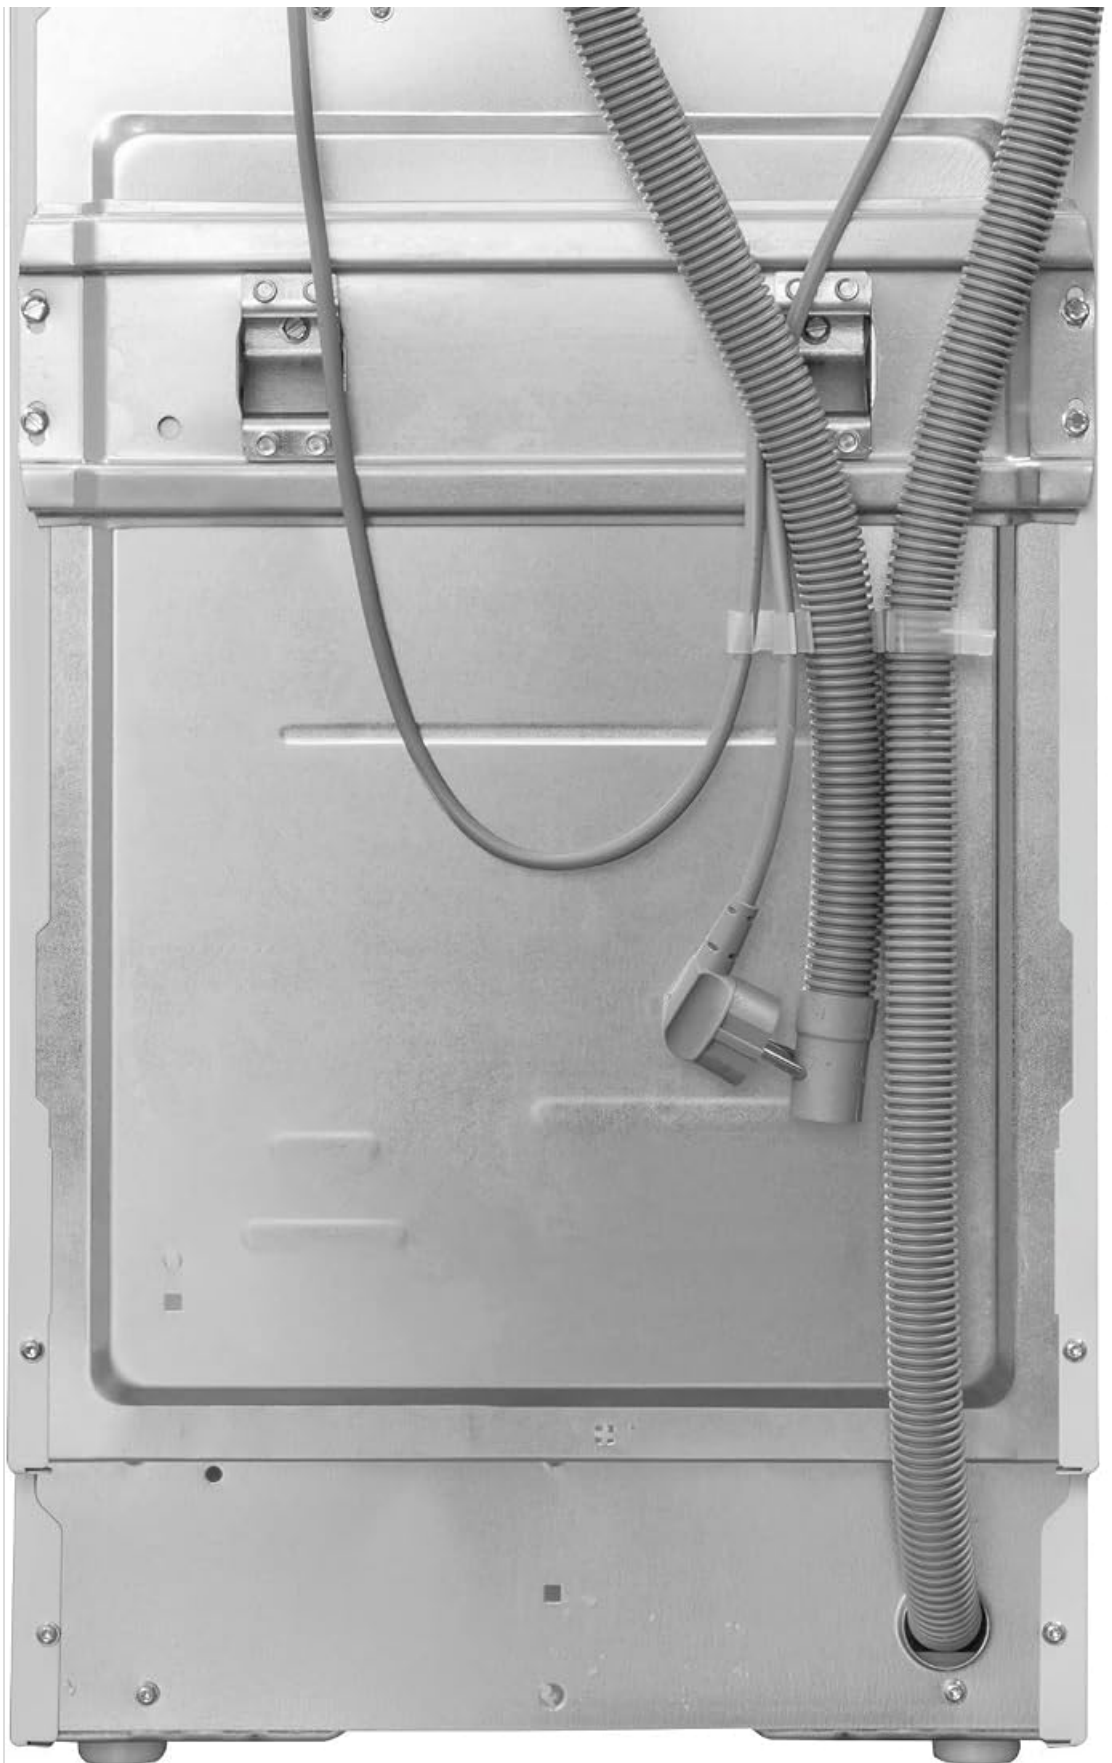


Image: Rear view of the washing machine, showing the water inlet and drain hoses, and the location where the transport bar should be removed before use.

What's in the Box

- Washing Machine Unit
- Water Hose (Tuyau de remplissage)
- Power Cord (Cordon électrique)

- Possible pedestal or stacking kit (if applicable, check packaging)

Positioning and Leveling

Place the washing machine on a flat, stable surface. Adjust the two front adjustable feet to ensure the appliance is perfectly level. The machine also features a rear wheel for easier positioning.



Image: Side view of the washing machine, illustrating its compact design and the location of the adjustable feet.

Water and Electrical Connections

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. Plug the power

cord into a grounded electrical outlet (220-240V - 50 Hz).

2. OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a central program selector knob, various option buttons, and a digital display for cycle progress and remaining time.



WHIRLPOOL

TDLR 6232S FR/N



64 kWh / 100



6,0 kg



3:15



43 L



ABCDEFG



76dB
ABCD

2019/2014

Image: Close-up of the washing machine's control panel, showing the program selector, digital display, and various option buttons.

Loading the Laundry

Open the top lid. The drum features soft opening for direct access. Load laundry into the drum, ensuring not to overload. The maximum load capacity is 6 kg.



Image: Top view of the washing machine with the lid closed, indicating its top-load design.

Selecting a Program

Turn the program selector knob to choose one of the 12 available programs:

- Cotton (95°C, 60°C, 40°C)
- Rapid 30' (30°C)
- Synthetics (40°C)
- Hygiene (60°C)
- Delicates (30°C)
- Magic (40°C)
- Eco 40-60
- 20°C
- Colors (40°C)
- Wool (20°C)
- Spin
- Rinse & Spin

Available Options

Enhance your wash cycle with these options:

- **Start/Pause:** To begin or temporarily stop a cycle.
- **Delayed Start (Digital 24h):** Set a specific time for the cycle to begin. The remaining time indicator will show the delay.
- **Rapid:** Shortens the program duration.
- **Prewash:** For heavily soiled items.
- **Rinse Plus:** Adds an extra rinse cycle.
- **Energy Saver:** Optimizes energy consumption.
- **Spin:** Adjusts or activates the spin cycle.
- **FreshCare:** Keeps laundry fresh by gently tumbling it after the cycle ends.
- **Favorites:** Save your preferred program settings.
- **Color 15°:** Ideal for delicate colored garments, providing effective cleaning at 15°C, similar to a 40°C wash.
- **Drain Cancel:** Cancels the drain cycle.
- **Child Safety Lock:** Prevents accidental changes to settings.

Starting a Cycle

After selecting the program and desired options, press the Start/Pause button. The digital display will show the cycle's progress and estimated remaining time.

3. MAINTENANCE AND CARE

Cleaning the Filter

The washing machine is equipped with a filter that requires regular cleaning. A dedicated indicator light will illuminate when filter cleaning is recommended. Access to the drain pump is located on the front of the appliance.

Procedure:

1. Ensure the machine is unplugged.
2. Open the front access panel for the drain pump.
3. Place a shallow container to collect any residual water.
4. Unscrew the filter cap slowly to allow water to drain.
5. Remove the filter and clean it under running water, removing any lint or debris.
6. Reinsert the clean filter and securely screw the cap back on. Close the access panel.

Drum Cleaning

Periodically run an empty cycle with a washing machine cleaner or a high-temperature program to clean the drum and internal components.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4. TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, contact customer support.

Common Issues and Solutions

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; delayed start active.	Check power connection; ensure door is fully closed; cancel delayed start if not desired.
Excessive vibration/noise	Transport bar not removed; machine not level; uneven load.	Remove transport bar (see Setup); adjust feet to level machine; redistribute laundry inside drum.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Check drain hose for obstructions; clean drain pump filter (see Maintenance).
Water inlet indicator light on	Water tap closed; water inlet hose kinked or blocked.	Open water tap; check water inlet hose for kinks or blockages.
Filter cleaning indicator light on	Drain pump filter is clogged.	Clean the drain pump filter (see Maintenance).
Burning smell/smoke	Electrical fault or motor issue.	Immediately unplug the machine and contact qualified service personnel. Do not attempt to operate.

5. TECHNICAL SPECIFICATIONS

Detailed specifications for the Whirlpool TDLR 6232S FR N washing machine.

Feature	Specification
Model Name	TDLR6232SFRN
Brand	Whirlpool
Loading Capacity	6 kg
Drum Volume	42 Liters (Stainless Steel)
Maximum Spin Speed	1200 rpm
Number of Programs	12
Special Features	Fresh Care, 6th Sense Technology
Access Type	Top-Load
Finish Type	Stainless Steel (Drum)
Color	White
Material	Stainless Steel, Polypropylene
Controls Type	Button, Rotary Knob
Operating Mode	Fully Automatic
Noise Level	76 Decibels
Installation Type	Independent
Display	LED
Power Consumption (Energy Label)	64 kWh / 100 cycles (Energy Class D)
Water Consumption (Energy Label)	43 Liters / cycle
Cycle Duration (Energy Label)	3:15 (h:min)
Net Dimensions (HxWxD)	90 x 40 x 60 cm
Packaged Dimensions (HxWxD)	94 x 45 x 70 cm
Net Weight	57 kg
Heating Power	2100 Watts
Electrical Supply	220-240 V - 50 Hz



Image: Energy label displaying efficiency class, energy consumption, water consumption, and noise level for the washing machine.

6. WARRANTY AND SUPPORT

Your Whirlpool TDLR 6232S FR N washing machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool customer support. Have your model number (TDLR6232SFRN) and serial number ready when contacting support.

Manufacturer: WHIRLPOOL

Model Number: TDLR6232SFRN