

[Manuals.plus](#) /

› [ZEITHALTER](#) /

› ZEITHALTER Digital Alarm Clock User Manual

## ZEITHALTER SNC3002

# ZEITHALTER Digital Alarm Clock User Manual

Model: SNC3002 | Brand: ZEITHALTER

## 1. INTRODUCTION

Thank you for choosing the ZEITHALTER Digital Alarm Clock. This clock features a large, easy-to-read LED display, a convenient swivel base, adjustable alarm sound levels, and customizable display brightness. Designed for ease of use, it is ideal for bedrooms, living rooms, and offices. This manual provides detailed instructions to help you set up and operate your new alarm clock.



Figure 1: ZEITHALTER Digital Alarm Clock

## 2. PACKAGE CONTENTS

- ZEITHALTER Digital Alarm Clock (Model SNC3002)
- AC Power Adapter (integrated cord)
- User Manual

## 3. IMPORTANT SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, direct sunlight, dust, or humidity.
- Ensure the power cord is securely plugged into a standard US 120V outlet. Do not use with 240V.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble or modify the clock. Refer all servicing to qualified personnel.
- Use only the specified AAA batteries for backup. Do not mix old and new batteries or different types of batteries.

## 4. SETUP

#### 4.1 Power Connection

The ZEITHALTER Digital Alarm Clock is primarily powered by AC electricity. Plug the integrated power cord into a standard 120V AC wall outlet. The display will illuminate, and the clock will be ready for initial setup.

#### 4.2 Battery Backup Installation

For power outage protection, install two (2) AAA batteries (not included) into the battery compartment located on the bottom of the clock. The battery backup retains time and alarm settings during a power interruption and allows the alarm to sound. The display will not be illuminated during battery backup mode.



Figure 2: Battery backup ensures settings are retained during power outages.

### 5. OPERATING INSTRUCTIONS

The clock features clearly labeled buttons on the back for easy operation. Refer to Figure 3 for button identification.

## Product Dimension & Operation Buttons



Figure 3: Product Dimensions & Operation Buttons

### 5.1 Setting the Time

1. Press and hold the **TIME SET** button until the hour digits begin to flash.
2. Press the **HOUR** button to adjust the hour. Pay attention to the PM indicator.
3. Press the **MINUTE** button to adjust the minute.
4. Press **TIME SET** again to confirm and exit time setting mode.

### 5.2 Setting the Alarm

1. Press and hold the **ALM SET** button until the alarm hour digits begin to flash.
2. Press the **HOUR** button to adjust the alarm hour.
3. Press the **MINUTE** button to adjust the alarm minute.
4. Press **ALM SET** again to confirm and exit alarm setting mode.
5. To activate or deactivate the alarm, press the **ALARM ON/OFF** button. An alarm indicator (usually a small dot or icon) will appear on the display when the alarm is active.

### 5.3 Snooze Function

When the alarm sounds, press the large **SNOOZE** button located on the top of the clock. This will temporarily

silence the alarm for 9 minutes. The alarm will sound again after the snooze period. To turn off the alarm completely, press the **ALARM ON/OFF** button on the back.



### SNOOZE FUNCTION

Allow extra sleep time, the default time is 9 minutes



Big Snooze Button



Press it without opening your eyes

Figure 4: Large Snooze Button for easy access.

### 5.4 Adjusting Display Brightness

The clock offers two levels of display brightness (High and Low). To adjust, slide the **DIMMER** switch on the back of the clock to your preferred setting. The low setting is ideal for nighttime use to avoid disturbing sleep.

## Two Display Brightness Levels

If the power is interrupted,  
There will be no display under battery power and the alarm will sound at the correct time



100% Light



50% Light



0% Light

Figure 5: Two Display Brightness Levels.

### 5.5 Adjusting Alarm Volume

The alarm sound has two volume levels: High and Low. To adjust, slide the **ALARM HI/LO** switch on the back of the clock to your desired volume. This allows for a comfortable wake-up experience, whether you are a light or heavy sleeper.



Figure 6: Adjustable Alarm Volume.

### 5.6 90° Swivel Base

The clock is equipped with a 90° swivel base, allowing you to easily adjust the viewing angle for optimal readability from various positions in your room. Simply rotate the clock on its base to achieve the desired angle.



## 90° Swivel Base for Easy Viewing From Different Angles

Figure 7: 90° Swivel Base for easy viewing.

### 5.7 Features in Action (Video)

Your browser does not support the video tag.

Video 1: This video demonstrates various features of the ZEITHALTER Digital Alarm Clock, including AC power supply, setting the time, snooze mode, 2-level brightness dimmer, 90° swivel base, and battery installation. It provides a visual guide to the clock's functionality.

## 6. MAINTENANCE

- **Cleaning:** To clean the clock, wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace the AAA backup batteries annually or if you notice settings are not retained during power outages.

- **Storage:** If storing the clock for an extended period, remove the backup batteries to prevent leakage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank.	No AC power; Dimmer set to 0% light.	Ensure the power cord is securely plugged in. Check the dimmer switch on the back and set it to HI or LO.
Alarm does not sound.	Alarm is not activated; Alarm time is incorrect; Volume is too low.	Press the <b>ALARM ON/OFF</b> button to activate the alarm (check for indicator). Verify the alarm time is set correctly. Adjust the <b>ALARM HI/LO</b> switch.
Time/settings lost after power outage.	Backup batteries are dead or not installed.	Install two new AAA batteries in the battery compartment.
Clock display is too dim/bright.	Dimmer setting is not preferred.	Adjust the <b>DIMMER</b> switch on the back of the clock.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	SNC3002
Display Type	1.8" Large Red LED Digital Display
Power Source	AC 120V Corded Electric
Battery Backup	2 x AAA Batteries (not included)
Snooze Duration	9 Minutes
Brightness Levels	2 (High, Low)
Alarm Volume Levels	2 (High, Low)
Dimensions (W x H)	6.14" x 4.09" (156mm x 104mm)
Weight	10.7 ounces
Material	Plastic, Acrylonitrile Butadiene Styrene
Special Features	90° Swivel Base, Easy-to-Use Buttons

## 9. WARRANTY AND SUPPORT

ZEITHALTER provides a **24-month warranty** for this product from the date of purchase, covering manufacturing defects. We also offer **lifetime support** to ensure your satisfaction.

For technical assistance, troubleshooting, or warranty claims, please contact our customer support team:

- **Email:** [support@zeithalter.com](mailto:support@zeithalter.com)
- **Website:** [www.zeithalter.com](http://www.zeithalter.com)

Please have your model number (SNC3002) and purchase information ready when contacting support.