

## tectake 800884

# tectake Wicker Lounge 2-Seater Sofa and Stool (Model 800884) Instruction Manual

## 1. SAFETY INSTRUCTIONS

Please read these instructions carefully before assembly and use. Keep this manual for future reference.

- **Weight Limits:** Do not exceed the specified weight limits for the sofa (250 kg) and stool (120 kg). Overloading can cause damage or injury.
- **Assembly:** Ensure all parts are correctly assembled and tightened according to the instructions. Do not use power tools for tightening screws, as this may strip threads or damage components.
- **Placement:** Place the furniture on a flat, stable surface to prevent tipping.
- **Weather Protection:** While the furniture is weather-resistant, prolonged exposure to extreme weather conditions (heavy rain, strong winds, direct sunlight) can affect its lifespan. Consider using a protective cover when not in use.
- **Children:** Keep children away from the assembly area. Small parts can be a choking hazard.

## 2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Component	Description	Quantity
Sofa Frame Parts	Wicker-covered steel frame sections (e.g., sides, backrest, base)	Various
Stool Frame Parts	Wicker-covered steel frame sections for the stool, including foldable support	Various
Cushions	Seat and back cushions (approx. 8 cm thick)	2 seat, 2 back, 1 stool

Component	Description	Quantity
Assembly Hardware	Screws (M, L), washers, Allen key	Various
Assembly Manual	Printed instruction guide	1


### 3. ASSEMBLY INSTRUCTIONS

---

Follow these steps for assembling your tectake Wicker Lounge set. It is recommended to have two people for assembly.

- 1. Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each part using the labels (e.g., G, B1, B2, D for sofa, A, H1, H2, E for stool, M, L for screws).
- 2. Assemble Sofa Base:** Connect the side panels (B1, B2) to the back panel (G) and front panel (D) of the sofa base. Use the provided screws (M) and Allen key to secure them. Do not fully tighten all screws until all parts are loosely connected.
- 3. Assemble Stool Base:** Connect the side panels (H1, H2) to the front panel (A) and back panel (E) of the stool base. Secure with screws (M). Attach the foldable support mechanism using screws (L).
- 4. Attach Backrest and Armrests:** Secure the backrest and armrests to the assembled sofa base. Ensure all connections are firm.
- 5. Final Tightening:** Once all components are in place, systematically tighten all screws. Do not overtighten.
- 6. Place Cushions:** Position the seat and back cushions on the sofa and the cushion on the stool.

*Video: tectake Wicker Lounge Assembly Guide. This video demonstrates the step-by-step assembly process for the sofa and stool components, including connecting frame parts and securing them with screws.*

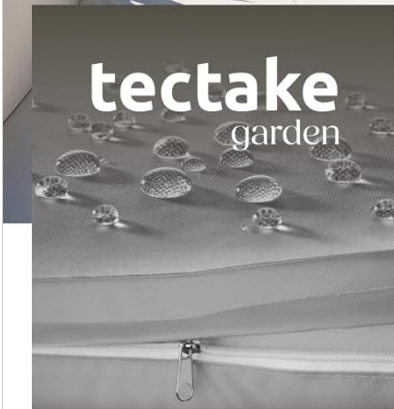

**XXL** 8 cm dikke XXL-kussens voor maximaal comfort & pure ontspanning



**Praktische hocker** met opvouwbaar steun voor de voeten



**Weinig ruimte nodig** perfect ook voor kleine terrassen of balkons



**Fijn wicker** hoogwaardige afwerking & extreem duurzaam



**Stevig stalen frame** met schroeven van robuust roestvrij staal



**Onderhoudsvriendelijk** de hoezen zijn waterafstotend & wasbaar

*Image: The tectake Wicker Lounge sofa with its footrest extended, showcasing the assembled product.*


## 4. OPERATING INSTRUCTIONS

The tectake Wicker Lounge set offers flexible configurations to suit your needs.

- **Sofa Use:** Use the two-seater sofa for comfortable seating.
- **Stool Functionality:** The large stool features a foldable support. This allows it to be used as a footrest, an additional seating option, or extended to create a lounge or sleeping function when combined with the sofa.
- **Adjusting the Stool:** To extend the stool, gently pull out the integrated support mechanism until it locks into place. To retract, release the lock and push the support back in.

ONVERGETELIJKE

# Relaxmomenten

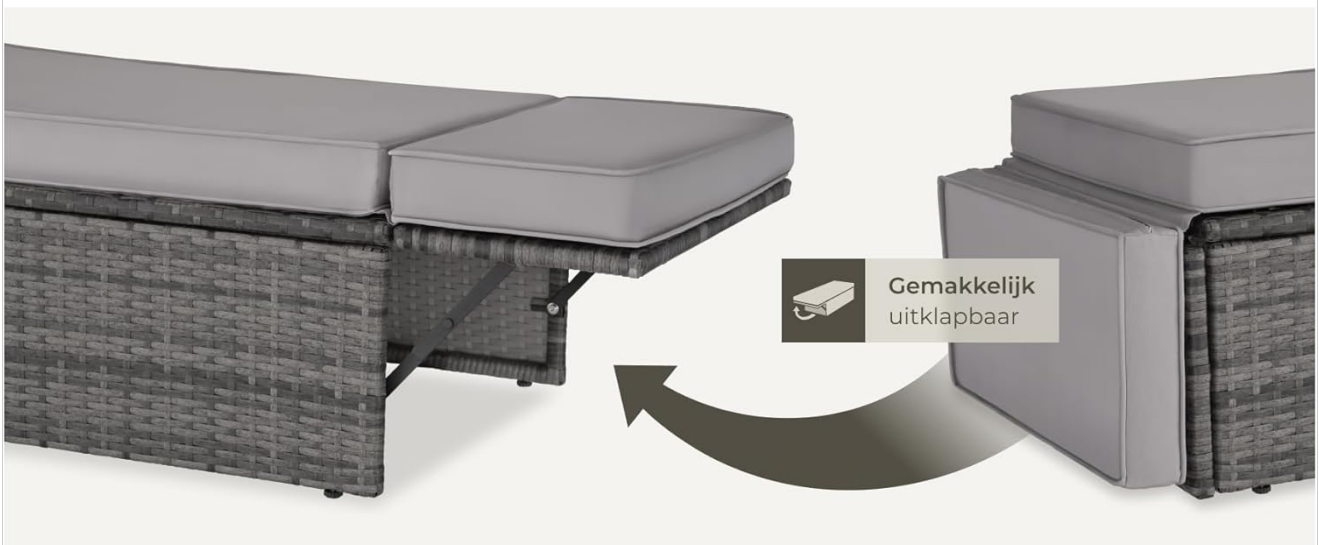

**tectake**  
garden

Onze elegante wicker loungebank is een absolute blikvanger en ideaal voor kleinere terrassen. De hocker met uitklapbare voetensteun kan individueel worden neergezet, zodat het geheel in elke omgeving past - de ideale plek voor een heerlijk drankje met vrienden.

*Image: A close-up view of the stool's foldable support mechanism, illustrating how it extends to provide additional length.*

## 5. MAINTENANCE AND CARE

Proper care will help maintain the appearance and extend the life of your furniture.

- **Cleaning the Frame:** The wicker-covered frame is dirt and water-repellent. Clean it with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The cushion covers are removable and washable. Follow the care instructions on the cushion labels. Ensure cushions are completely dry before storing to prevent mold or mildew.
- **Weather Protection:** Although weather-resistant, it is advisable to store cushions indoors during heavy rain or winter months. Using a furniture cover will provide additional protection against the elements and prolong the furniture's life.
- **Rust Prevention:** The steel frame is powder-coated for durability and rust resistance. Periodically check for any signs of rust or damage to the coating and address them promptly.



Image: Close-up of the water-repellent fabric, showing water droplets beading on the surface, indicating its protective qualities.



Image: Detail of rust-free screws, highlighting the quality of the hardware used in the furniture construction.

## 6. TROUBLESHOOTING

If you encounter any issues with your tectake Wicker Lounge set, consider the following:

- **Wobbly Furniture:** Check that all screws are securely tightened. Ensure the furniture is placed on an even surface.
- **Difficulty with Stool Extension:** Ensure the mechanism is free of obstructions. Apply a small amount of silicone spray to moving parts if they are stiff.
- **Missing Parts:** If you discover missing parts during assembly, refer to the package contents list and contact customer support for assistance.
- **Damage:** If any part is damaged, do not attempt to repair it yourself if it compromises the structural integrity. Contact customer support for replacement parts or advice.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	800884
Color	Grey
Sofa Dimensions (WxDxH)	Approx. 119 x 64.5 x 71.5 cm
Stool Dimensions (LxWxH)	Approx. 105 x 56 x 29 cm
Cushion Thickness	Approx. 8 cm
Seat Height (with cushions)	Approx. 37 cm

Feature	Detail
Sofa Load Capacity	250 kg
Stool Load Capacity	120 kg
Materials	Wicker (polyethylene), Powder-coated steel frame, Polyester cushions, Foam filling
Assembly Required	Yes
Product Weight	47 kg



*Image: The tectake Wicker Lounge 2-seater sofa and stool set positioned on a patio overlooking a body of water, demonstrating its aesthetic appeal in an outdoor environment.*

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the retailer. If you require assistance with assembly, missing parts, or have any questions regarding your tectake Wicker Lounge set, please contact tectake customer support directly or through your point of purchase.