

Candy CO12105TE/1-S

CANDY Front-Load Washing Machine

MODEL: CO12105TE/1-S

User Manual

1. Introduction

Thank you for choosing the CANDY CO12105TE/1-S Front-Load Washing Machine. This appliance is designed to provide efficient and convenient laundry care. It features a large 10 kg capacity, an energy efficiency class E rating, and a variety of programs, including 9 quick access cycles and a 59-minute full load program. The 5D digital display provides clear information on the current cycle, duration, and more. The improved drum and XXL porthole enhance loading and unloading comfort.



Figure 1.1: Front view of the Candy CO12105TE/1-S washing machine, showing the control panel, detergent drawer, and large porthole.

2. Safety Information

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet. Do not use extension cords or adapters.
- **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks.
- **Installation:** The appliance must be installed on a firm, level surface. Adjust the feet to ensure stability and minimize vibration.
- **Children and Pets:** Keep children and pets away from the appliance during operation. Do not allow them to play with the controls.

- **Maintenance:** Always unplug the appliance before performing any cleaning or maintenance.
- **Damage:** Do not operate the appliance if it is damaged. Contact authorized service personnel for repairs.

3. Setup and Installation

Proper installation is crucial for the optimal performance and longevity of your washing machine.

1. **Unpacking:** Carefully remove all packaging materials and transport bolts from the rear of the machine. Retain these for future transport if needed.
2. **Positioning:** Place the washing machine on a flat, stable floor. Ensure there is adequate space around the appliance for ventilation and access.
3. **Leveling:** Use a spirit level to check if the machine is level. Adjust the adjustable feet at the bottom of the machine until it is perfectly balanced. This prevents excessive vibration and noise during operation.
4. **Water Supply Connection:** Connect the supplied inlet hose to the cold water tap and to the water inlet valve on the back of the washing machine. Tighten connections securely by hand, then use a wrench for a final quarter turn.
5. **Drain Hose Connection:** Insert the drain hose into a standpipe or secure it over the edge of a sink, ensuring it is properly hooked to prevent it from falling out during draining. The drain hose should not be kinked or submerged in water.
6. **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance.



Figure 3.1: Example of the washing machine installed in a laundry area, demonstrating proper spacing.

4. Operating Instructions

This section guides you through the daily operation of your Candy washing machine.

4.1. Control Panel Overview



Figure 4.1: The control panel features a program selector dial, a 5D digital display, and various function buttons.

- **Detergent Drawer:** Located on the top left, for adding detergent and fabric softener.
- **Program Selector Dial:** Used to select the desired wash program.
- **5D Digital Display:** Shows program information, remaining time, error codes, and selected options.
- **Function Buttons:** For selecting additional options such as temperature, spin speed, delayed start, and extra rinse.

4.2. Loading Laundry

Open the porthole and load laundry into the drum. Do not overload the machine; the maximum capacity is 10 kg. For best results, ensure clothes can move freely within the drum.

4.3. Adding Detergent and Softener

Pull out the detergent drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to your detergent packaging for recommended dosages.

4.4. Program Selection

Turn the program selector dial to choose one of the available wash programs. The machine offers 9 quick access programs and a 59-minute full load program. The 5D digital display will show the default settings for the selected program.

Example Programs:

- **Cotton:** For durable cotton items.
- **Synthetics:** For synthetic and mixed fabrics.
- **Delicates:** For delicate items requiring gentle care.
- **Quick 59 Min:** A rapid cycle for a full load, ideal for lightly soiled items.
- **Eco 40-60:** Energy-efficient program for normally soiled cotton, linen, or mixed fiber items washable at 40°C or 60°C.
- **Rinse:** For rinsing and spinning items.
- **Spin:** For spinning only.

4.5. Adjusting Options

After selecting a program, you can customize settings using the function buttons:

- **Temperature:** Press the temperature button to adjust the wash temperature.
- **Spin Speed:** Press the spin speed button to change the spin revolutions per minute (RPM).
- **Delayed Start:** Use this function to postpone the start of the wash cycle by a set number of hours.
- **Extra Rinse:** Adds an additional rinse cycle to ensure thorough removal of detergent residue.

4.6. Starting and Stopping a Program

Press the Start/Pause button to begin the selected program. The display will show the remaining time. To pause a program, press the Start/Pause button again. To cancel a program, turn the program selector dial to the "Off" position, then select a new program.

5. Maintenance and Cleaning

Regular maintenance ensures the efficiency and longevity of your washing machine.

5.1. Cleaning the Detergent Drawer

Periodically remove and clean the detergent drawer to prevent detergent buildup. Rinse it under running water and use a brush if necessary.

5.2. Cleaning the Drum

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) monthly to clean the drum and remove any residue.

5.3. Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. This is typically located at the bottom front of the machine.

1. Open the filter cover at the bottom front.
2. Place a shallow container underneath to catch any residual water.
3. Slowly unscrew the filter counter-clockwise.

4. Remove any lint, coins, or foreign objects.
5. Rinse the filter under running water.
6. Screw the filter back in clockwise until tight, ensuring a secure seal.
7. Close the filter cover.



Figure 5.1: The drain filter access panel and the removable filter, essential for preventing blockages.

5.4. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. Troubleshooting

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is latched; select a program; press Start/Pause.
No water filling	Water tap closed; inlet hose kinked; water pressure too low.	Open water tap; straighten hose; check household water pressure.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten or clear drain hose; clean drain filter (refer to Section 5.3).
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load.	Level the machine; remove transport bolts; redistribute laundry evenly.

Problem	Possible Cause	Solution
Detergent residue on clothes	Too much detergent; detergent drawer clogged; insufficient rinsing.	Reduce detergent amount; clean detergent drawer; select Extra Rinse option.

7. Specifications

Detailed technical specifications for the CANDY CO12105TE/1-S Washing Machine.

Feature	Specification
Model Number	CO12105TE/1-S
Type	Front-Load Washing Machine
Capacity	10 kg
Energy Efficiency Class	E
Dimensions (H x W x D)	85 cm x 60 cm x 58 cm (approx.)
Weight	66 kg
Maximum Spin Speed	1151 RPM
Noise Emission (Spin)	79 dB(A)
Water Consumption (per cycle, Eco 40-60)	51 Liters
Energy Consumption (per 100 cycles, Eco 40-60)	89.9 kWh
Control Type	Push Button
Special Features	Delayed Start, 9 Quick Programs, 5D Digital Display



ENERG 



Candy

CO 12105TE/1-S



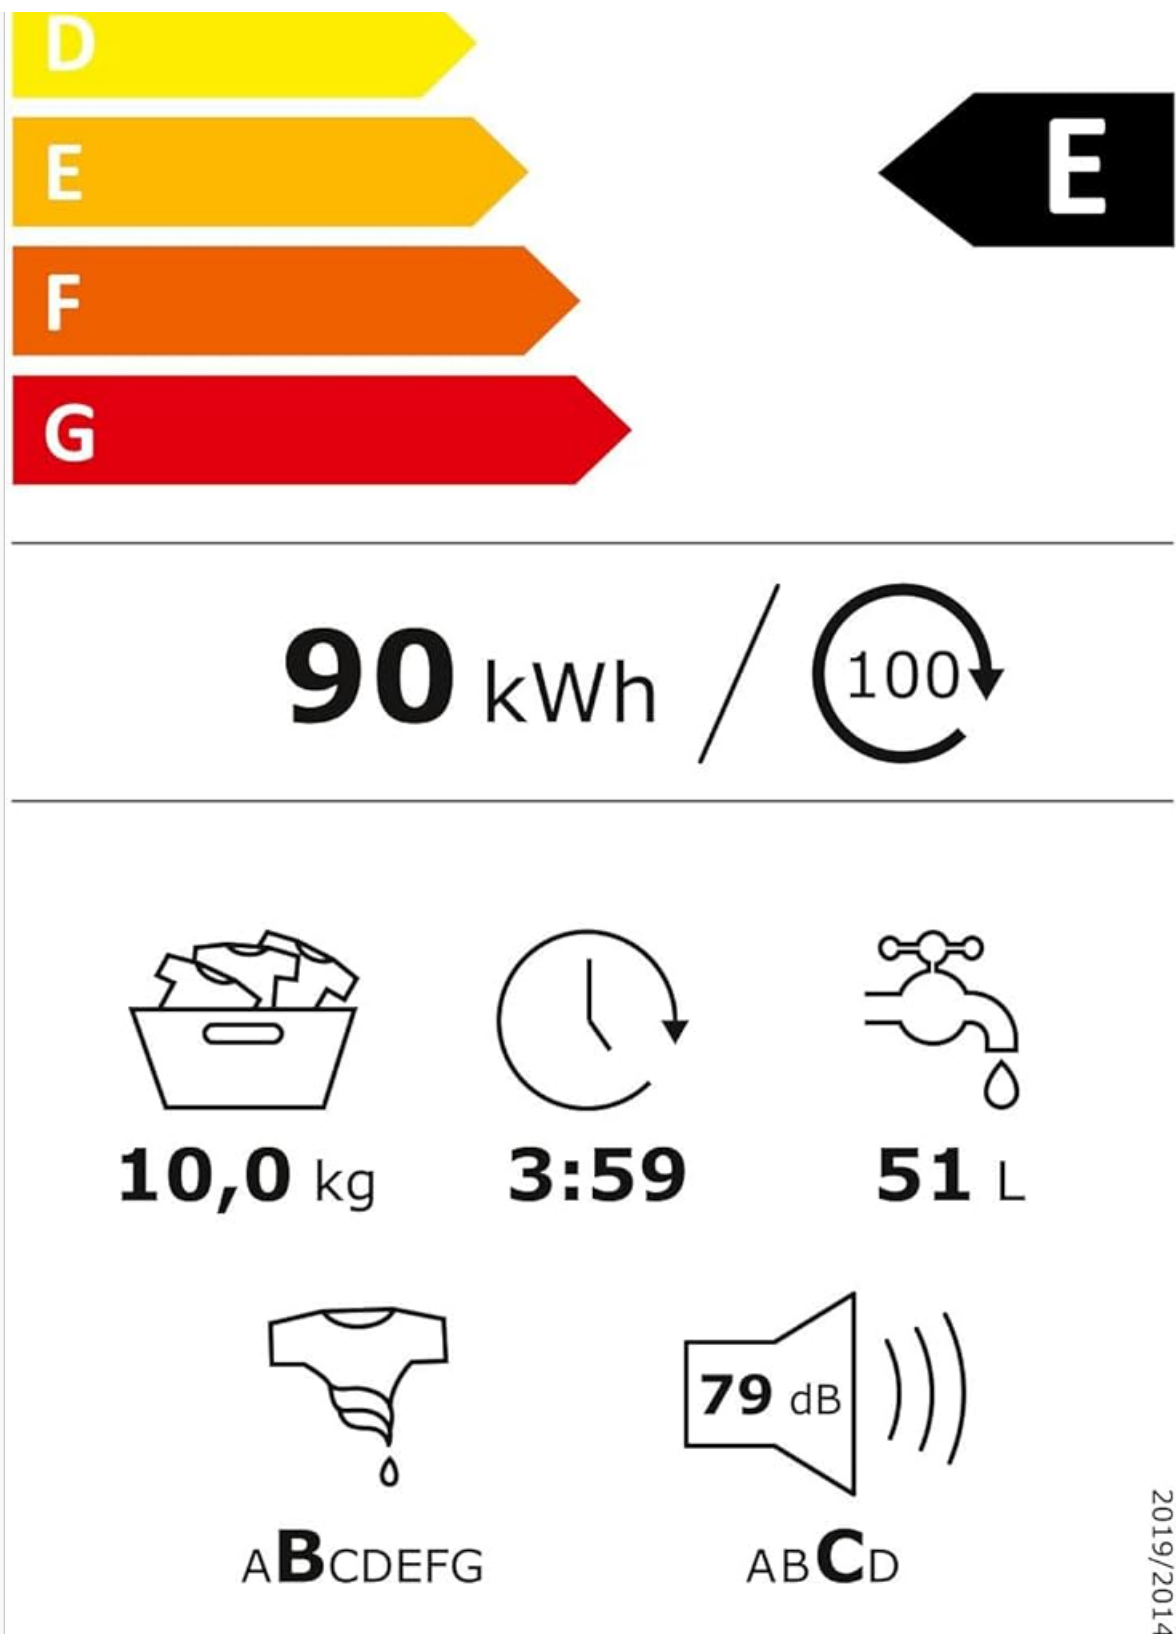


Figure 7.1: The official EU energy label for the CO12105TE/1-S model, detailing its energy efficiency and consumption metrics. For more details, scan the QR code or visit eprel.ec.europa.eu/qr/333780.

8. Warranty and Support

Your CANDY CO12105TE/1-S Washing Machine comes with a manufacturer's warranty.

- **Warranty Period:** This product is covered by a minimum 24-month manufacturer's guarantee from the date of purchase. Please retain your proof of purchase for warranty claims.
- **Warranty Coverage:** The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized repairs, or normal wear and tear.

- **Customer Support:** For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Candy customer support.
- **Contact Information:**
 - **Manufacturer:** CANDY HOOVER GROUP SRL
 - **Website:** corporate.haier-europe.com
 - **Email:** eprel_info@haier-europe.com
 - **Phone:** +3903920861
- **Online Resources:** For additional product information and compliance details, you can refer to the EPREL database using the registration number 333780 or the QR code on the energy label: <https://eprel.ec.europa.eu/qr/333780>.

Documents - Candy – CO12105TE/1-S



[pdf]

31011113 CO12105TE 1 S FP Oracle Reports Télécharger la fiche produit Candy CO12105TE1S 10 kg 79 dB Connecté Départ différé Lave linge frontal Villatech 1000111315 fp villatech fr media ||| CO 12105TE/1-S LAVE-LINGE HUBLOT Photo non contractuelle 9 CYCLES COURTS EN ACCS DIRECT 9 cycles courts clairement identifiés par un code couleur, sur tous types de textiles PROGRAMME 59MN CHARGE PLEINE Un programme exceptionnel prt laver en 59min seulement pleine charge CONNECTIVIT WIFI BLUET...

lang:fr score:17 filesize: 196.72 K page_count: 2 document date: 2021-05-26



[pdf]

31011113 CO12105TE 1 S FP Oracle Reports CO 12105TE Ubaldi CONNECTIVITÉ WIFI BLUETOOTH Un véritable assistant personnel ! Grâce à notre application SimplyFi connectez votre lave linge 1000111315 CO12105TE1S pulsat fr media ||| CO 12105TE/1-S LAVE-LINGE HUBLOT Photo non contractuelle 9 CYCLES COURTS EN ACCS DIRECT 9 cycles courts clairement identifiés par un code couleur, sur tous types de textiles PROGRAMME 59MN CHARGE PLEINE Un programme exceptionnel prt laver en 59min seulement pleine charge CONNECTIVIT WIFI BLUET...

lang:fr score:13 filesize: 95.58 K page_count: 2 document date: 2020-10-27

-10€ dès 149€ d'achat	
A. PRÉSENTATION	
<p>La société Cdiscount, société anonyme au capital de 6 642 912,78 euros, immatriculée au RCS de Bordeaux sous le numéro 828 028 122, ayant son siège social 120-126 Quai de Bacalan 33003 Bordeaux, propose sur son site internet l'offre et rendra accessible sur www.cdiscount.com ainsi que via les applications Android et iOS mentionnées (ci-après ensemble désignées le "Site" l'offre intitulée « -10€ dès 149€ d'achat » (ci-après l'« Offre »).</p>	
B. DESCRIPTION DE L'OFFRE	
<p>1. Cdiscount vous offre sous offre une remise immédiate de dix euros (10,00€) dès cent-quarante-neuf euros (149,99€) d'achat hors taxes de livraison avec le code B0120.</p> <p>2. Pour profiter du bon de réduction immédiat, il vous suffit de créer un panier composé de produit(s) éligible(s) – c'est-à-dire de produit(s) commercialisé(s) sur le Site (Marketplace incluse), à l'exception des produits listés à l'article VII du règlement, des biens, du développement jouets, de l'abonnement presse, de l'abonnement au service Cdiscount, des offres Cdiscount Voyages et offres partenaires, des articles en précommande, des articles dématérialisés des cartes cadeau et des dons ainsi que les produits des marques NETHERLANDS, SONY.</p> <p>3. Pour profiter du bon de réduction immédiat, il vous suffit de créer un panier composé de produit(s) éligible(s) et de saisir le code B0120 en page de paiement.</p>	
C. PERIODE DE VALIDITE DE L'OFFRE	
<p>1. L'Offre est valable dès le 16/01/2023 12h00 et au 16/01/2023 23h59.</p> <p>2. Cdiscount se réserve le droit de reporter, de modifier, d'annuler, d'écourter, de prolonger cette Offre.</p> <p>En tout état de cause, la responsabilité ne saurait être engagée à cet égard.</p>	
D. CONDITIONS D'ELIGIBILITE DU PARTICIPANT A L'OFFRE	
<p>1. L'Offre est réservée à toute personne physique majeure, quelle que soit sa nationalité, agissant à titre personnel en qualité de consommateur auprès de Cdiscount, résident et disposant d'une adresse postale en France métropolitaine (Corse comprise), en Belgique, en Allemagne, en Italie, en Espagne, en France, Pays-Bas, au Portugal, en Espagne ou au Luxembourg, ainsi que d'une adresse électronique valide.</p> <p>2. IL NE SERA ACCORDE QU'UNE (1) SEULE BON DE REDUCTION IMMEDIATE PAR COMMANDE.</p>	
E. CONDITIONS DE L'OFFRE	
<p>1. Tous les modes de paiement présentés sur le Site sont acceptés, excepté :</p> <ul style="list-style-type: none"> - Le paiement par le solution de Crédit à l'Usage en plusieurs fois l'proposé par Cdiscount en partenariat avec Plus Bank. - Le paiement en tout ou partie par bonifié d'achat. <p>2. Pour profiter de l'Offre, il suffit de créer un panier des montants minimums listés à l'article B ci-dessus, comprenant un ou plusieurs produit(s) éligible(s).</p>	

[pdf]

Jessica Michel conditions 83897202301161015433270 rnd 633CFDA5 cdiscount odr ImagesOK

CommercialOffer |||

-10 ds 149 d achat I. PRESENTATION La socit Cdiscount, socit anonyme au capital de 6 642 912,78 e ... p Purpl Adp LENOVO ideacentre 3 07IAB7 BOSCH - KGV39VLEAS - Rfrigr ULOS Armoire 170 cm Lave-linge **CO12105TE/1-S** BOSCH GTV15NWEA INDESIT IS5G2PCW/FR Banquette CC 120 MELISSA RGE GOOGLE Pixel 7 - 128G...

lang:fr **score:11** filesize: 420.45 K page_count: 20 document date: 2023-01-16