

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit Replacement Remote Control for Westinghouse Roku TV User Manual](#)

## ZdalaMit Replacement Remote Control

# ZdalaMit Replacement Remote Control for Westinghouse Roku TV

User Instruction Manual

## INTRODUCTION

This manual provides instructions for the ZdalaMit Replacement Remote Control, designed for use with various Westinghouse Roku TV models. This remote control is pre-programmed and requires no additional setup beyond battery installation.





Image: Front view of the ZdalaMit Replacement Remote Control. It features a black body with a blue directional pad, dedicated app buttons for Netflix, ESPN+, Hulu, and RK, and standard TV remote functions.

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.

#### Important Note:

- This remote control does not require programming or pairing. It is ready for use immediately after battery installation.
- This remote is specifically designed for Westinghouse Roku TVs and is not compatible with Roku players, Roku boxes, or Roku sticks.







Image: Side view of the ZdalaMit Replacement Remote Control, showing its ergonomic curve and side-mounted volume and mute buttons.

## OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready to operate your compatible Westinghouse Roku TV. Point the remote directly at your television.

### Key Functions:

- **Power Button (●):** Turns the TV on or off.
- **Directional Pad (Blue Circle with OK):** Navigate menus and select items.
- **Back (←):** Returns to the previous screen or menu.
- **Home (⏠):** Returns to the Roku TV home screen.
- **Volume Up/Down:** Adjusts the television volume (located on the side).
- **Mute:** Mutes or unmutes the television sound (located on the side).
- **Instant Replay (↺):** Replays the last few seconds of content.
- **Sleep Timer (⌚):** Accesses sleep timer settings.
- **Star Button (\*):** Accesses options or settings within certain apps or menus.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback.
- **Dedicated App Buttons (Netflix, ESPN+, Hulu, RK):** Provides quick access to these streaming applications.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the remote.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure fresh 1.5V AAA alkaline batteries are correctly installed.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Confirm that the remote is pointed directly at the TV.
- **Remote functions are intermittent:**
  - This often indicates low battery power. Replace both batteries.

- **Remote does not control a Roku player/box/stick:**

- This remote is designed exclusively for Westinghouse Roku TVs and is not compatible with standalone Roku streaming devices.

## SPECIFICATIONS

<b>Brand</b>	ZdalaMit
<b>Compatible Devices</b>	Westinghouse Roku TVs (e.g., WR70UX4200, WR75UX4210, WR50UX4210, WR43UT4210, WR32HX2019, WR32HB2200, WR50UT4210, WR42FX2002, WR43FX2019, WR32HX2210, WR50UX4019, WR43FX2210, WR43FT2210, WR65UT4009, WR50UT4212, WR43UX4210, WR24HX2210, WR75UX4200, WR40FT2019, WR55UX4210, WR65UX4019, WR50UT4009, WR55UT4009, WR75UT4210, WR58UX4019, WR65UC4139, WR65UX4210, WR70UT4210, WR50UC4139, WR65UT4210, WR43UT4009, WR43UX4019, WR24HT2200, WR24HX2200, WR43FT2019, WR32HT2019, WR55UT4210, WR75UX4200, WR55UX4019, WR40FX2019, WR58UC4139, WR24HT2212)
<b>Power Supply</b>	2 x 1.5V AAA Alkaline Batteries
<b>Product Dimensions</b>	4 x 1.2 x 0.5 inches
<b>Item Weight</b>	1.48 ounces
<b>Special Feature</b>	Pre-Programmed (No pairing required)
<b>Color</b>	Black

## WARRANTY AND SUPPORT

For any questions or assistance regarding your ZdalaMit Replacement Remote Control, please contact the seller or manufacturer directly. While specific warranty details are not provided in this manual, customer support is available to address any queries you may have.

*Please retain this manual for future reference.*