

NKF NS-RC4NA-14

NKF NS-RC4NA-14 Remote Control User Manual

For Insignia LED TVs

1. INTRODUCTION

This manual provides instructions for the NKF NS-RC4NA-14 replacement remote control, designed for use with various Insignia LED TV models. This remote requires no programming or pairing; simply install batteries to begin operation.

2. SETUP AND BATTERY INSTALLATION

The NS-RC4NA-14 remote control operates on two AAA alkaline batteries (not included).

Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

For product support
Go to: www.insigniaproducts.com
Or call: USA/Canada Market 877.467.4289
Mexico Market 01.800.926.3000



Figure 1: Rear view of the remote with the battery compartment open, illustrating where to insert AAA batteries.





Figure 2: Rear view of the remote with the battery compartment securely closed.

3. OPERATING THE REMOTE CONTROL

The NS-RC4NA-14 remote control provides full functionality for your compatible Insignia TV. Below is a description of the main buttons and their functions.



Figure 3: Front view of the NS-RC4NA-14 remote control, displaying all functional buttons.

Button Functions:

Button	Function
POWER ()	Turns the TV on or off.
INPUT	Selects the video input source (e.g., HDMI, AV).
Number Pad (0-9)	Directly selects TV channels.
-	Used for entering sub-channels (e.g., 7-1).
RECALL (↺)	Switches between the current and previously viewed channels.
MENU	Opens the TV's main menu.
Navigation Arrows (▲ ◀ ▼ ▶)	Navigates through menu options.
ENTER	Confirms a selection in the menu.
EXIT	Exits the current menu or on-screen display.
INFO*	Displays information about the current program or input.
ASPECT	Changes the screen aspect ratio.
CCD	Activates or deactivates Closed Captions.
VOL +/-	Adjusts the volume level.
MUTE	Mutes or unmutes the TV audio.
CH ^ / ˇ	Changes the TV channel up or down.
SLEEP	Sets a sleep timer for the TV.
FAVORITE	Accesses favorite channels list.
MTS/SAP	Selects Multi-channel Television Sound (MTS) or Secondary Audio Program (SAP) options.
PICTURE	Adjusts picture settings (e.g., brightness, contrast).
AUDIO	Adjusts audio settings (e.g., sound mode).
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next)	Controls media playback for compatible devices or TV functions.

4. COMPATIBLE INSIGNIA TV MODELS

This remote control is compatible with a wide range of Insignia LED TV models, including but not limited to:

- NS-19E200NA14, NS-24E200NA14, NS-28E200NA14
- NS-19ED200NA14, NS-24ED200NA14
- NS-32D200NA14, NS-32D201NA14
- NS-22E400NA14, NS-24E400NA14, NS-32E400NA14

- NS-39E400NA14, NS-39D400NA14, NS-46D400NA14, NS-50D400NA14
- NS-39L400NA14, NS-46L400NA14, NS-50L400NA14
- NS-46E440NA14, NS-19E310A13, NS-50E440NA14
- NS-55D440NA14, NS-50L440NA14
- NS-32E830N14, NS-39E850N14, NS-46E860N14, NS-50E860N14
- NS-39D310NA15, NS-24D510NA15, NS-50D40SNA14

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Replace batteries when the remote's responsiveness decreases.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure the remote is pointed directly at the TV's sensor.
- **Intermittent operation:**
 - This may indicate low battery power. Replace batteries.
 - Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the remote's signal.

7. SPECIFICATIONS

- **Model Number:** NS-RC4NA-14
- **Dimensions:** 6.5 x 2 x 0.63 inches (approximately)
- **Item Weight:** 2.64 ounces (approximately)
- **Batteries Required:** 2 x AAA (Alkaline recommended, not included)
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Compatible Devices:** Insignia Televisions

8. SUPPORT INFORMATION

For product support regarding your Insignia TV, please refer to the official Insignia product support channels:

- **Website:** www.insigniaproducts.com
- **US & Canada Toll-Free:** 1-877-467-4289
- **Mexico Toll-Free:** 01-800-926-3000

If you have questions specifically about this NKF replacement remote control, please contact your seller for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question