



[Manuals.plus](#) /

› [Paw Patrol](#) /

› Paw Patrol Ultimate City Transforming Tower Instruction Manual

Paw Patrol 6060234

Paw Patrol Ultimate City Transforming Tower Instruction Manual

Model: 6060234

Brand: Paw Patrol

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Paw Patrol Ultimate City Transforming Tower. This 3-foot-tall playset is designed to bring the Adventure City headquarters to life with various interactive features.



Figure 1: The Paw Patrol Ultimate City Transforming Tower with included figures and vehicle.

WHAT'S IN THE BOX

Verify that all components are present before beginning assembly:

- 1 Ultimate City Tower
- 1 Vehicle (Chase's Cruiser)
- 6 Paw Patrol Figures
- 1 Clip-on Backpack
- 3 Projectiles
- 3 Sticker Sheets
- 1 Instruction Sheet (this document)

SETUP

Assembly

Adult assembly is required. Follow the detailed diagrams and instructions provided in the included instruction sheet for proper assembly of the tower components.

Battery Installation

The Paw Patrol Ultimate City Transforming Tower requires 5 AAA batteries (not included) for its lights and

sounds features. Locate the battery compartment, typically on the base or main column of the tower. Use a screwdriver to open the compartment, insert the batteries with correct polarity, and secure the cover.

OPERATING INSTRUCTIONS

Transforming Rescue Ramp

1. To extend the rescue ramp, locate and pull the handle down. The front panel will open, and the ramp will extend.
2. Place a vehicle (such as Chase's Cruiser) at the top of the extended ramp.
3. Launch the vehicle down the ramp. As the vehicle rolls, the strips on the ramp will light up.



Figure 2: Children engaging with the extended transforming rescue ramp.

Command Center Lights and Sounds

1. At the top of the tower, press the designated button to activate sound effects and tower lights.
2. Rotate the holographic city map (pup selector) to illuminate different sections and hear character phrases, allowing you to choose a pup for the mission.



Figure 3: The interactive command center with lights and pup figures.

Pup Elevator

1. Place a Paw Patrol figure onto the pup elevator platform.
2. Use the mechanism to raise the elevator, transporting the pup to the command center level.

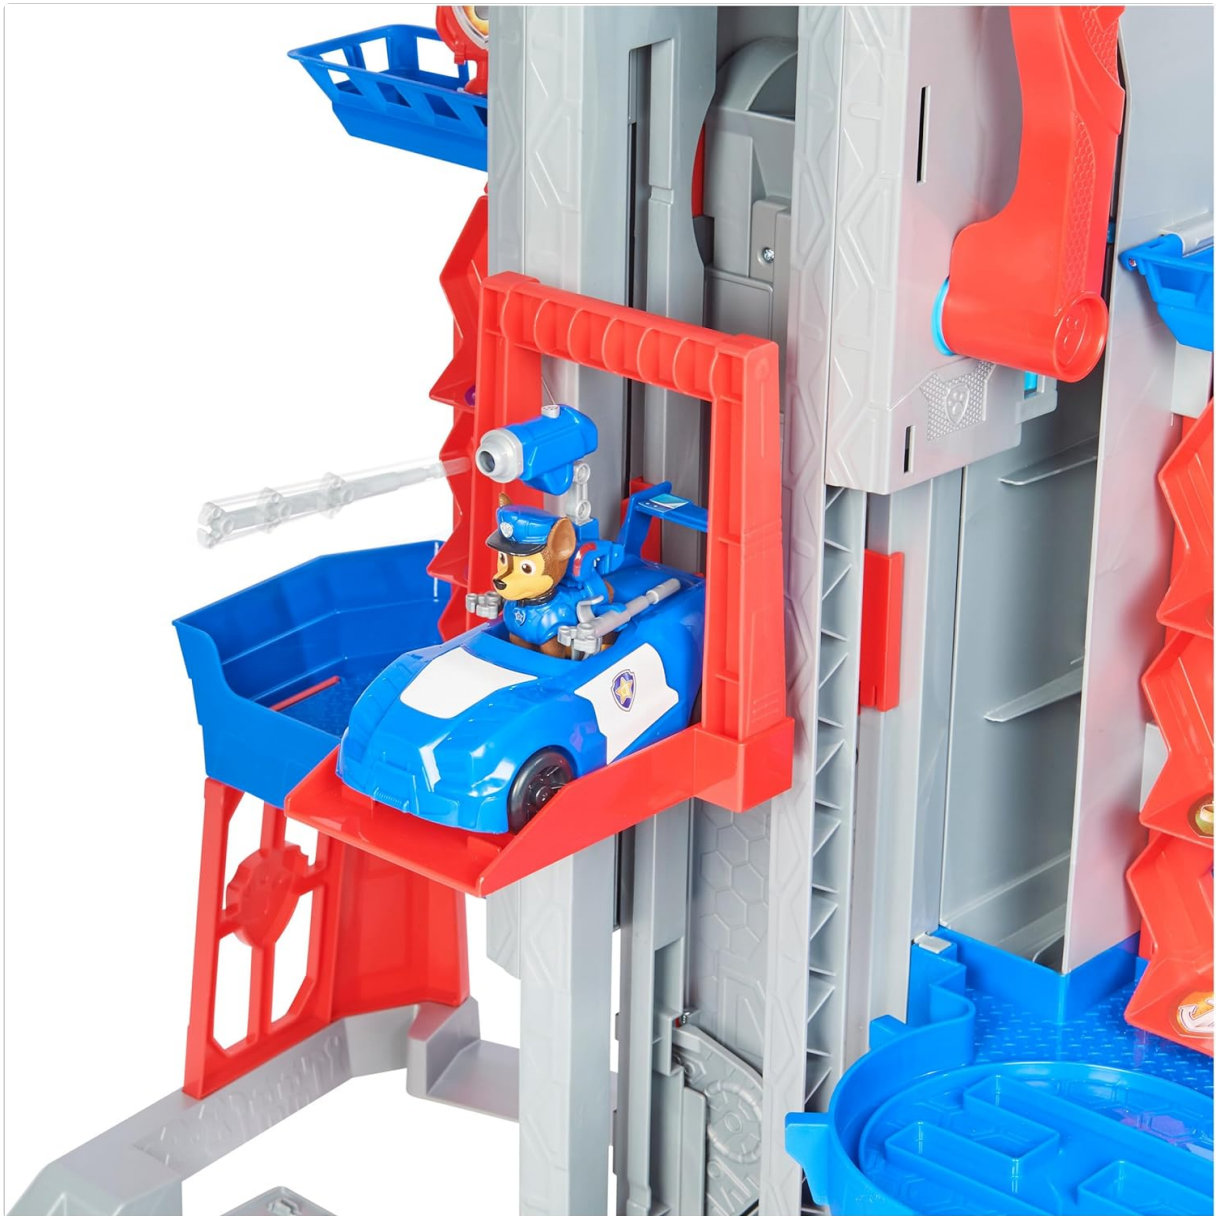


Figure 4: Chase's cruiser being raised by the tower's elevator.

Gear-Up Area and Projectile Launcher

1. Guide a pup figure down the slide to the gear-up area.
2. Attach the clip-on backpack to Chase's figure.
3. Press the button on the backpack to launch projectiles.

Zip Line

Attach a pup figure to the zip line mechanism located on the tower. Release the figure to send them zipping down to the lower levels for quick deployment.

Vehicle Launcher

At the base of the tower, place Chase's Cruiser into the vehicle bay. Activate the launcher to send the vehicle speeding out for rescue missions.

Video 1: Overview of the Paw Patrol Ultimate City Tower features and play. (Source: TTPM)

MAINTENANCE

To ensure the longevity of your Paw Patrol Ultimate City Transforming Tower, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the tower and figures with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the playset in a cool, dry place away from direct sunlight. The tower can be partially folded for more compact storage.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

If you encounter any issues with your Paw Patrol Ultimate City Transforming Tower, refer to the following common solutions:

- **No Lights/Sounds:** Ensure batteries are correctly installed and are not depleted. Replace with fresh AAA batteries if necessary. Check the power switch on the tower.
- **Ramp/Elevator Malfunction:** Verify that no small objects are obstructing the moving parts. Ensure all parts are correctly assembled according to the instruction sheet.
- **Figures Not Staying in Place:** Confirm figures are correctly positioned in their designated slots or attachments.

SPECIFICATIONS

Product Dimensions	19.92 x 8.19 x 35.88 inches
Item Weight	16.19 pounds
Item Model Number	6060234
Manufacturer Recommended Age	36 months - 9 years
Batteries Required	5 AAA batteries (not included)
Manufacturer	Spin Master

WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For detailed warranty information, product support, or to contact customer service, please refer to the manufacturer's official website or the contact information provided on the product packaging.