

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEXiBOOK](#) /

› [LEXIBOOK CR310UNI Unicorn Drawing Projector Instruction Manual](#)

LEXiBOOK CR310UNI

LEXIBOOK CR310UNI Unicorn Drawing Projector

Instruction Manual

IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using the LEXIBOOK CR310UNI Unicorn Drawing Projector. Keep these instructions for future reference. This product is intended for children aged 3 years and up. Adult supervision is recommended during use, especially during battery installation and initial setup.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries must be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries if the product is not to be used for an extended period.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not short-circuit the supply terminals.

PRODUCT OVERVIEW

The LEXIBOOK CR310UNI Unicorn Drawing Projector is a creative toy designed to help children draw their favorite characters with ease. It features a luminous screen, 10 drawing templates, 4 stamps, and a pen. The projector is portable and can store all its accessories.

Components Included:

- 1 x Unicorn Drawing Projector Unit
- 10 x Drawing Templates
- 4 x Stamps (or ink pads)
- 1 x Drawing Pen
- 10 x Pieces of Paper (for initial use)

SETUP

1. Battery Installation

The projector requires 3 x AA/LR6 1.5V batteries (not included).

1. Locate the battery compartment on the underside of the projector.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AA/LR6 batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Preparing for Drawing

Follow these steps to prepare the projector for use:

1. Open the projector's top frame to reveal the drawing surface.
2. Place a piece of paper onto the drawing surface.



Image: The projector is shown open, with hands guiding a piece of paper onto the illuminated drawing surface.

3. Select one of the 10 drawing templates. Place the chosen template on top of the paper, aligning it with the drawing area.



Image: A hand is shown carefully placing a drawing template onto the projector's screen, over the paper.

OPERATING INSTRUCTIONS

1. Turning On the Light

Locate the power button, usually on the side or front of the projector. Press it to turn on the luminous screen. The light will project the image from the template onto your paper, making it easy to trace.

2. Drawing with Templates

1. Once the template is in place and the light is on, use the provided drawing pen to trace the lines of the projected image onto your paper.



Image: A hand holds the drawing pen, tracing the outline of a unicorn image projected onto the paper on the screen.

2. After tracing, you can remove the template and color your drawing.

3. Using the Stamps

The projector includes 4 stamps to add extra details to your drawings.

1. Dip the stamp into an ink pad (if provided, or use your own).
2. Press the stamp gently onto your drawing to add decorative elements.



Image: A hand is shown pressing a small stamp onto the paper on the projector screen, adding a small detail to the drawing.

4. Finishing Your Session

When you are finished drawing, turn off the projector light by pressing the power button. Remove your drawing and store all accessories inside the projector unit for easy transport and organization.



Image: The projector is shown with its integrated handle, demonstrating its portability.

MAINTENANCE

Cleaning

To clean the projector, wipe the surfaces with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water. If necessary, a slightly damp cloth can be used, followed by a dry cloth.

Storage

The projector is designed to store all its accessories (templates, pen, stamps) inside. Close the projector securely after use. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for an extended period.

TROUBLESHOOTING

• Projector light does not turn on:

Check if the batteries are inserted correctly with the correct polarity. Ensure the batteries are not exhausted and replace them if necessary.

• Projected image is dim or unclear:

Ensure the room lighting is not too bright. Replace batteries if the light appears weak. Make sure

the template is placed flat on the screen.

- **Pen does not draw:**

Check if the pen has ink. If it is a felt-tip pen, ensure the cap was replaced after previous use to prevent drying.

SPECIFICATIONS

Model Number	CR310UNI
Product Dimensions	12.01 x 10.43 x 2.17 inches (30.5 x 26.5 x 5.5 cm)
Item Weight	1.59 pounds (0.72 kg)
Recommended Age	3 years and up
Batteries Required	3 x AA/LR6 1.5V (not included)
Manufacturer	Lexibook

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 2-year warranty. It has been designed and developed in Europe and manufactured in China. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty inquiries, please refer to the contact information provided on the product packaging or visit the official LEXiBOOK website for support details.