

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Faber](#) /
- › [Faber FFSD 6PR 8S Ace Dishwasher User Manual](#)

Faber FFSD 6PR 8S Ace

Faber FFSD 6PR 8S Ace Dishwasher User Manual

Model: FFSD 6PR 8S Ace

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Faber FFSD 6PR 8S Ace 8 Place Dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference. This dishwasher is designed for household use to clean dishes, cutlery, and other kitchenware.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating or when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Sharp items should be loaded with points down to prevent injury.
- The Electronic Aqua Stop feature helps prevent water leakage.

3. PACKAGE CONTENTS

Verify that all components are present in the packaging:

- 1 x Faber FFSD 6PR 8S Ace Dishwasher
- 2 x Water Pipes (Inlet and Outlet)
- 1 x User Manual
- 1 x Warranty Card

4. PRODUCT FEATURES

The Faber FFSD 6PR 8S Ace Dishwasher offers a range of features designed for efficient and convenient dishwashing:

- **Capacity:** 8 Place Settings, suitable for small to medium households. Each setting includes a dinner plate, dessert plate, soup bowl, glass, tea cup with saucer, knife, spoons, and fork.
- **6 Wash Programs:** Intensive, Eco, Glass, 90 Minutes, Rapid, and Self Clean.
- **Energy Efficiency:** A++ rated for performance, ensuring lower energy consumption.
- **Water Consumption:** Highly water-efficient, using only 8 liters per cycle.
- **Stain Removal:** Effectively removes oil, grease, and masala stains.
- **Utensil Compatibility:** Works with various utensil types, including stainless steel and ceramic.
- **Adjustable Upper Rack:** Maximizes space and flexibility for different sized items.
- **Dedicated Cutlery Tray:** Provides organized cleaning for cutlery.
- **Salt & Rinse Aid Indicators:** Alerts you when to refill for optimal cleaning.
- **Electronic Aqua Stop:** Prevents water leakage and protects the appliance.



Figure 4.1: Overview of the 6 wash programs available on the Faber FFSD 6PR 8S Ace Dishwasher.

5. INSTALLATION

The Faber FFSD 6PR 8S Ace is a freestanding countertop dishwasher. Follow these general guidelines for installation:

- Place the dishwasher on a stable, level surface.
- Ensure adequate space around the unit for ventilation and door opening.
- Connect the inlet hose to a cold water supply and the outlet hose to a drain.
- Plug the power cord into a grounded electrical outlet.



Figure 5.1: Dimensions of the Faber FFSD 6PR 8S Ace Dishwasher for installation planning.

6. OPERATING INSTRUCTIONS

6.1. Loading the Dishwasher

Proper loading ensures optimal cleaning performance. Remove large food particles before loading. The dishwasher features an adjustable upper rack and a dedicated cutlery tray.



Figure 6.1: Example of a loaded dishwasher interior, showing plates and pots arranged for washing.

Your browser does not support the video tag. This video demonstrates how to effectively load various utensils into the Faber FFSD 6PR 8S Ace Dishwasher, including the use of the adjustable racks and cutlery tray.

Video 6.1: Demonstration of loading utensils into the dishwasher.

Your browser does not support the video tag. This video illustrates the functionality of the adjustable racks within the Faber FFSD 6PR 8S Ace Dishwasher, showing how to modify them for different item sizes.

Video 6.2: Demonstration of adjusting the dishwasher racks.

6.2. Adding Detergent and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. If using rinse aid, fill the rinse aid dispenser to the indicated level. Close both dispensers securely.



Figure 6.2: The control panel of the Faber FFSD 6PR 8S Ace Dishwasher, showing program selection and indicators.

Your browser does not support the video tag. This video demonstrates the correct procedure for adding detergent to the dispenser of the Faber FFSD 6PR 8S Ace Dishwasher.

Video 6.3: Demonstration of adding detergent to the dishwasher.

6.3. Selecting a Wash Program

Choose the appropriate wash program based on the soil level and type of dishes:

- **Intensive:** For heavily soiled items, pots, pans, and bakeware with dried-on food.
- **Eco:** An energy and water-saving program for normally soiled daily dishes.
- **Glass:** A gentle wash cycle for delicate glassware and lightly soiled items.
- **90 Minutes:** A time-efficient program for moderately soiled dishes.
- **Rapid:** A quick wash for lightly soiled dishes that do not require drying.
- **Self Clean:** A program designed to clean the interior of the dishwasher itself.

6.4. Starting the Dishwasher

After loading and adding detergent, close the dishwasher door firmly. Select your desired wash program using the control panel buttons. Press the Start/Pause button to begin the cycle. The display will show the remaining time.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Filter Cleaning:** Regularly check and clean the filter system at the bottom of the dishwasher to remove food debris.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth.
- **Interior Cleaning:** Use the 'Self Clean' program periodically to maintain internal hygiene.
- **Salt and Rinse Aid:** Monitor the indicator lights and refill dishwasher salt and rinse aid as needed.

Your browser does not support the video tag. This video highlights the cleaning performance of the Faber FFSD 6PR 8S Ace Dishwasher on various types of stains and dishes.

Video 7.1: Demonstration of the dishwasher's cleaning effectiveness.

8. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common troubleshooting tips:

- **Dishwasher not starting:** Check if the power cord is securely plugged in and the door is fully closed.
- **Dishes not clean:** Ensure dishes are loaded correctly, not blocking spray arms. Check detergent levels and select an appropriate wash program. Clean the filters.
- **Water not draining:** Check for blockages in the drain hose or filter.
- **Error codes:** Consult the full user manual for specific error code meanings and solutions.

For persistent problems, contact Faber customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	Faber
Model Name	FFSD 6PR 8S Ace Black
Colour	Black
Capacity	8 Place Settings
Wash Programs	6 (Intensive, Eco, Glass, 90min, Rapid, Self Clean)
Water Consumption	8 Liters/cycle
Energy Rating	A++
Noise Level	49 Decibels

Feature	Specification
Material	Stainless Steel
Form Factor	Freestanding
Item Weight	25 kg
Product Dimensions (DxWxH)	50 x 55 x 60 Centimeters
Voltage	220V
Special Feature	Adjustable shelves

10. WARRANTY AND SUPPORT

Your Faber FFSD 6PR 8S Ace Dishwasher comes with the following warranty:

- **Product Warranty:** 2-Year Comprehensive Warranty
- **Cavity Warranty:** 5-Year Warranty on Cavity

Please retain your purchase receipt and warranty card for any service claims. For technical assistance or service requests, please refer to the contact information provided on your warranty card or visit the official Faber website.